## INSTALLALATION INSTRUCTIONS - ADJUSTABLE GLASS FLOOR GUIDE

(5)

## ≚ KROWNLAB<sup>®</sup>

Caution: Door panel may not yet be fully constrained in its travel.

- (1) With the door panel in the desired closed position, mark the leading edge of the door panel on the floor.
- (2) With the door panel in the desired open position, mark the trailing edge of the door panel on the floor.
- (3) Minimum required door panel overlap is 2". Adjust door travel if needed.
- Confirm that the gap between floor and door panel is sufficient for the floor guide in the overlap area. Make system height adjustments if needed as outlined in the main installation instruction document.
- Some Krownlab systems allow for door panel height adjustment after floor guide install. Refer to the main installation instruction document.
- (5) With the door panel hanging plumb, mark the door panel centerline.
- (6) Temporarily move the door panel beyond the desired fully open position, revealing the overlap area for floor guide install.
- (2) Mark, pilot drill and install the floor guide in the overlap area along the door panel centerline.
- Dependant upon wall condition, floor guide may need to be installed in the door opening.
- Provided fasteners and expansion anchors are not suitable for all types of floors. Caulking or sealing of floor penetrations may be required by code.
- If installation does not allow the door panel to be moved beyond the overlap area, carefully tilt the door panel away from the wall and first install floor guide mount plate only. Then with door panel in plumb position, slide the floor guide onto mount plate and door panel and secure set screws. Ensure that floor guide location provides access to both guide mount plate set screws after installation.
- (8) Adjust the floor guide to the thickness of the door panel using the provided 2mm Allen wrench. Ensure that the door panel remains plumb.



