GLASS DOOR PANELS

- (!) Reference the Kor Product Specifications document to confirm glass panel hole specifications.
- (!) All gasket and bushing components must be installed as shown.
- (1) Reference the relevant configuration below.
- (2) Install all components as shown without tightening fasteners all the way.
- (3) Ensure that all parts are aligned properly.
- 4) Tighten large Mounting Screws to 84 inch-lb. (7 ft-lb.).
- (5) Softly tighten small Set Screws to 30 inch-lb. (2.5 ft-lb.).

PLASTIC GASKET RUBBER BUSHING PLASTIC GASKET COUNTER-SUNK WASHER PLASTIC GASKET RUBBER BUSHING PLASTIC GASKET RUBBER BUSHING PLASTIC GASKET RUBBER BUSHING PLASTIC GASKET RUBBER BUSHING PLASTIC GASKET