


GLASS MOUNT: FIXED GLASS

- (!) Reference the Kor Product Specifications document to confirm glass hole specifications.
- (!) All gasket and bushing components must be installed as shown.
- ① Install all components as shown without tightening fasteners all the way.
- ② Ensure that all parts are aligned properly.
- ③ Tighten Mounting Screws to 84 inch-lb. (7 ft-lb.).

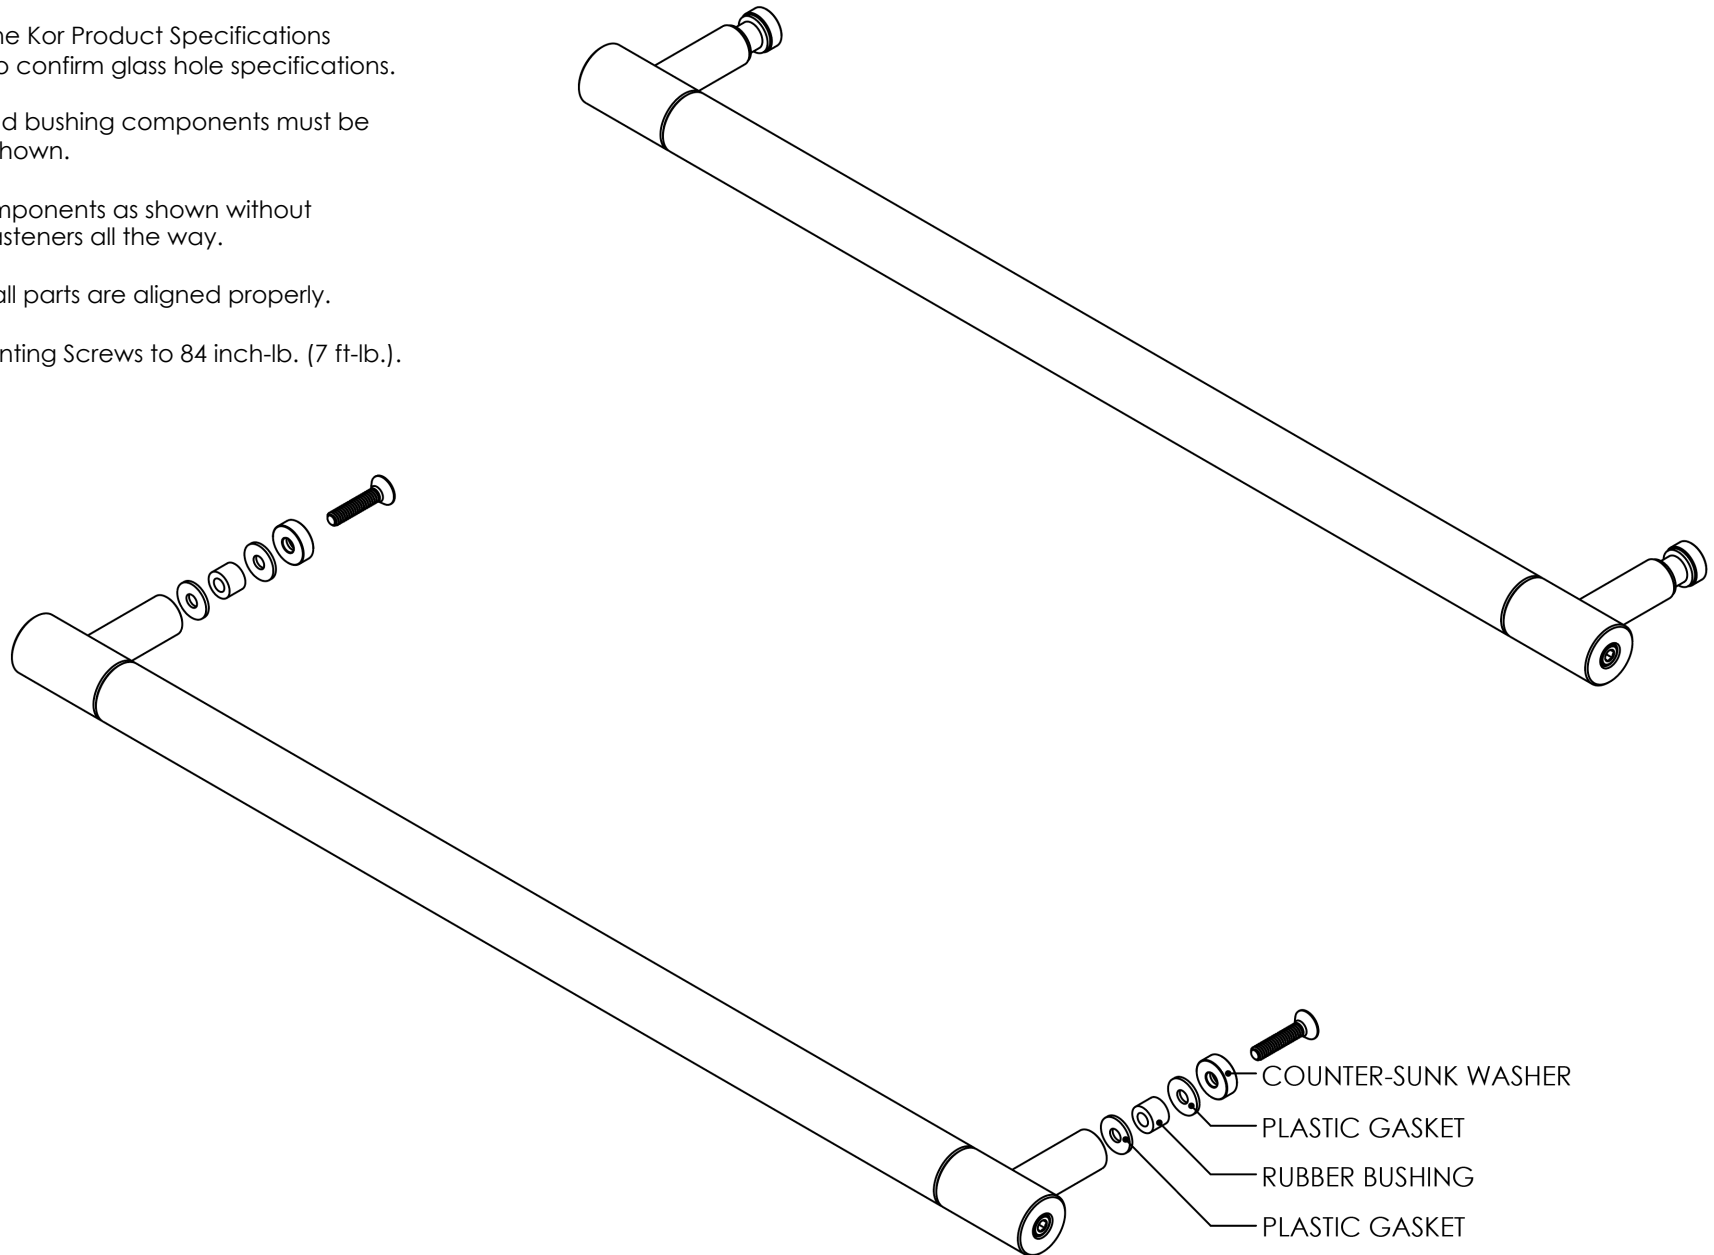

KOR TOWEL BAR - INSTALLATION INSTRUCTIONS

GLASS MOUNT: SLIDING GLASS DOOR

- (!) Reference the Kor Product Specifications document to confirm glass hole specifications.
- (!) All gasket and bushing components must be installed as shown.
- ① Install Threaded Insert flush with Stand-off.
- ② Install All-thread Fastener fully into Kor Knob.
- ③ Install all remaining components as shown without tightening fasteners all the way, ensuring that the gasket side of the Gasket-Backed Washer is against the glass.
- ④ Ensure that all parts are aligned properly.
- ⑤ Tighten Mounting Screw to 84 inch-lb. (7 ft-lb.).
- ⑥ Softly tighten Kor Knob until firmly snug.

