
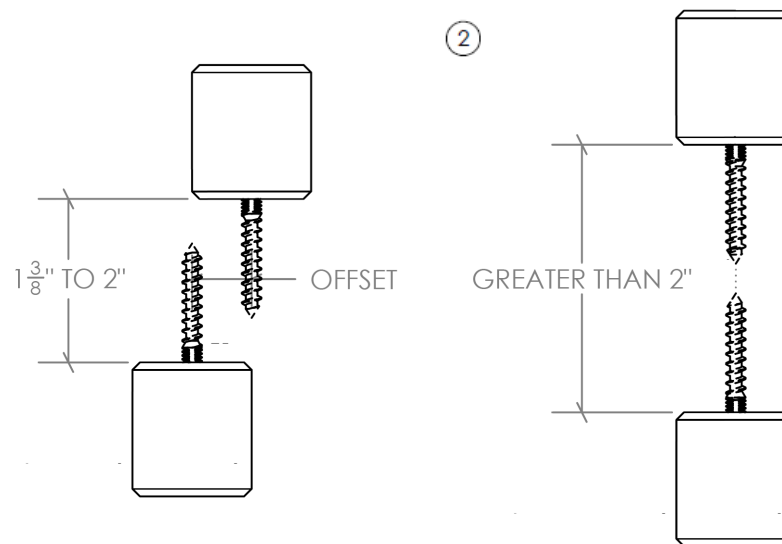


WOOD DOOR PANELS

- ① Install threaded studs fully into each knob.
- ② Determine if the knobs can be installed inline or offset based on door thickness and the length of studs in each knob.
- ③ Prepare the door by drilling pilot holes at desired locations.
- ④ Install knob assembly onto door by hand until firmly snug. Tools can damage surface!
- ⑤ Repeat for other side.

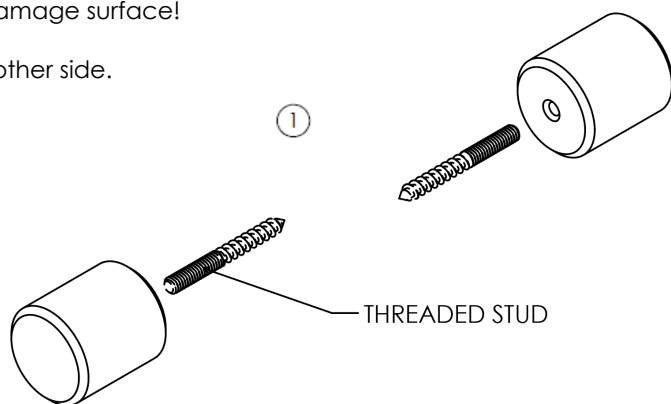

GLASS DOOR PANELS

- (!) Reference the Kor Product Specifications document to confirm hole specifications.
- (!) All gasket and bushing components must be installed as shown.
- ① Install all components as shown without tightening fasteners all the way.
- ② Ensure the rubber side of the Gasket-backed Washer is against the glass.
- ③ Ensure that all parts are aligned properly.
- ④ Softly tighten Kor Knobs by hand until firmly snug.

