


## WOOD PANELS

- (!) Prepare the door by drilling holes at desired locations based on product hole spacing.
- ① Reference the relevant configuration on the right.
  - ② Install all components as shown without tightening fasteners all the way.
  - ③ Ensure all parts are lining up properly.
  - ④ Softly tighten large mounting screws to 48 inch-lbs (4 ft-lbs) or less to avoid crushing wood.
  - ⑤ Softly tighten small set screws to 30 inch-lbs (2.5 ft-lbs).

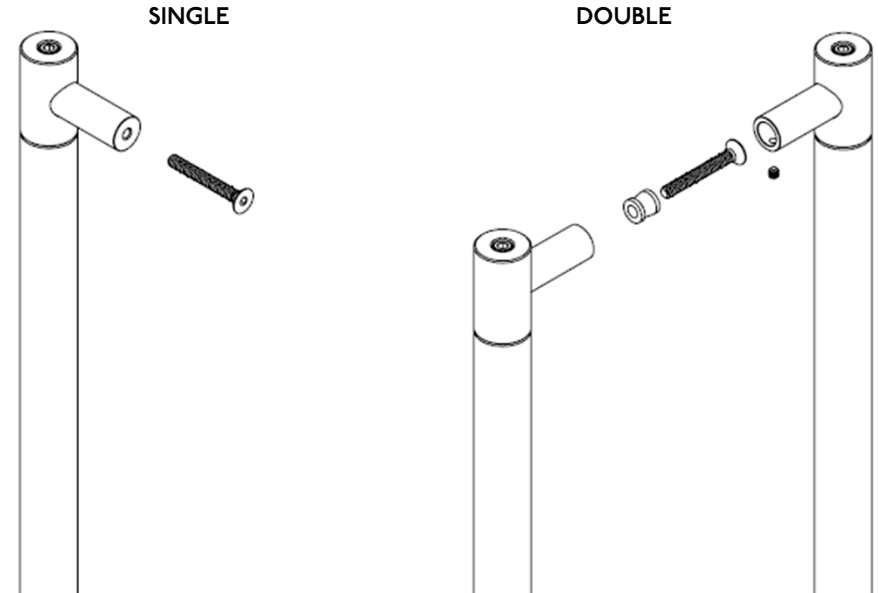

## GLASS PANELS

- (!) Reference the Inger Product Specifications document to confirm hole specifications.
- ① Reference the relevant configuration on the right.
  - ② Install all components as shown without tightening fasteners all the way.
- (!) The rubber bushings and plastic washers must be used with glass panels.
- ③ Ensure all parts are lining up properly.
  - ④ Tighten large mounting screws to 84 inch-lbs (7 ft-lbs).
  - ⑤ Softly tighten small set screws to 30 inch-lbs (2.5 ft-lbs).

