
₩ KROWNLAB

PDX - ORE

Sliding Door Hardware Installation Instructions RING

RING Pull Single sided Closed


- ① Drill a 2-1/8" diameter hole in desired location. (Minimum depth is 1/4")
- ② Drill pilot holes for screws.
- ③ Install RING as shown below.

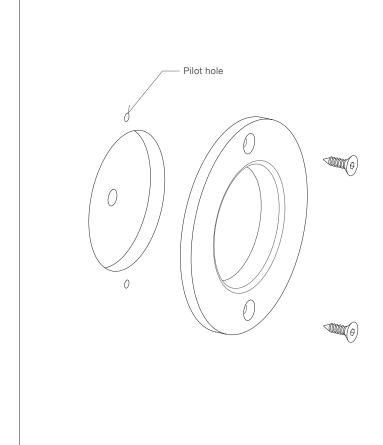

RING Pull Double sided Closed

① Drill a 2-1/8" diameter hole through panel in desired location. (Minimum panel thinkness is 3/4")


- ② Drill pilot holes for screws.
- ③ Install RING as shown below.

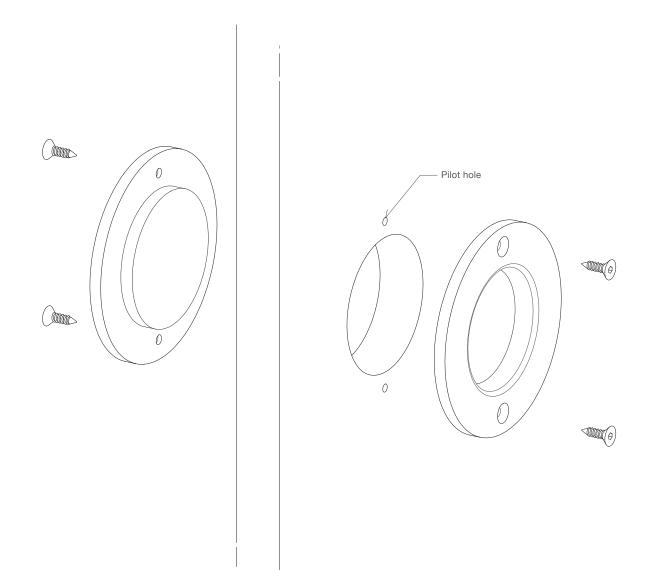

1

RING Pull Double sided Open


- ① Drill a 2-1/4" diameter hole through panel in desired location.
- ② Measure and cut the provided rubber insert to match thickness of door panel.
- ③ Install rubber insert inside of hole with seam facing up.
- ④ Drill pilot holes for screws.
- (5) Install RING as shown below.

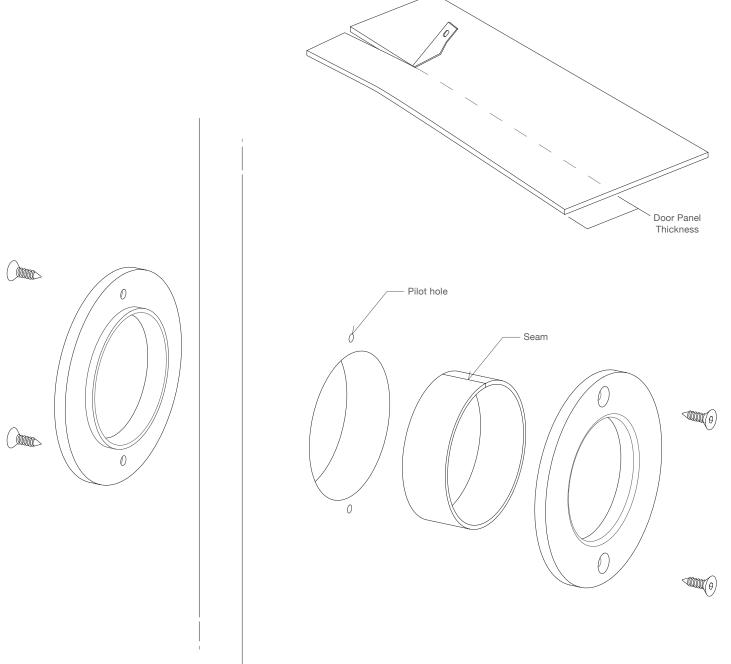


RING Pull Glass

Double sided Open

- ① Reference the Glass Panel Specification document to confirm drill hole locations.
- (2) Measure and cut the provided rubber insert to match thickness of door panel.
- ③ Install rubber insert inside of hole with seam facing up.
- ④ Install screws with included wrench, match screw length with panel thickness.
- 5 Install RING as shown below.

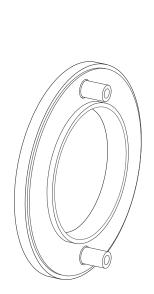

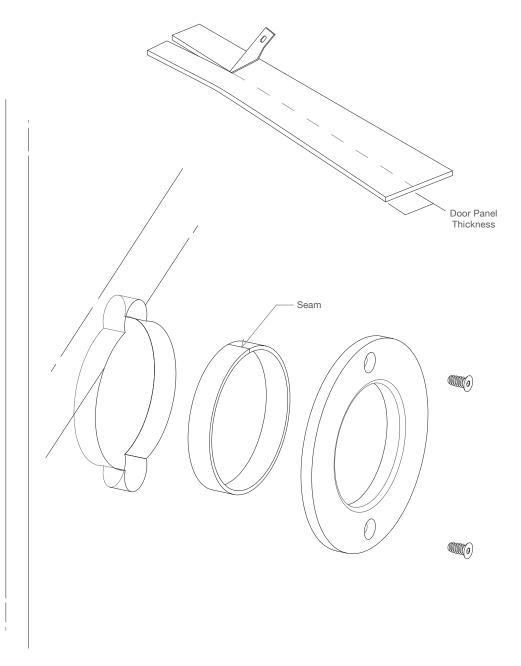



1

RING Pull Glass

Double sided Closed

- ① Reference the Glass Panel Specification document to confirm drill hole locations.
- (2) Measure and cut the provided rubber insert to match thickness of door panel.
- ③ Install rubber insert inside of hole.
- ④ Install screws with included wrench, match screw length with panel thickness.
- (5) Install RING as shown below.

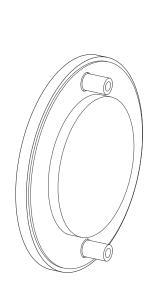

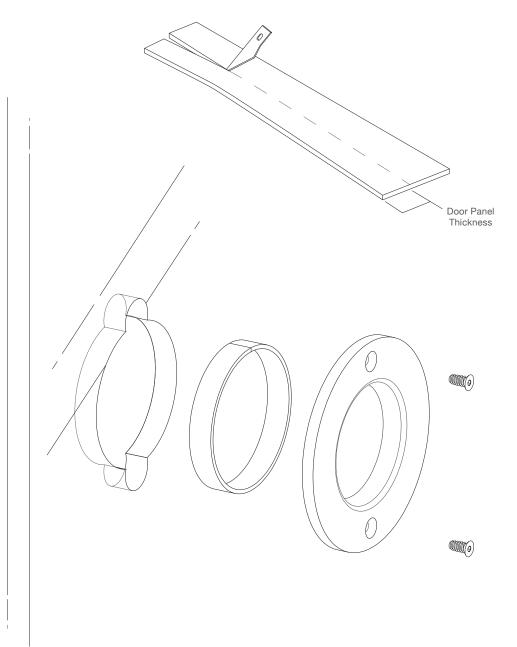

1