



KROWNLAB

PDX - ORE



Sliding Door Hardware
Installation Instructions
ROB ROY

Structural Information

For standard systems and most custom single door opening systems.



General Overview


- ▶ All Krown Lab sliding door hardware systems require the provided track fasteners be properly engaged in 3" of structural material. The wall or structure where your system will be mounted must be designed to support the weight specified for the system. See chart below.

System	Panel weight limit
ROB ROY	150 lbs

- ▶ Ensure that door panels are constructed with solid, structural material at the location of trolley attachments, bottom guide, and door pull(s) if used.
- ▶ Check with your contractor and/or local listings to confirm accordance with local building codes.
- ▶ For best results, and to ensure full compliance with local building codes and standards, seek qualified building professionals with a comprehensive understanding of relevant material properties and full building and site conditions.
- ▶ Refer to our Product Guide for product technical drawings and material care. Please review our Terms and Conditions before installing.

System Hardware


For standard systems and most custom single door opening systems.

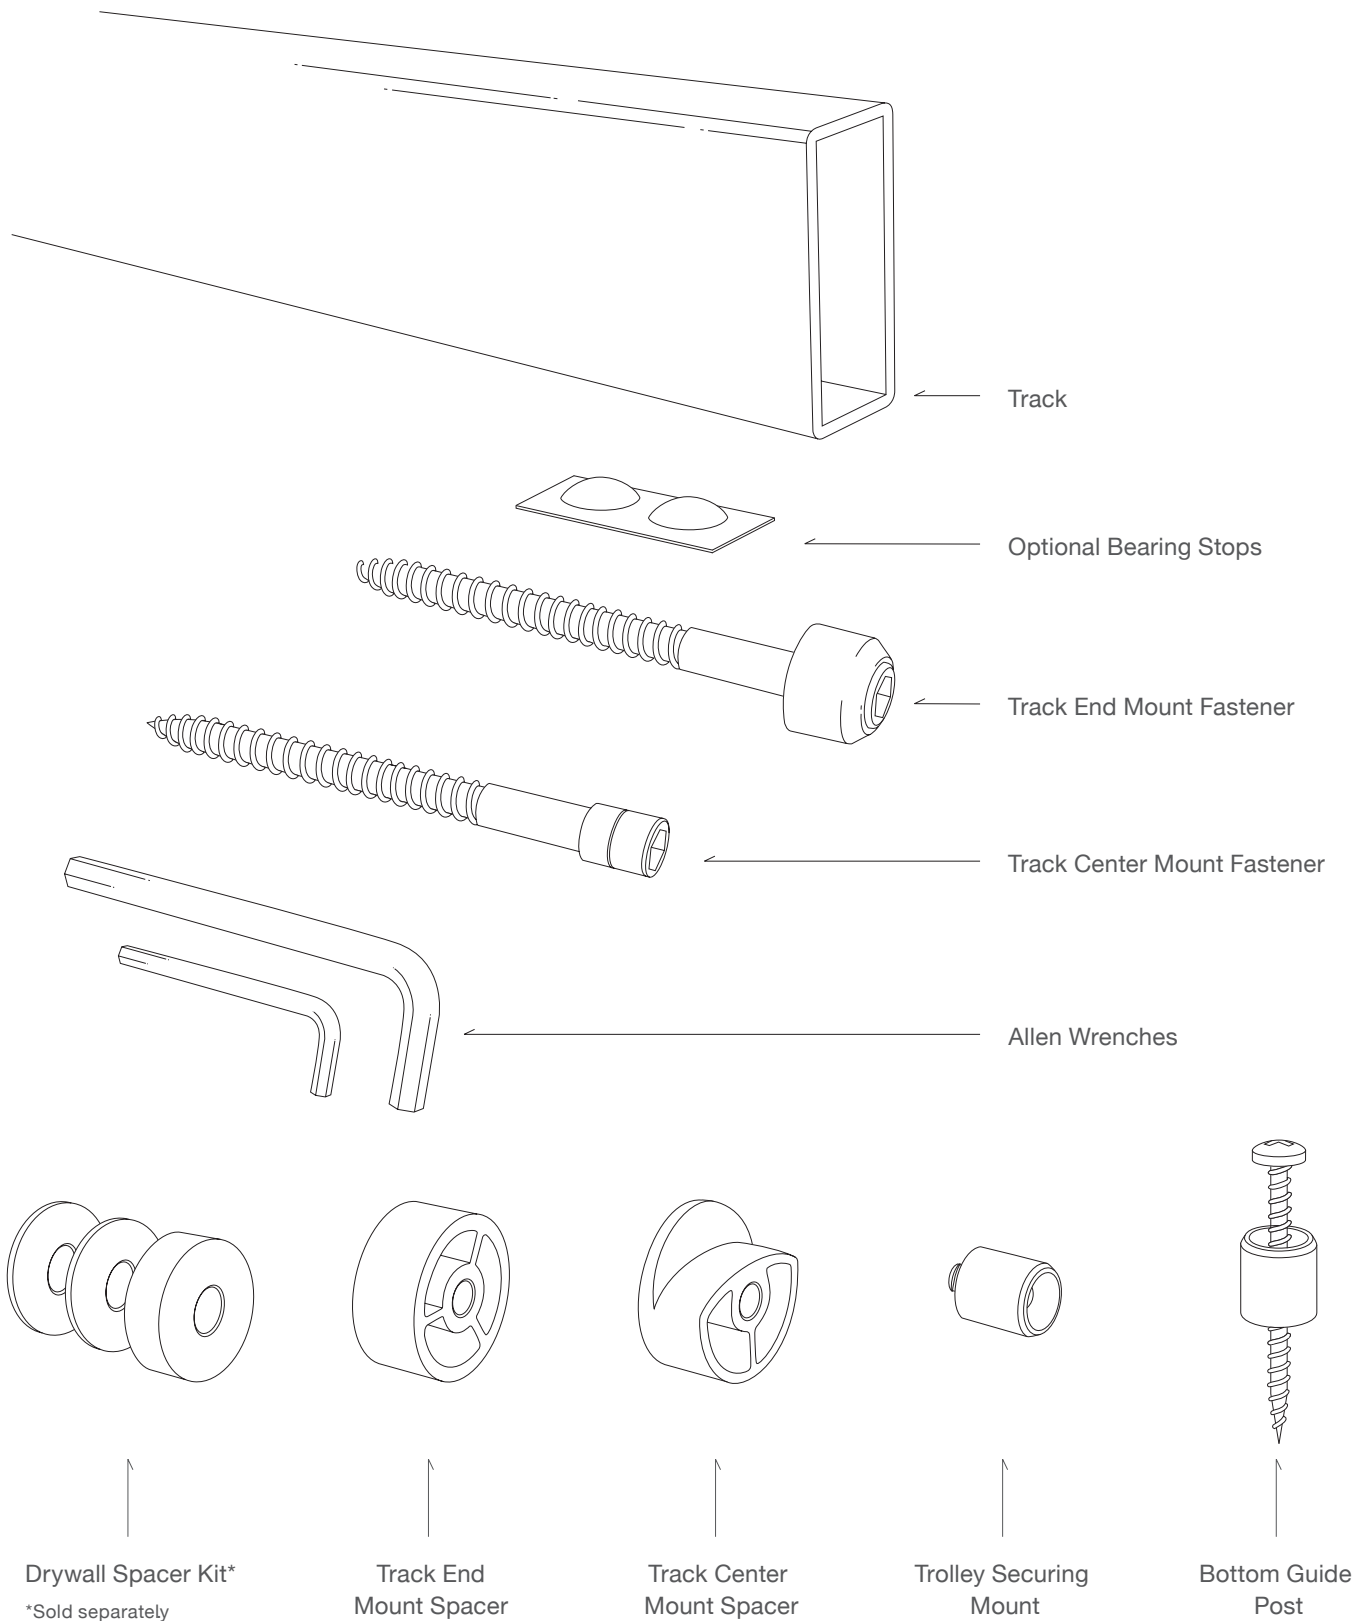

Track Installation

Determine track height

For standard systems and most custom single door opening systems.

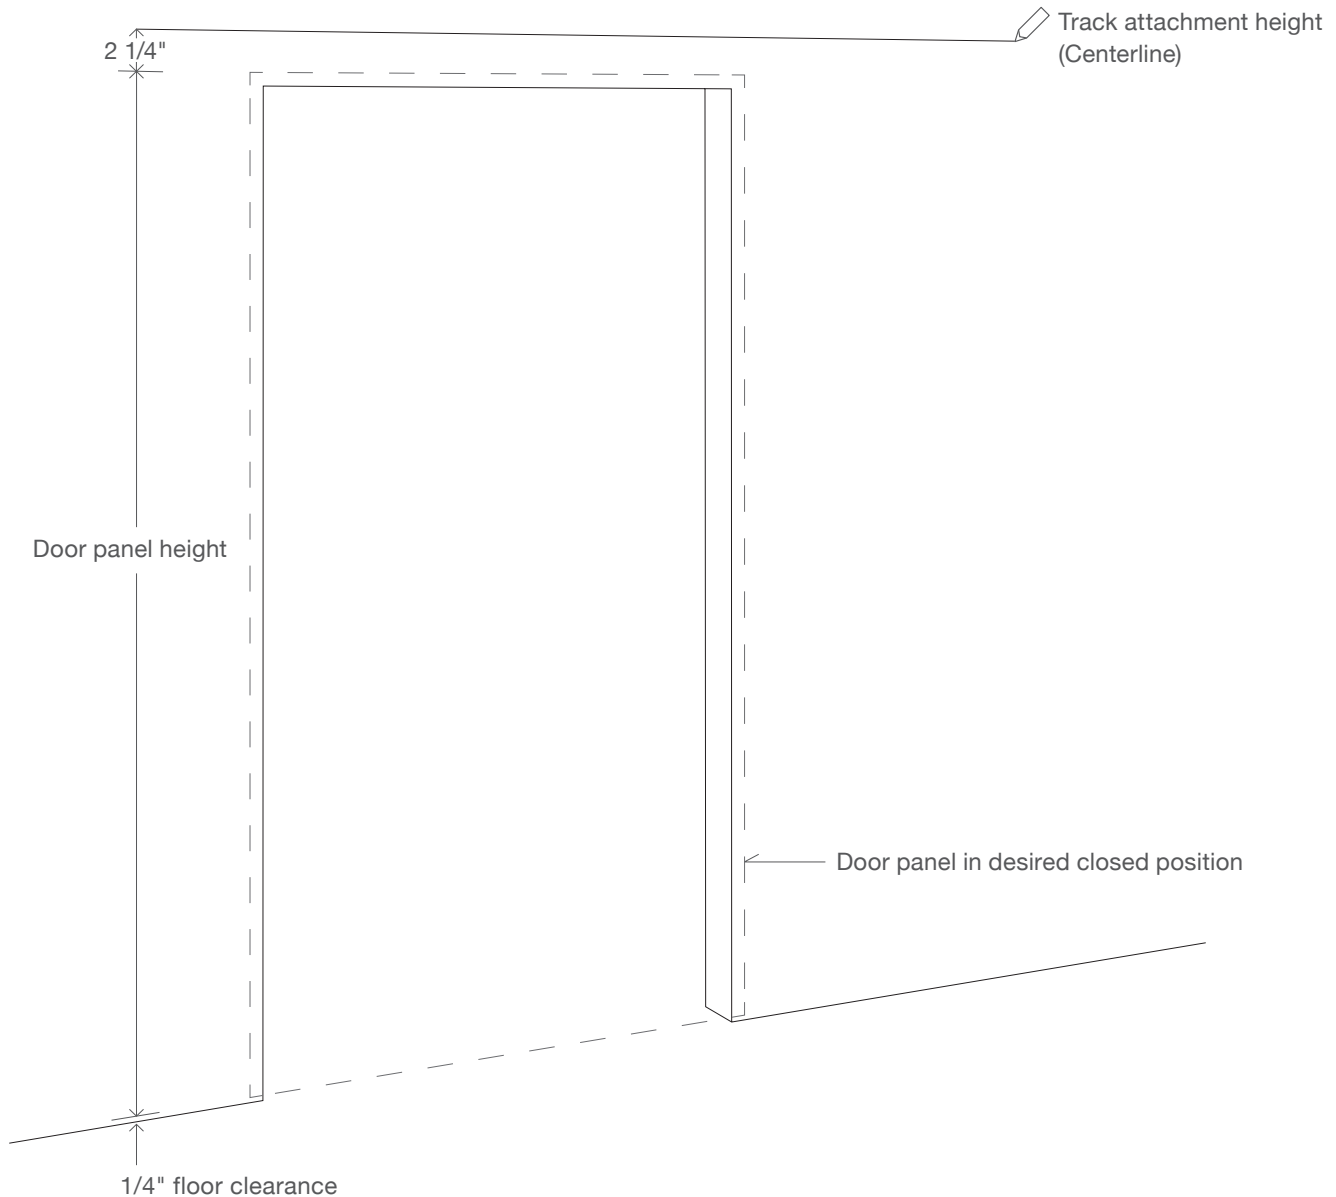

$$\text{Track attachment height} = \text{door panel height} + 2\text{-}1/2\text{"}^*$$


*If using Bottom Guide Track, add 5/8" to 3/4" to this dimension depending on your specific product.

- ① Measure and mark the height of your track attachments using the equation above.

Track Installation

Locate attachment points

Standard 70" track shown below.

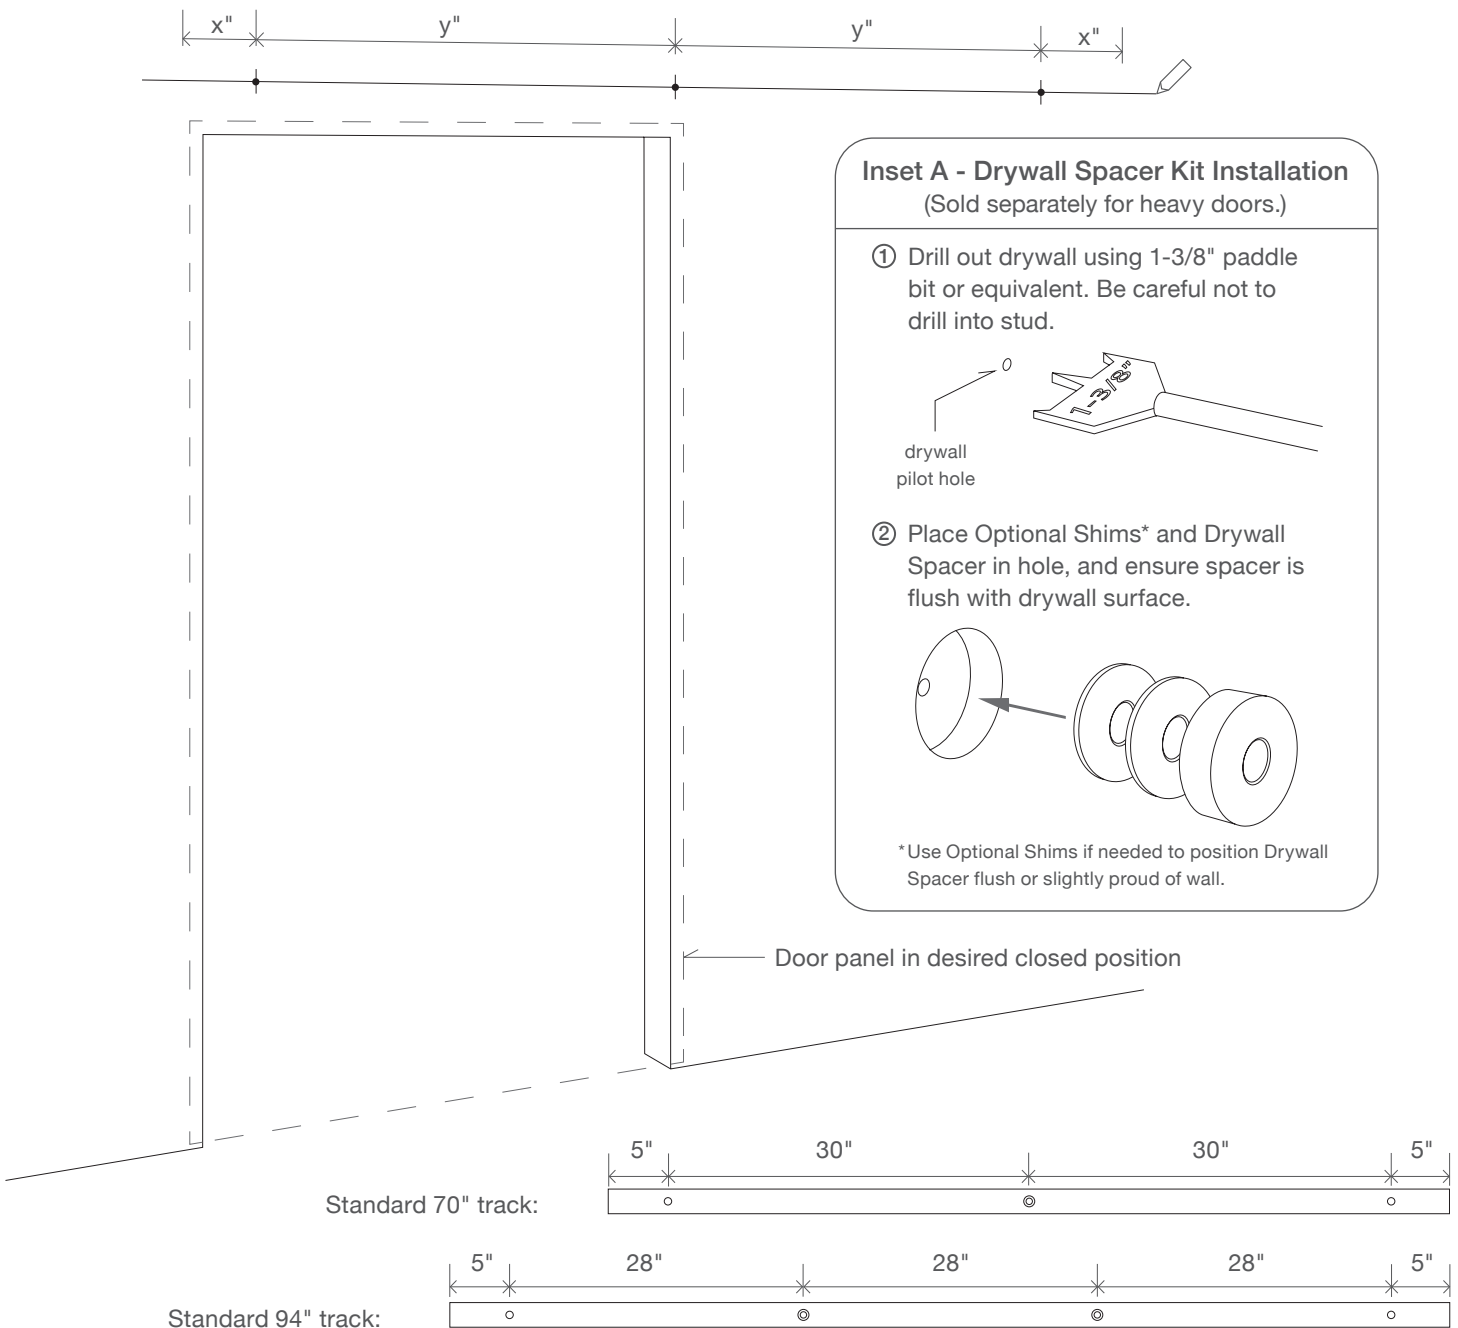


- ① Measure and mark locations for all track attachment points, referencing the applicable track drawings above. For custom length tracks reference your approved custom drawing.
- ② Drill small pilot hole in marked locations.
- ③ If installing Drywall Spacer Kits reference Inset A.
- ④ Drill full size pilot holes for track fasteners in pre-drilled locations.


Track Installation

Mount track to wall

① Install both End Mounts

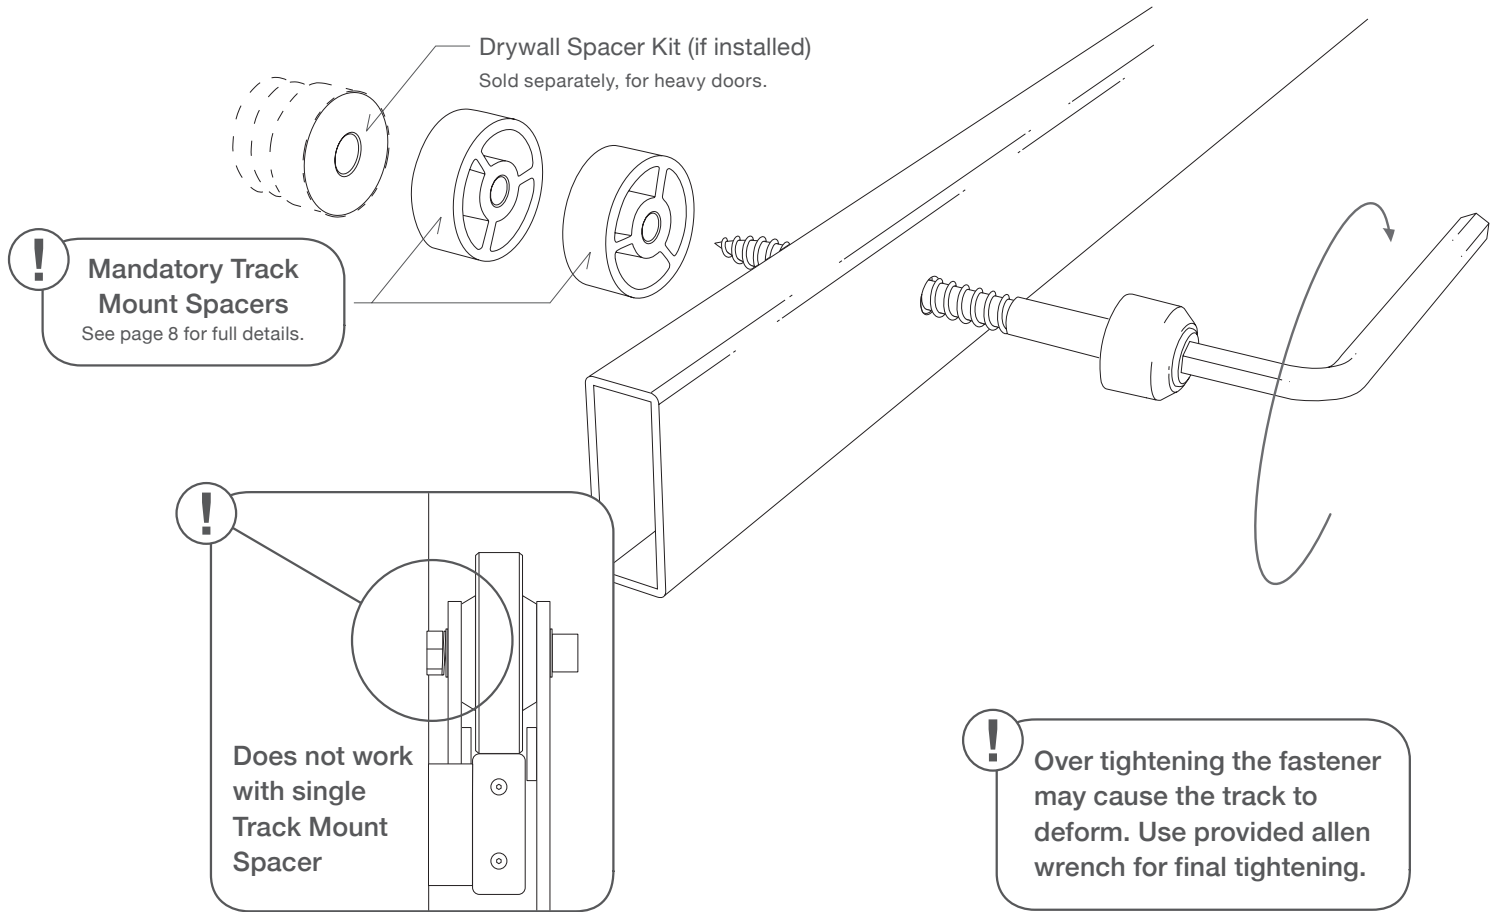


② Install Center Mount(s)

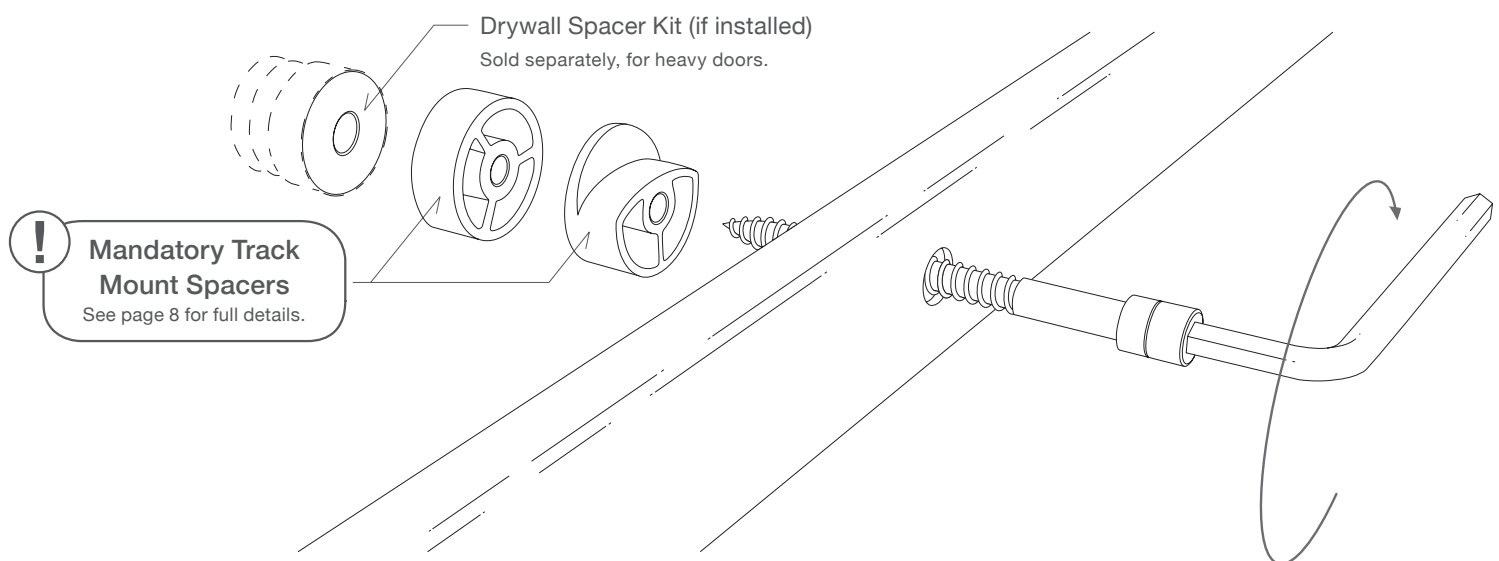

Track Installation

Finish track installation

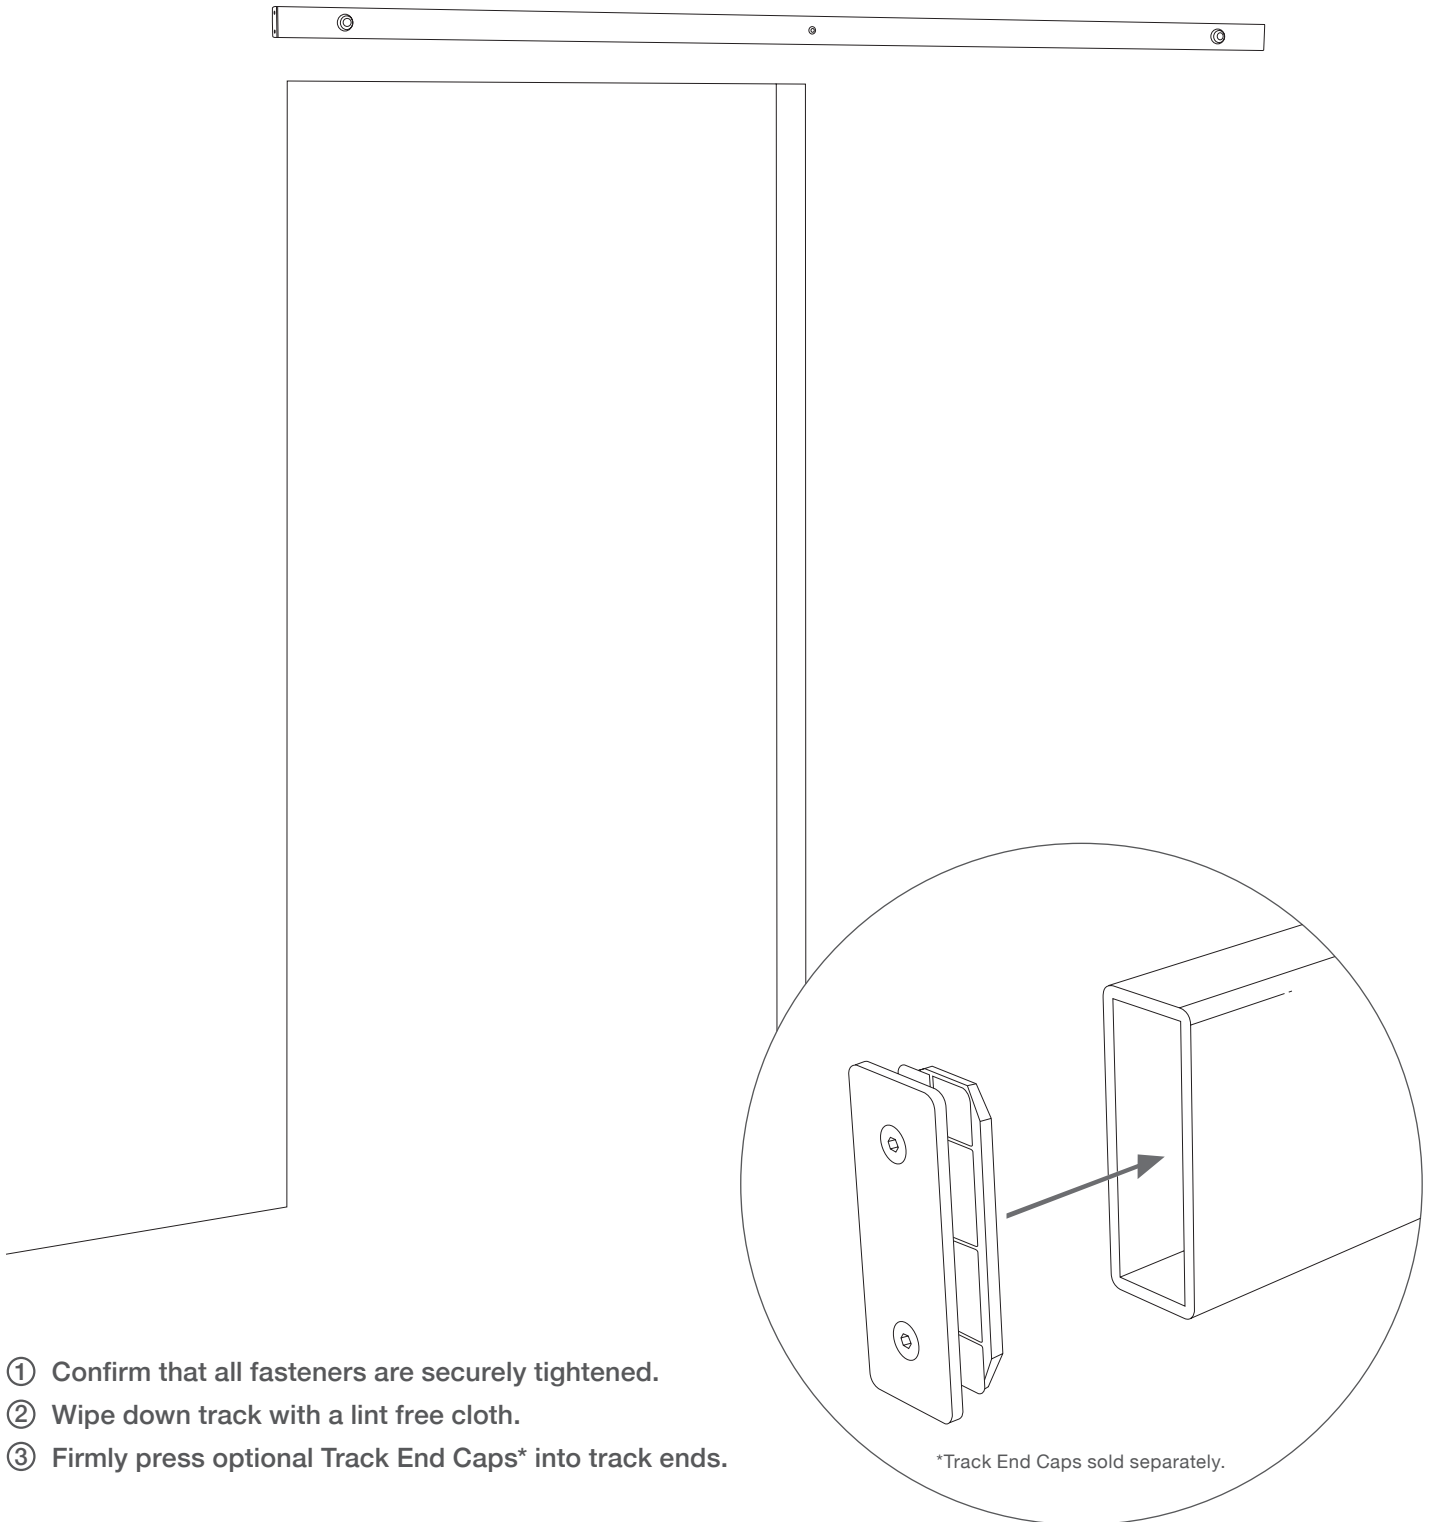


Wood Panel Specifications

Drill hole locations

For standard systems and most custom single door opening systems.

► For Glass panels see page 13


Top Mount hardware
Compatible with wood panels 1-3/8" to 3" thick.

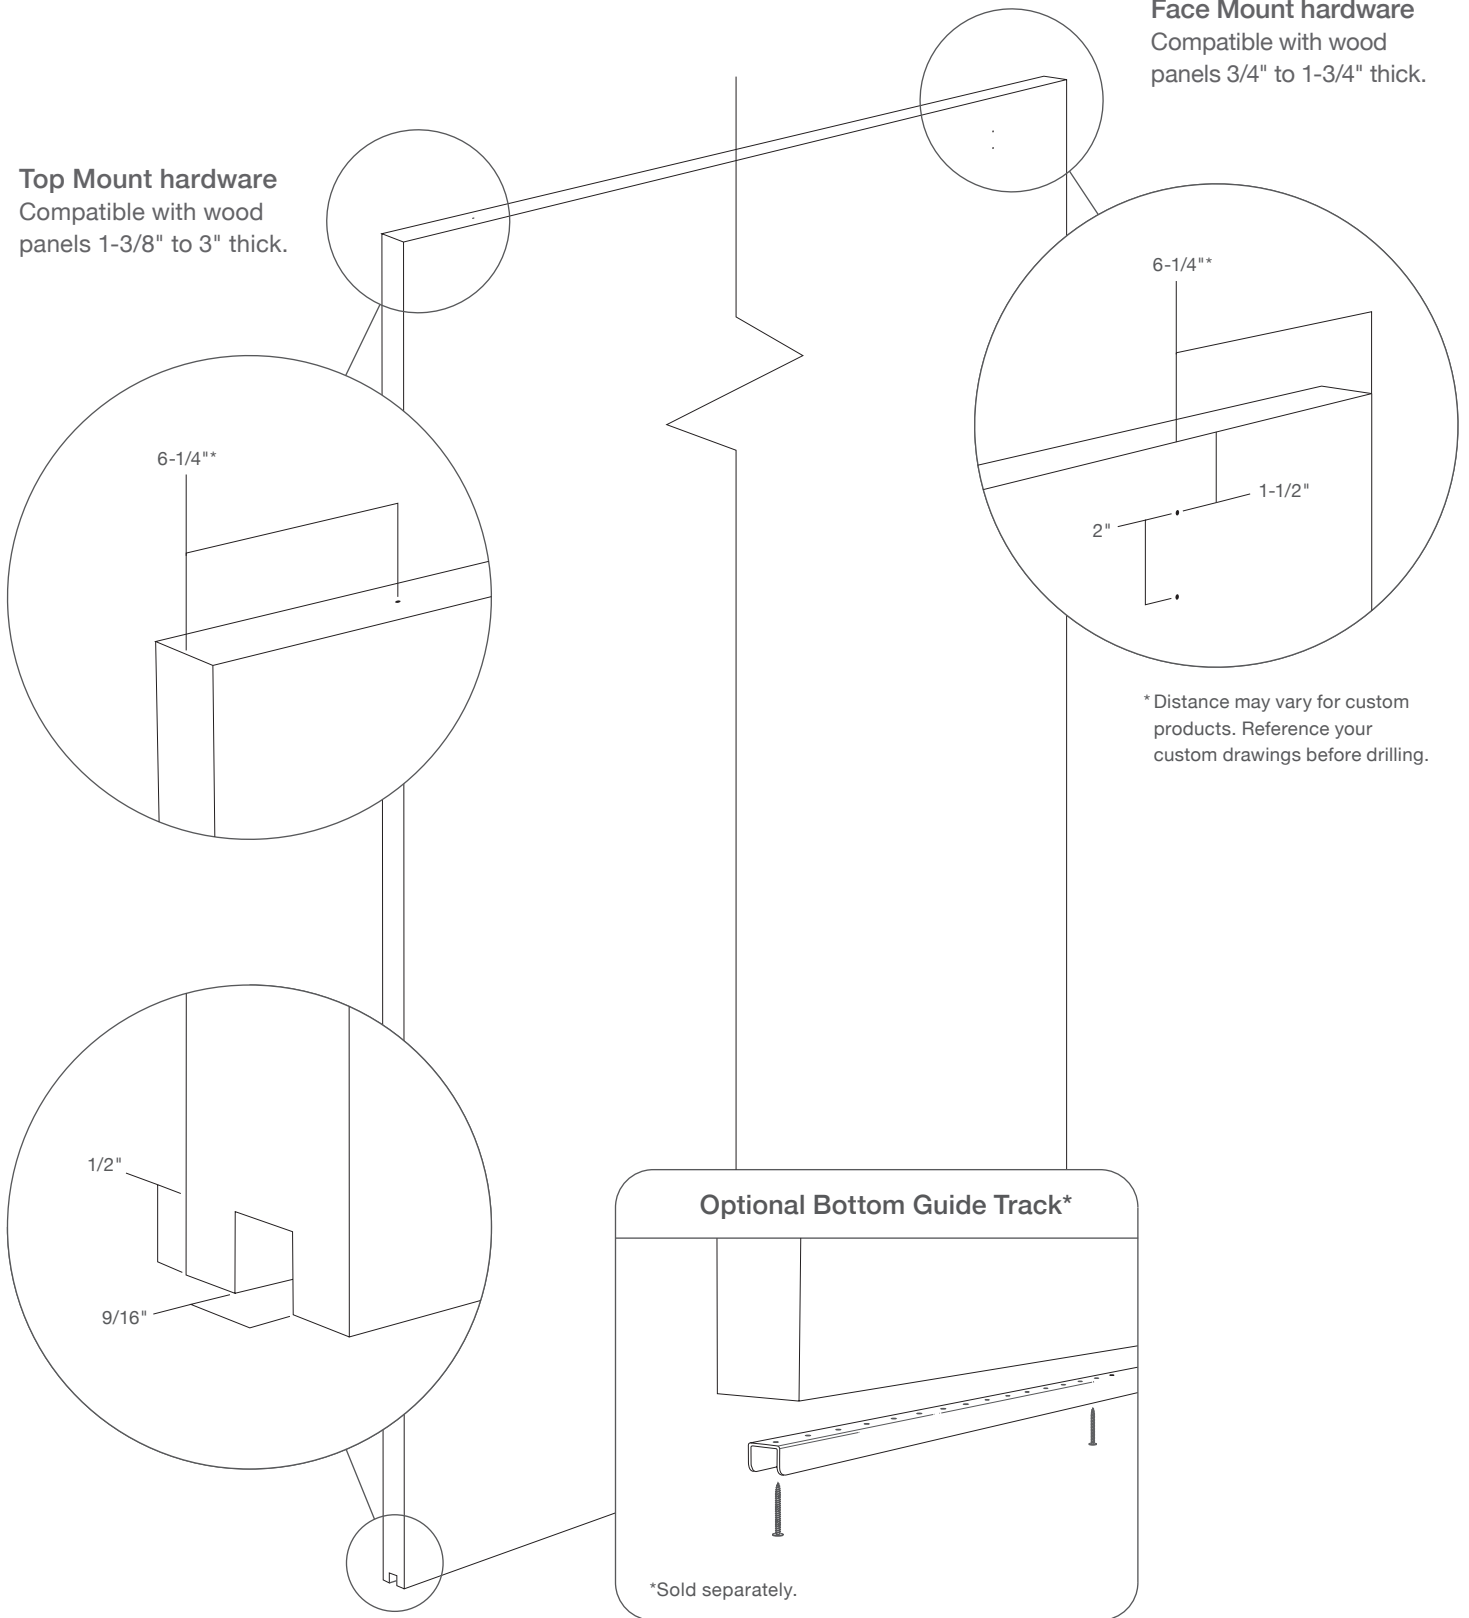

Panel Specifications


Trolley fastener locations + Panel weight limits

- ① The location of your trolley fastener will determine the horizontal position of your panel.

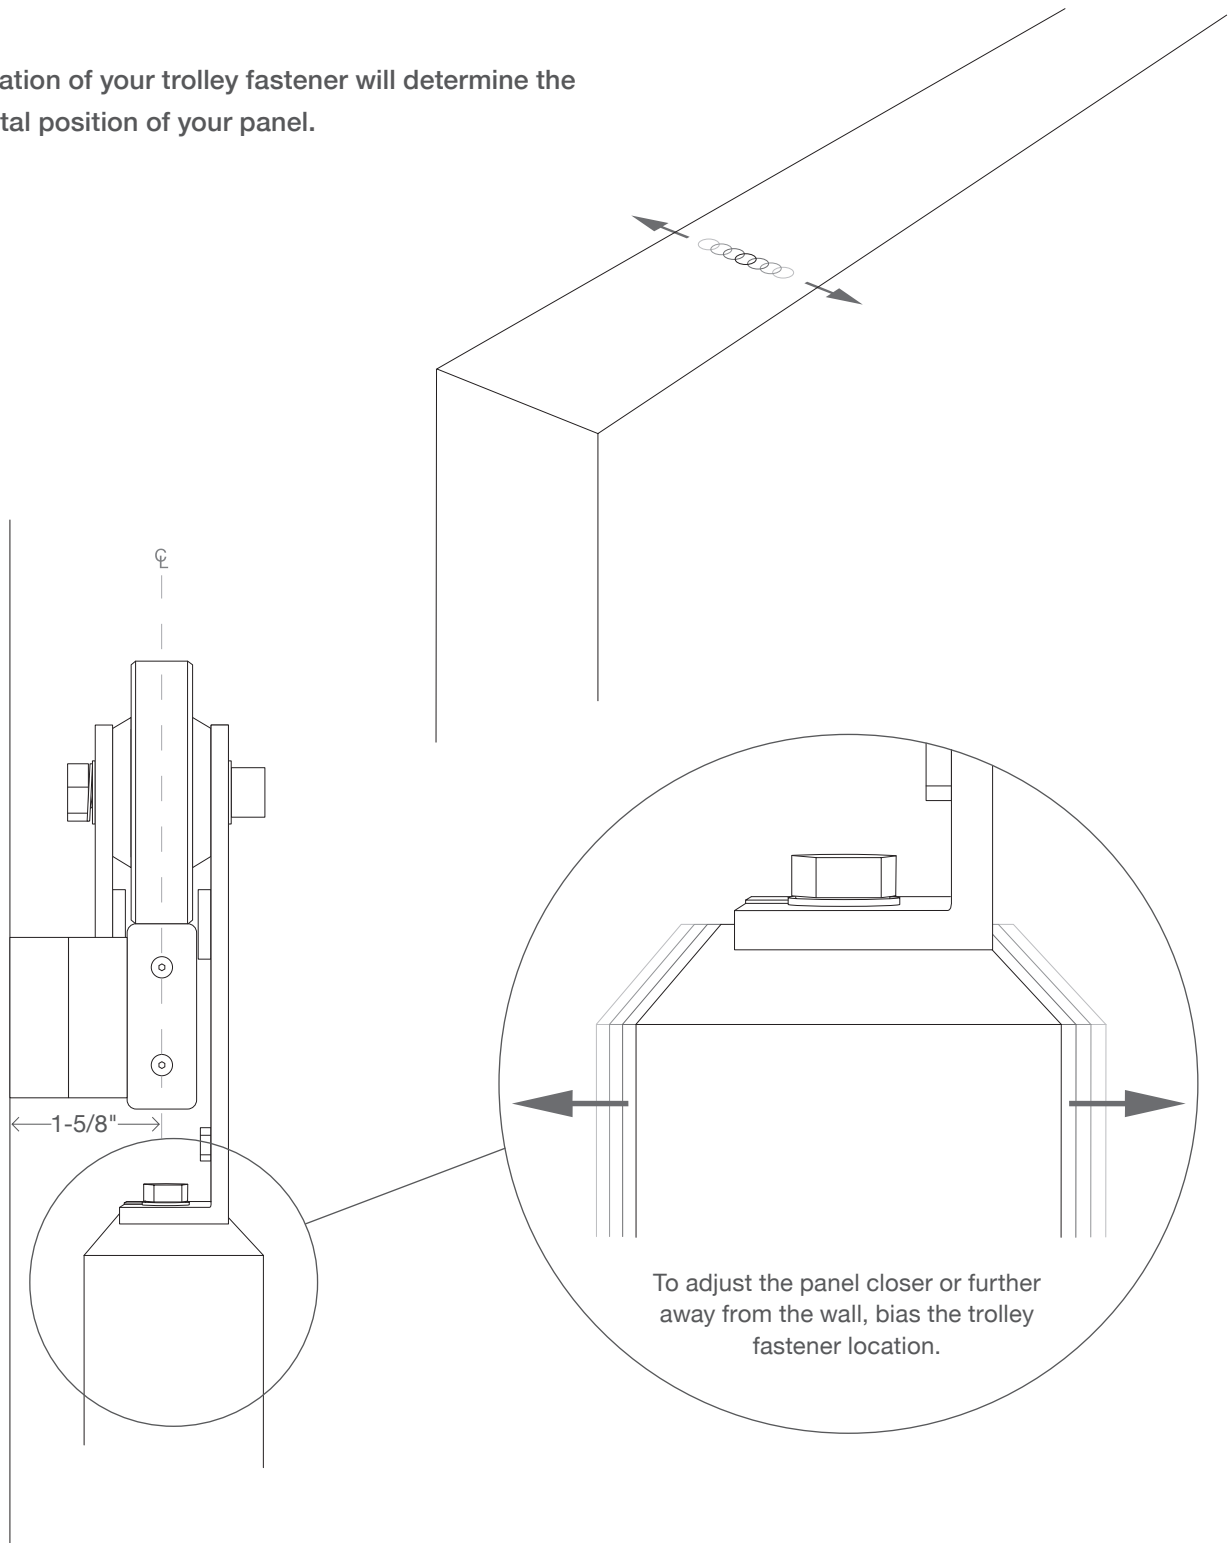

Trolley Installation

Top Mounted wood panels

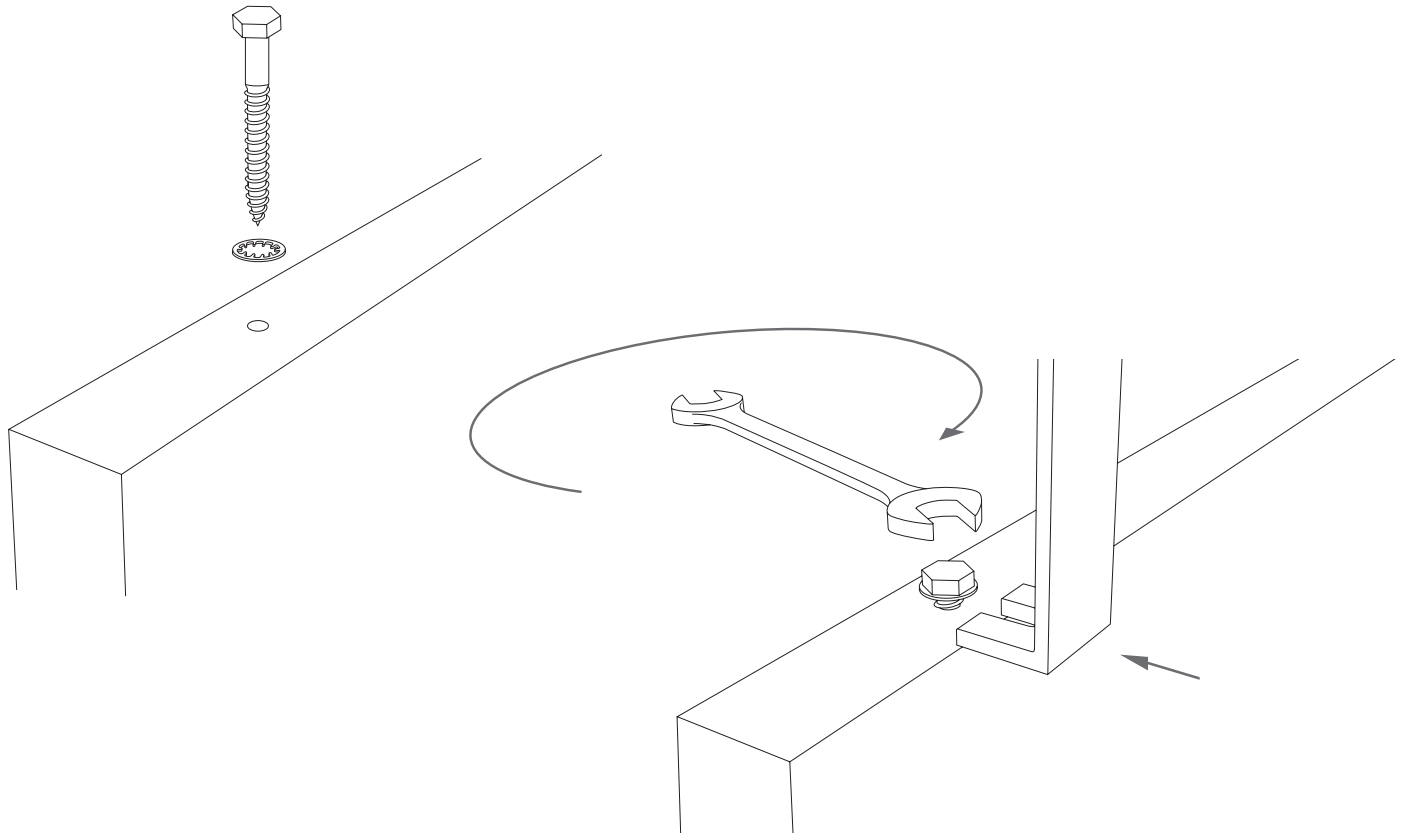

- ① Drill pilot hole for trolley fastener.*
- ② Partially install fastener.
- ③ Slide trolley into place as shown.
- ④ Confirm that the trolley is installed parallel with the door face for smooth operation.
- ⑤ Adjust trolley as needed, reference Inset A. Tighten fastener.
- ⑥ Carefully hang door panel on track.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

* Refer to page 7 and 8 for wood panel drill hole locations.

Inset A - Horizontal Adjustment


Adjust trolley to move panel further away or closer to the wall if desired.



Trolley Installation

Face Mounted wood panels


Maximum panel thickness is 1-3/4"

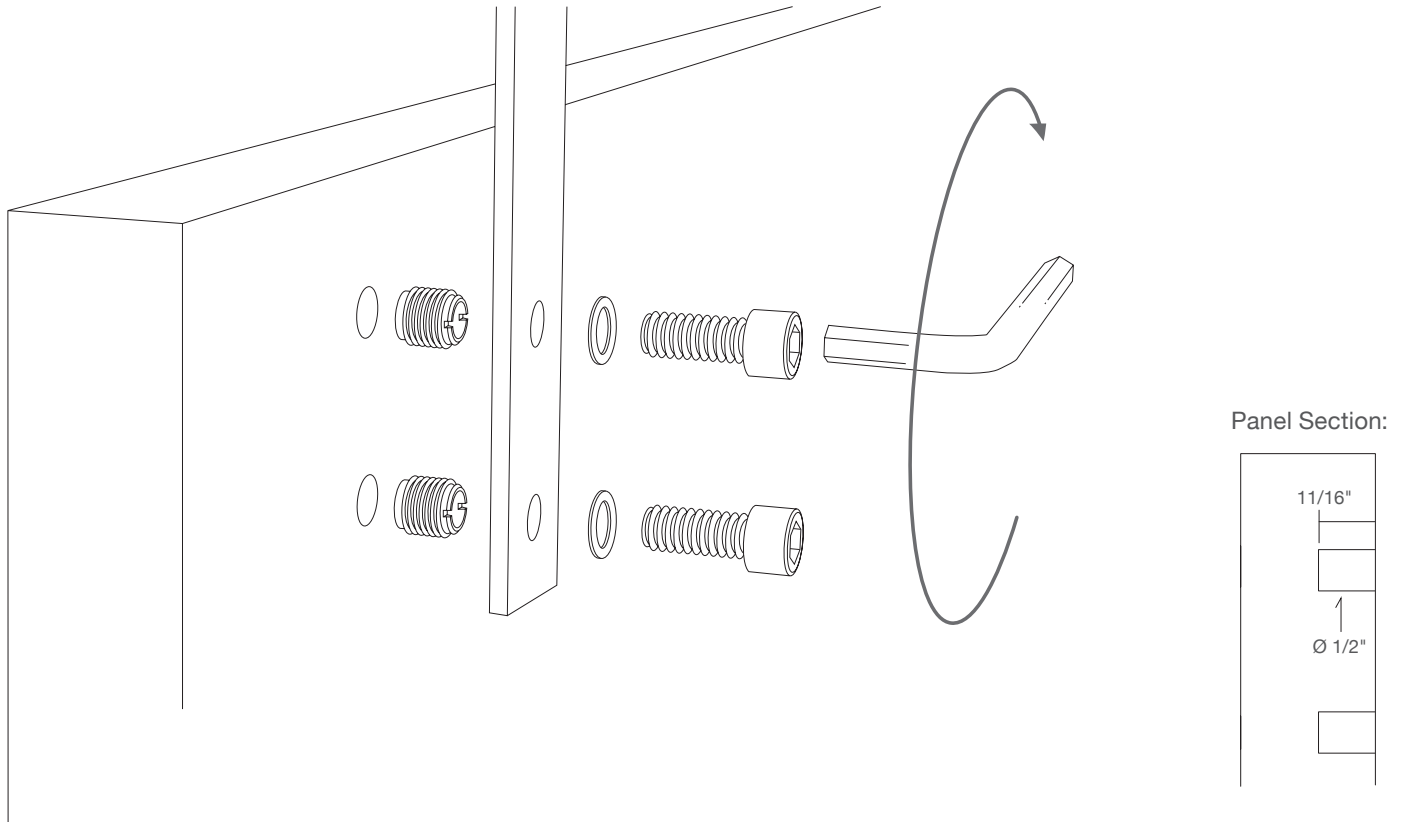

- ① Drill door panel according to section drawing.*
- ② Install trolley without tightening fasteners all the way.
- ③ Carefully hang door panel on track.
- ④ Adjust door panel vertically as needed, reference Inset A.
- ⑤ Tighten all fasteners.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

*Refer to page 7 and 8 for wood panel drill hole locations.

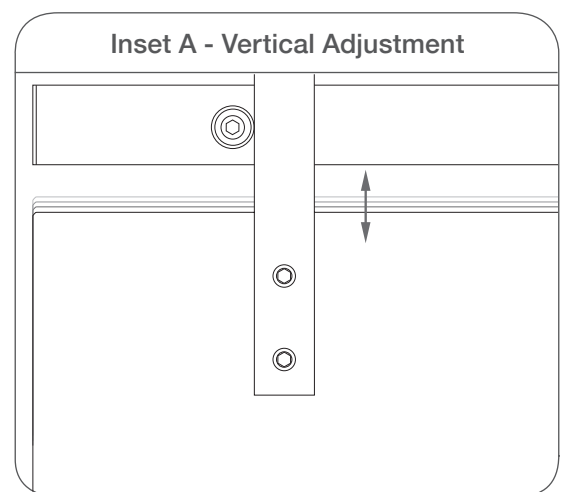



Wood Panel Installation

Routed Bottom Guide channel

Before proceeding to Final Steps, ensure bottom guide solution is implemented.

Door must not travel beyond Bottom Guide Post in either closed or open positions.

- ① Confirm that door panel hangs perfectly vertical, and mark position of Bottom Guide Post immediately adjacent to the door opening.
- ② Remove panel from track and fasten Post to floor.
- ③ Carefully re-hang door panel.

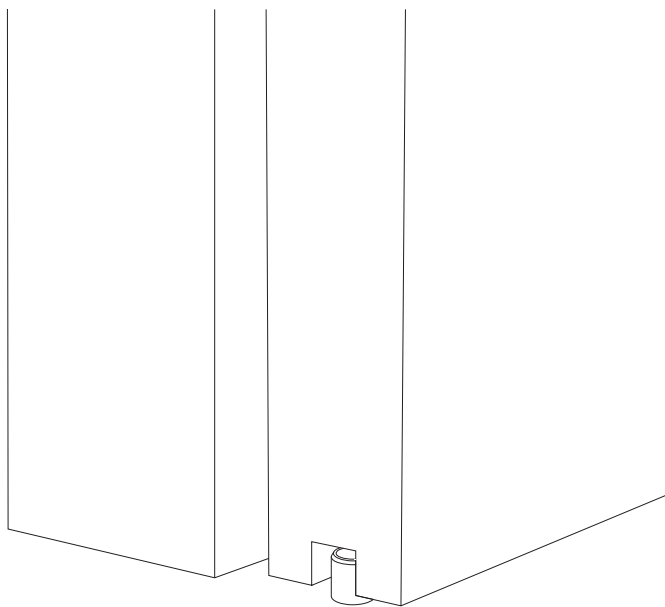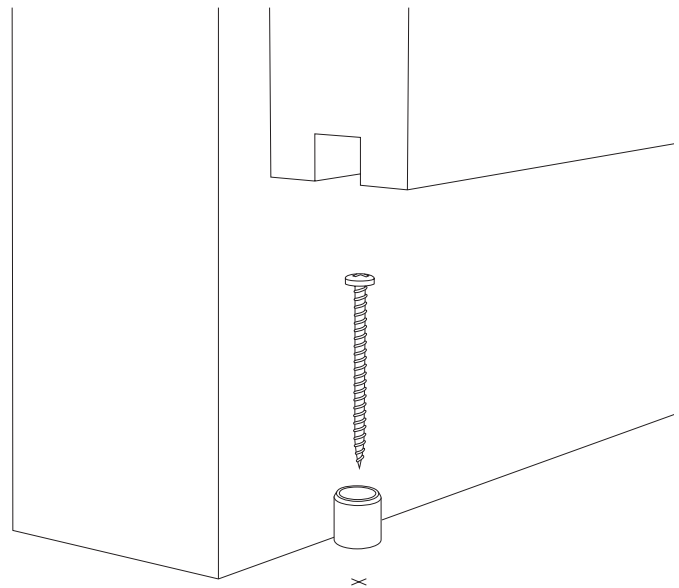

! Verify that the bottom guide post properly engages the door panel in both open and closed positions.

Wood Panel Installation




Optional Bottom Guide Track*

Before proceeding to Final Steps ensure bottom guide solution is implemented.

Door must not travel beyond Bottom Guide Post in either closed or open positions.

- ① Attach Bottom Guide Track to bottom of door panel.
- ② Ensure that door panel hangs perfectly vertical, and mark position of Bottom Guide Post immediately adjacent to the door opening.
- ③ Remove panel from track and fasten Post to floor.
- ④ Carefully re-hang door panel.


* Sold separately, for wood doors only.

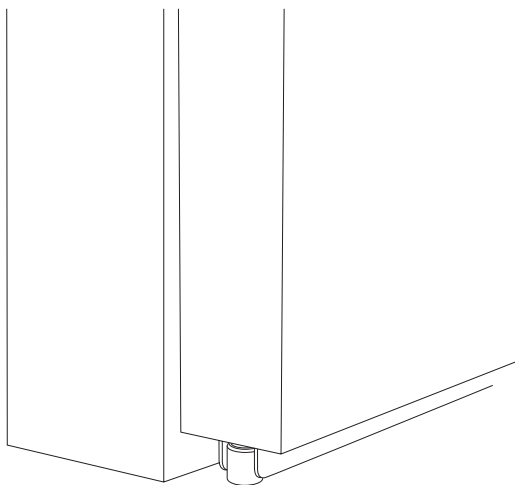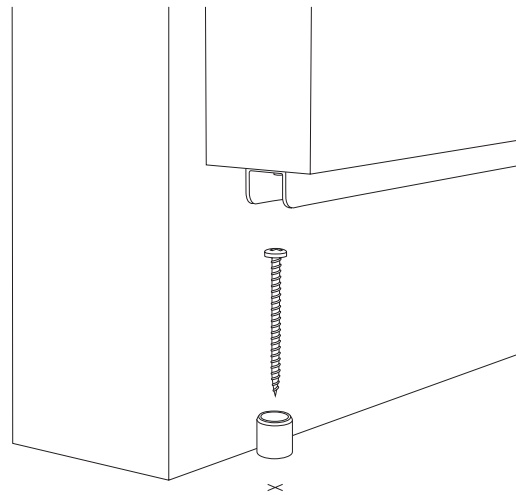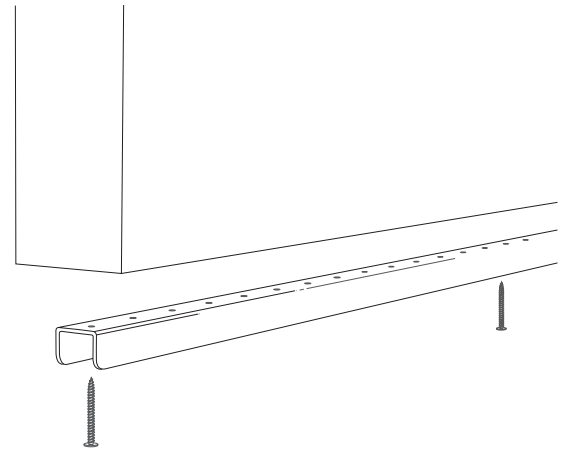

Glass Panel Specifications

Drill hole locations and size


For standard systems and most custom single door opening systems.

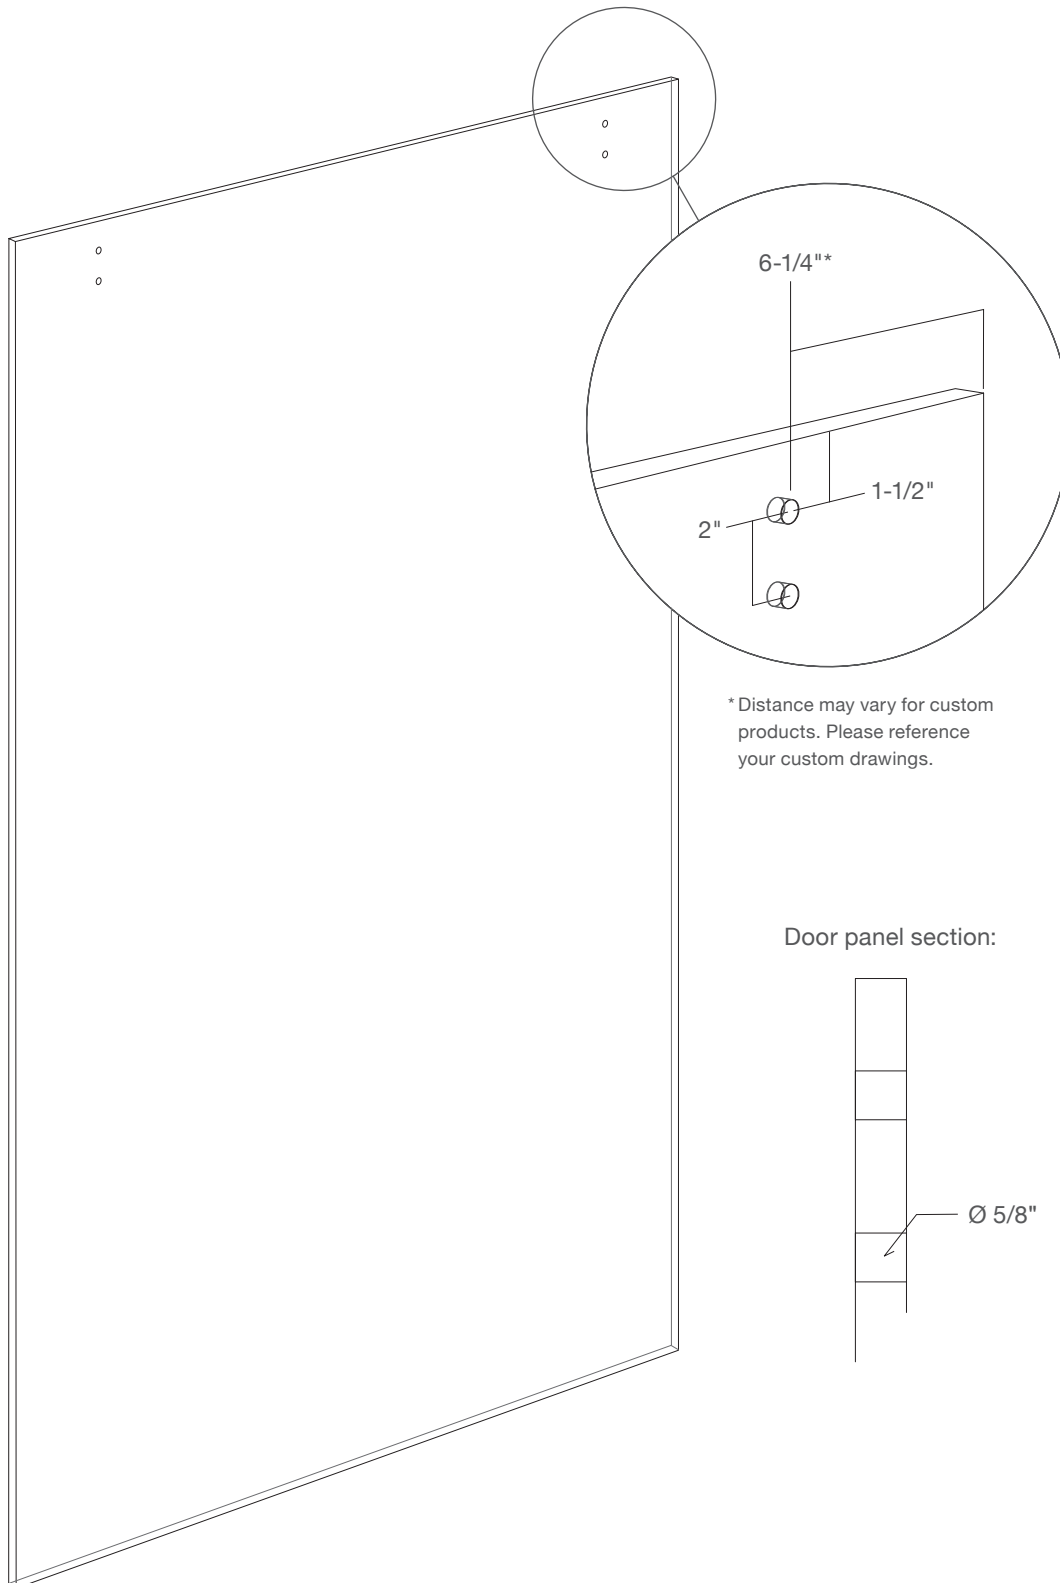

Trolley Installation

Glass and resin panels*


Maximum panel thickness is 3/4"

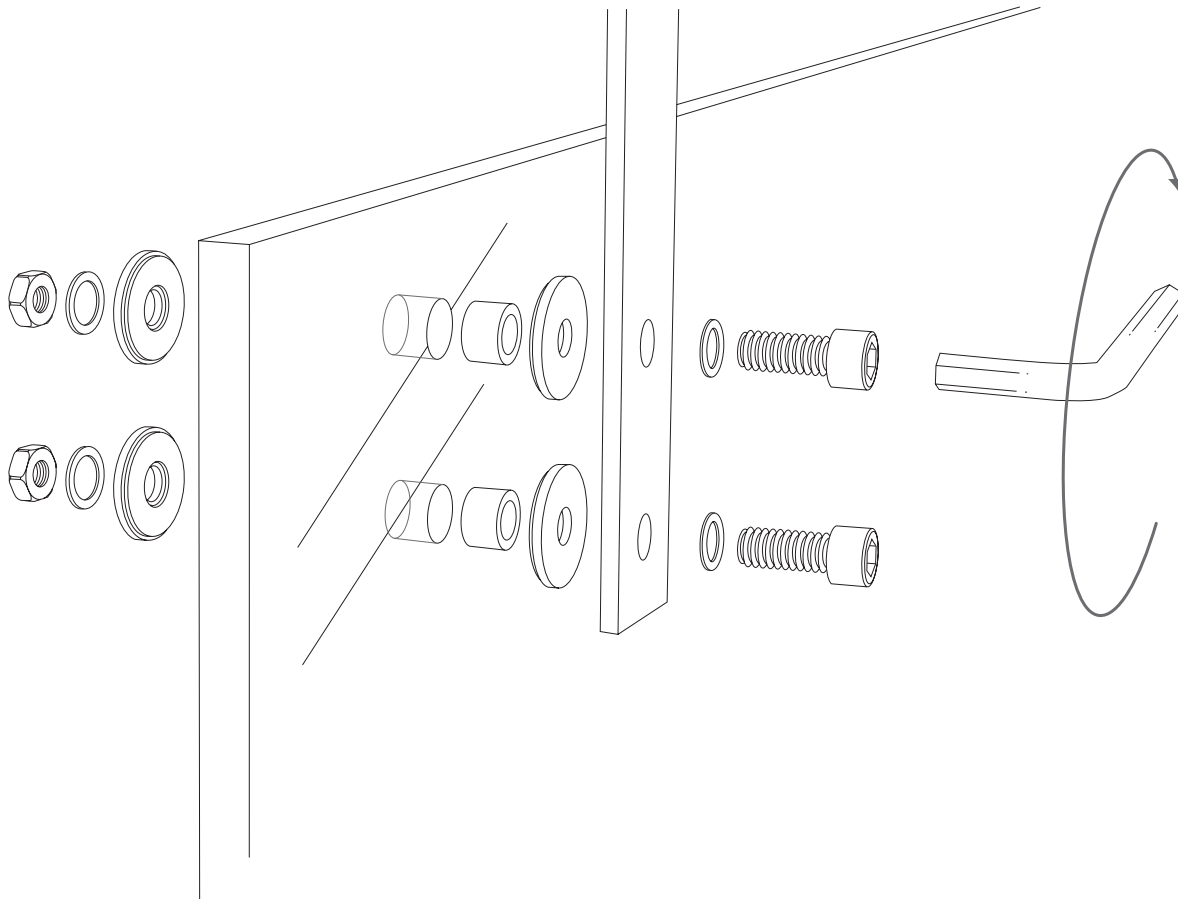

- ① Insert rubber bushings into holes in door panel.
- ② Install trolleys with rubber side of washer facing door panel.
Use 1-1/4" fasteners for door panels 3/8" to 1/2" thick.
Use 1-1/2" fasteners for door panels 9/16" to 3/4" thick.
- ③ Carefully hang door panel on track.
- ④ Adjust door panel vertically as needed, reference Inset A.
- ⑤ Tighten all fasteners.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

* Refer to page 13 for glass panel drill hole locations.

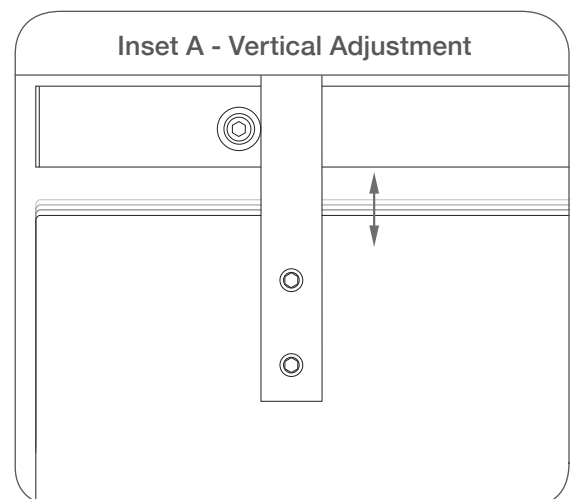


Glass Panel Installation

Bottom Guide Glass

Before proceeding to Final Steps ensure bottom guide solution is implemented.

Door must not travel beyond Bottom Guide in either closed or open positions.

- ① Ensure that door panel hangs perfectly vertical, and mark position of Bottom Guide immediately adjacent to the door opening.
- ② Remove door panel from track and fasten Bottom Guide to floor.
- ③ Carefully re-hang door panel.

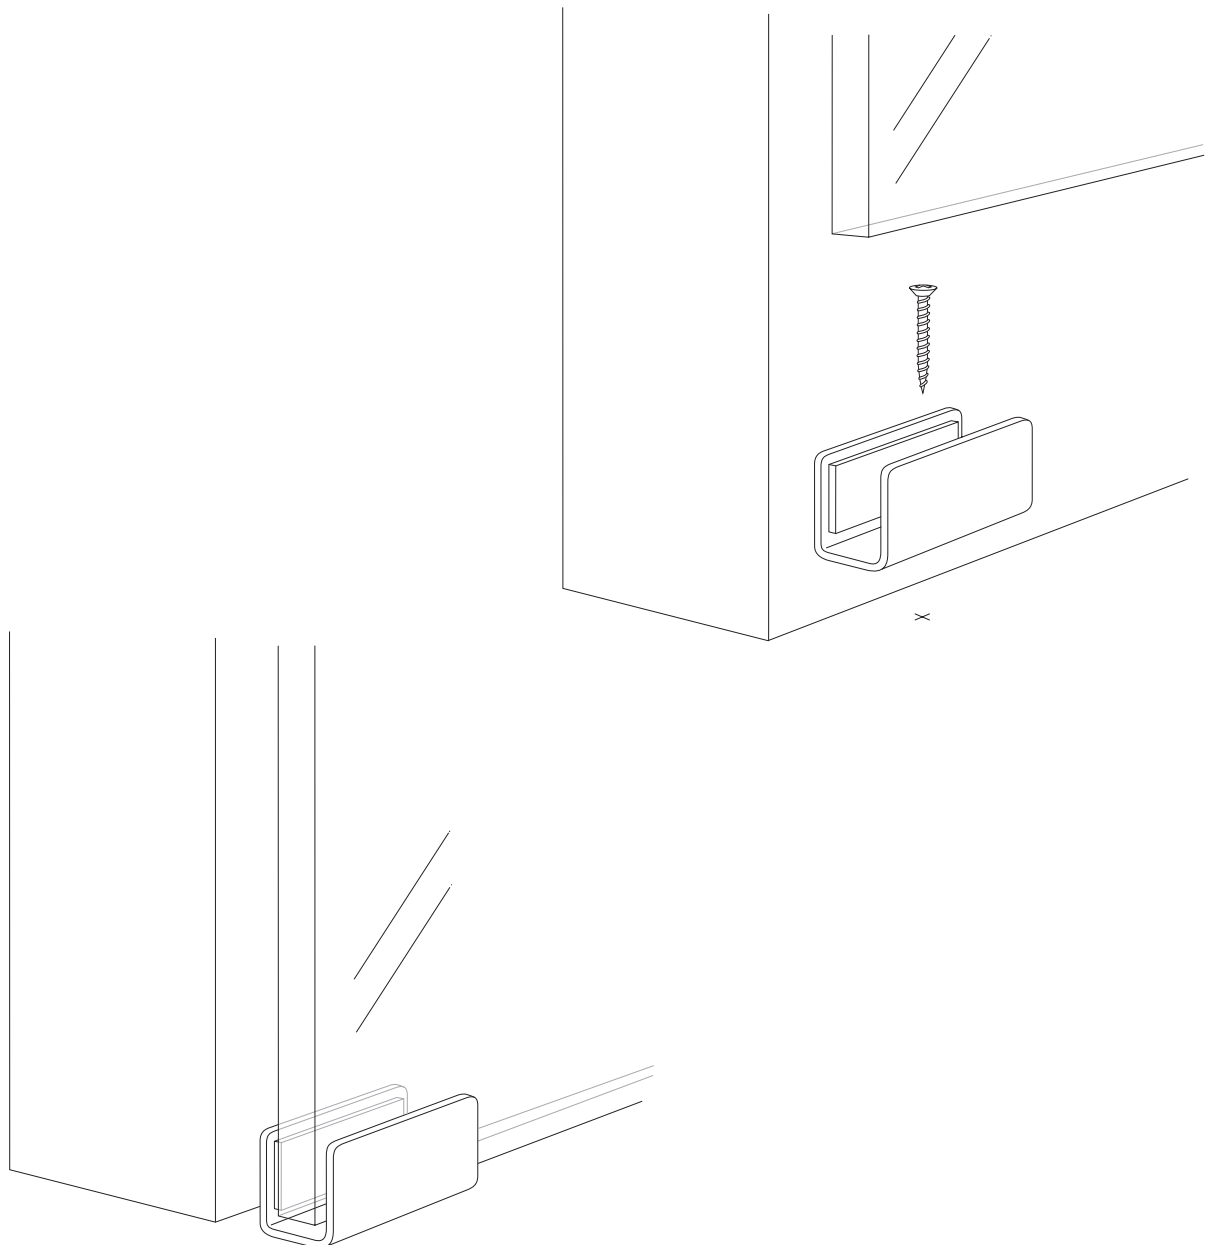


Final Steps


For all configurations

- ① Thread trolley securing mount into bracket by hand.
- ② Tighten screw with the provided allen wrench.

Face Mount

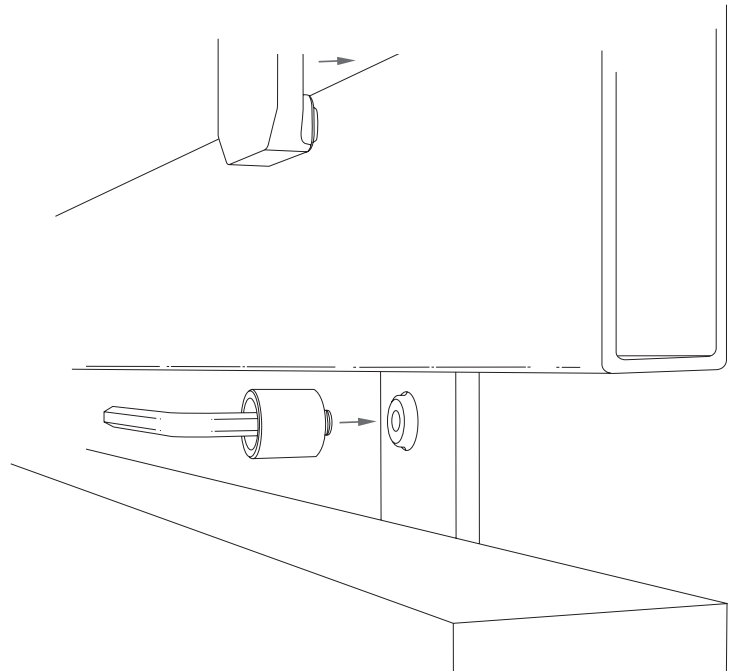


Top Mount

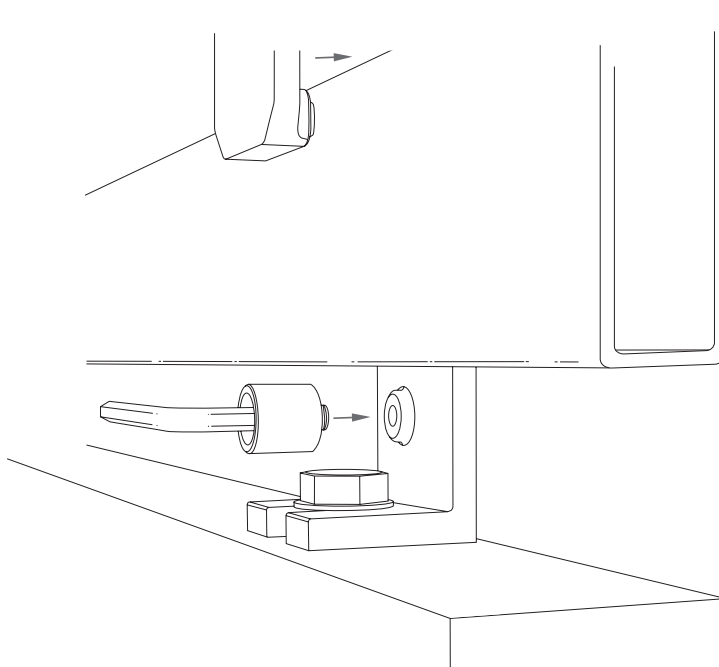

Optional Final Step

For all configurations

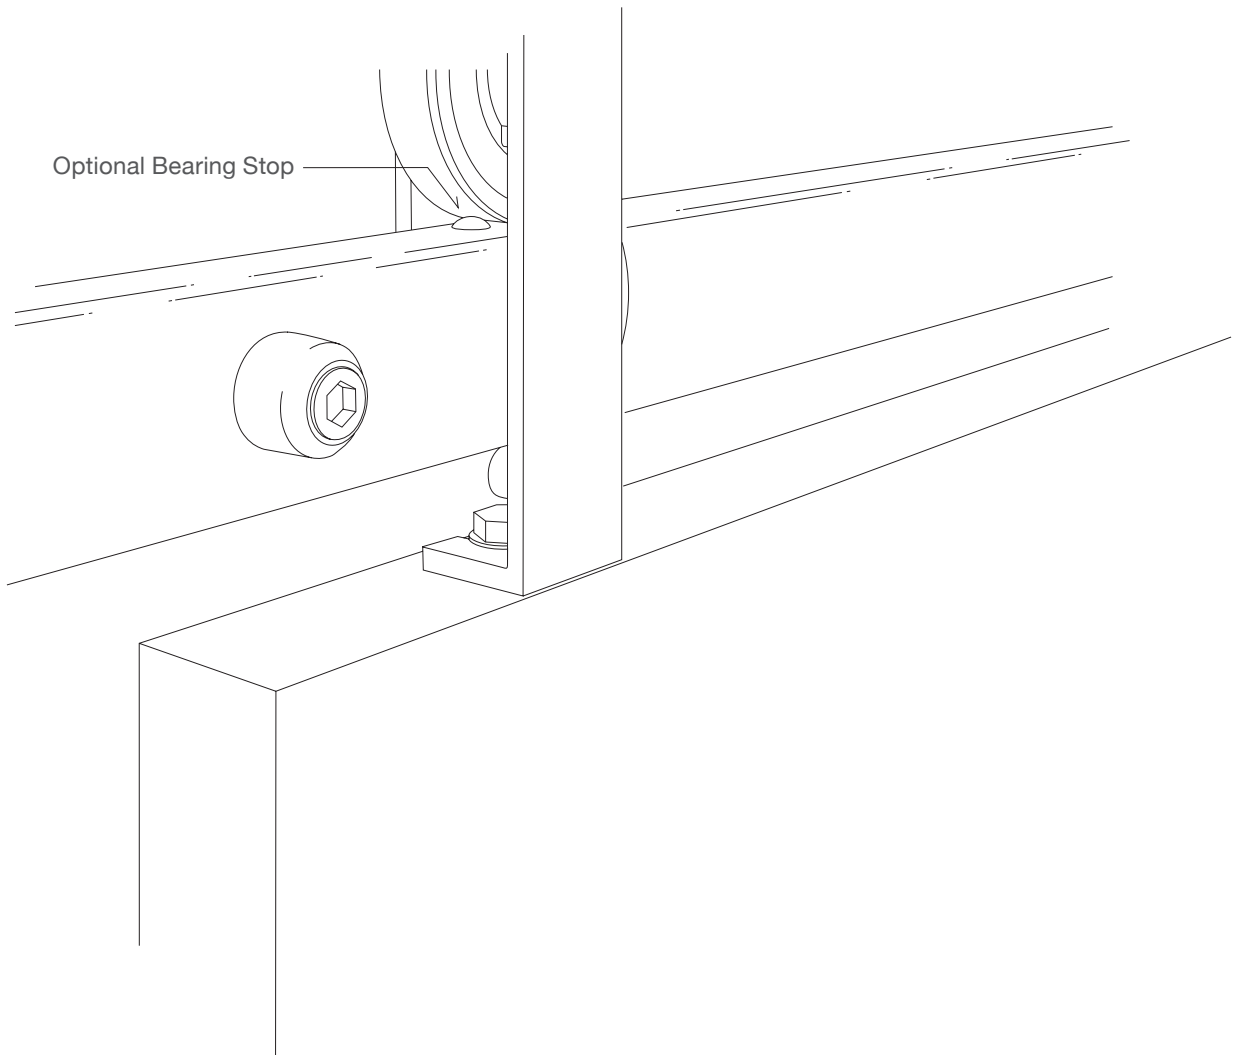


- ① Install Optional Bearing Stop on top edge of track to stop your panel in any desired location.

Packaging Disposal

For all products

Enjoy!

Thank you for purchasing Krown Lab sliding door hardware! All of our packaging materials are recyclable. For product care, reference our Product Guide; downloadable at krownlab.com. Share your experience and send photos of your install to customerservice@krownlab.com

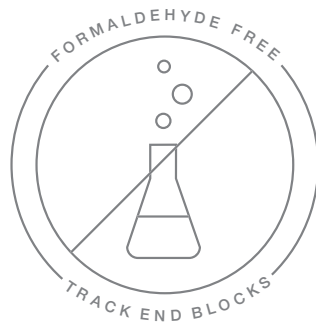

Please help us conserve precious resources by disposing of our packaging to the best of your abilities.

dwell simply