



# KROWNLAB

PDX - ORE



Sliding Door Hardware  
Installation Instructions  
Rob Roy

## Structural Information

For standard systems and most custom single door opening systems.



### General Overview


- ▶ All Krown Lab sliding barn door hardware systems require the provided track fasteners be properly engaged in 3" of structural material. The wall or structure where your system will be mounted must be designed to support the weight specified for the system. See chart below.

| System  | Panel weight limit |
|---------|--------------------|
| Rob Roy | 150 lbs            |

- ▶ Ensure that door panels are constructed with solid, structural material at the location of trolley attachments, bottom guide, and door pull(s) if used.
- ▶ Check with your contractor and/or local listings to confirm accordance with local building codes.
- ▶ For best results, and to ensure full compliance with local building codes and standards, seek qualified building professionals with a comprehensive understanding of relevant material properties and full building and site conditions.
- ▶ Refer to our Product Guide for product technical drawings and material care. Please review our Terms and Conditions before installing.


# SYSTEM HARDWARE

For standard systems and most custom single door opening systems.

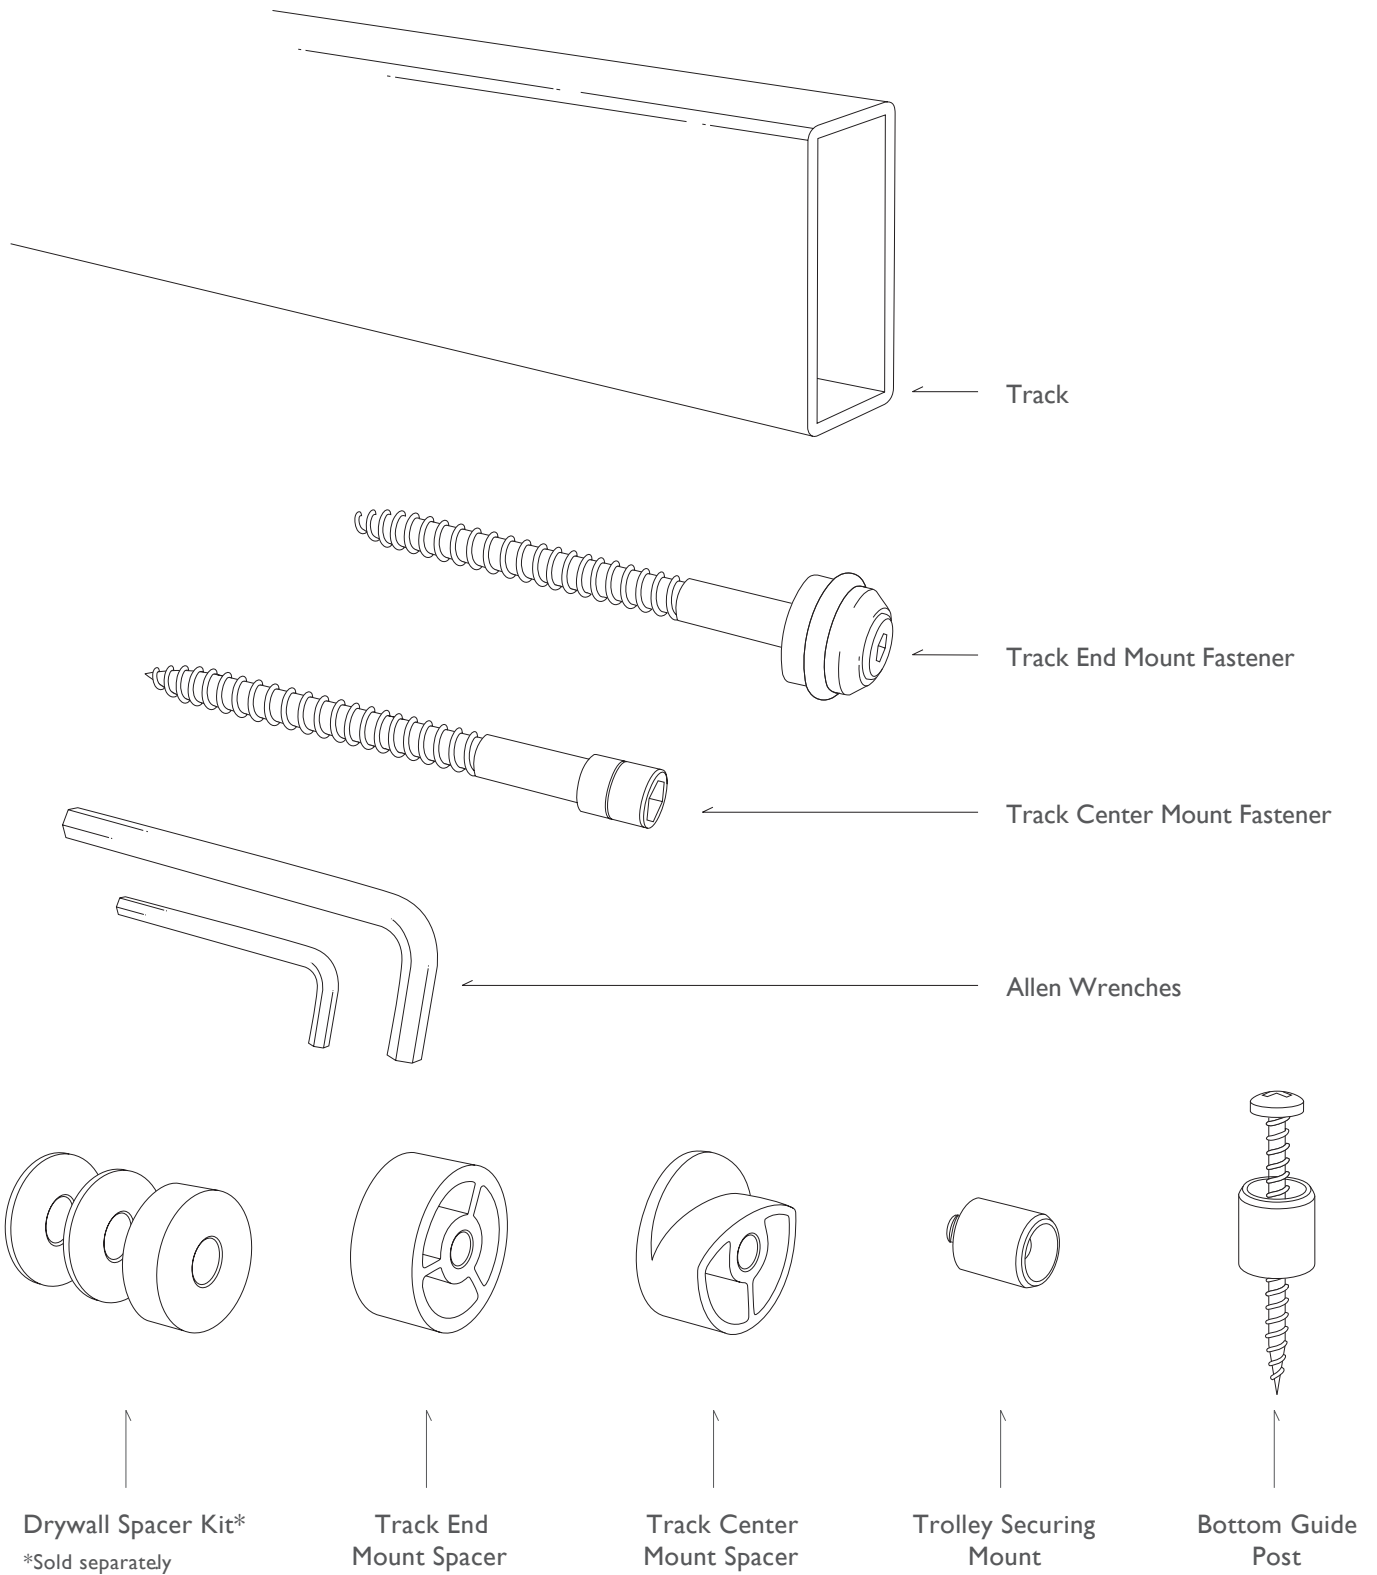

## Determine track height

For standard systems and most custom single door opening systems.

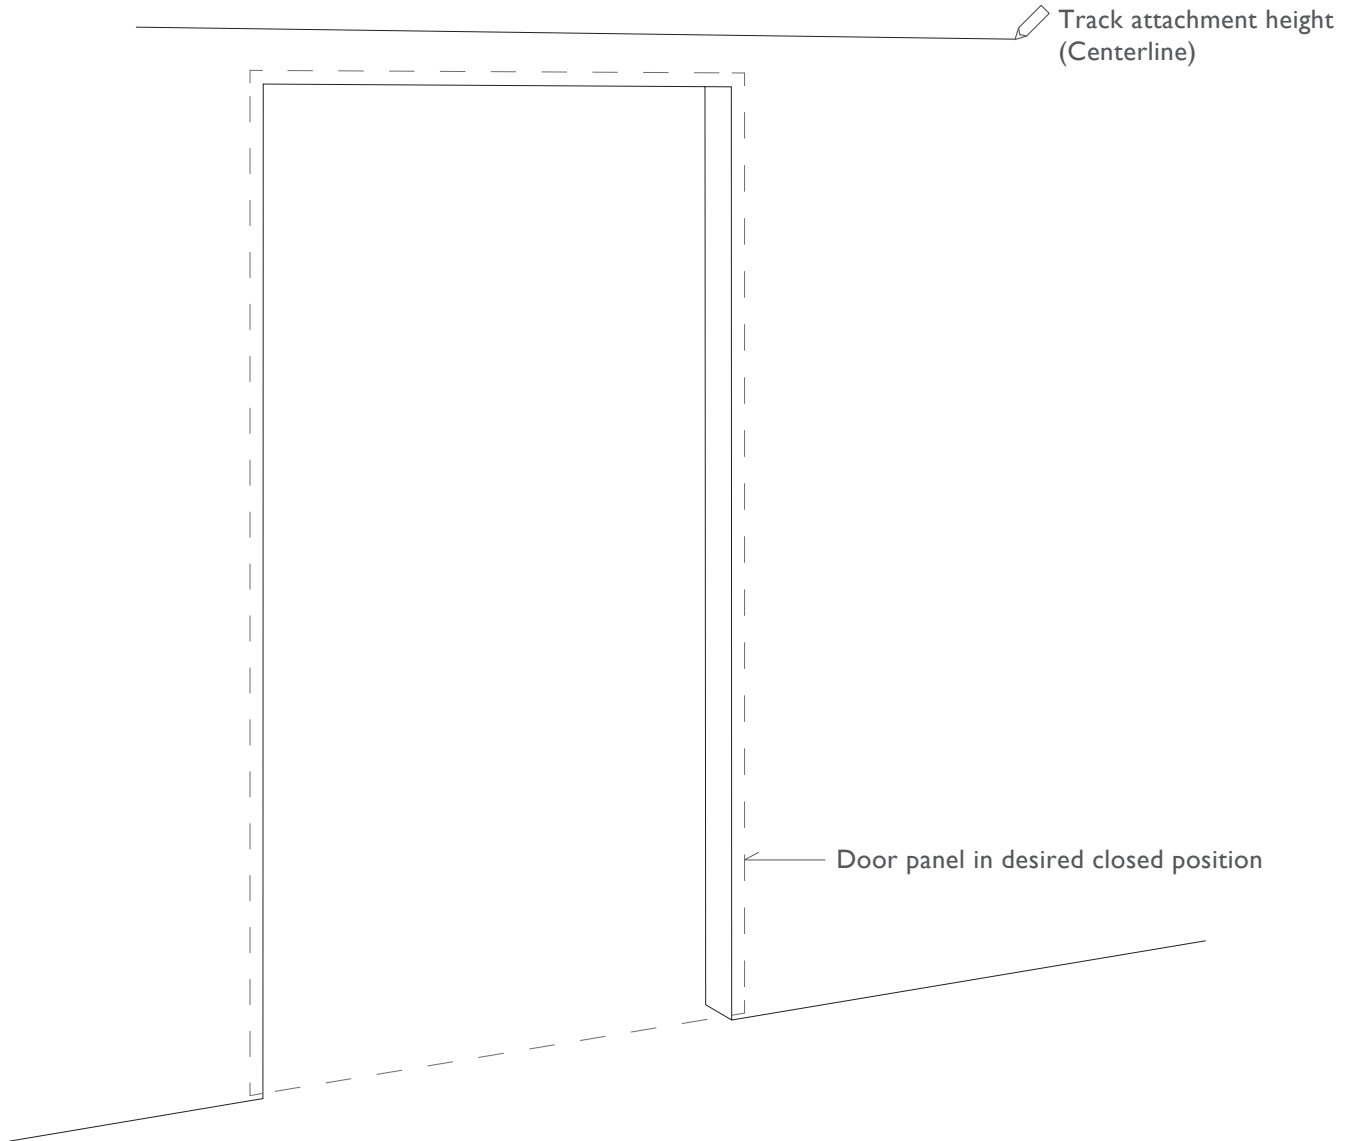

① Determine the height of the track:

$$\text{TOP MOUNT} + \text{FACE MOUNT HEIGHT} = \text{DOOR PANEL HEIGHT} + 2\text{-}1/2\text{'}$$

Add 3/4" to this dimension if you are using the optional bottom guide channel.


$$\text{GLASS MOUNT HEIGHT} = \text{DOOR PANEL HEIGHT} + 2\text{-}3/4\text{'}$$

This will result in a 1/4" clearance between your door panel and floor. Adjust if desired or necessary.

# TRACK INSTALLATION

## Locate attachment points

Standard 70" track shown below.

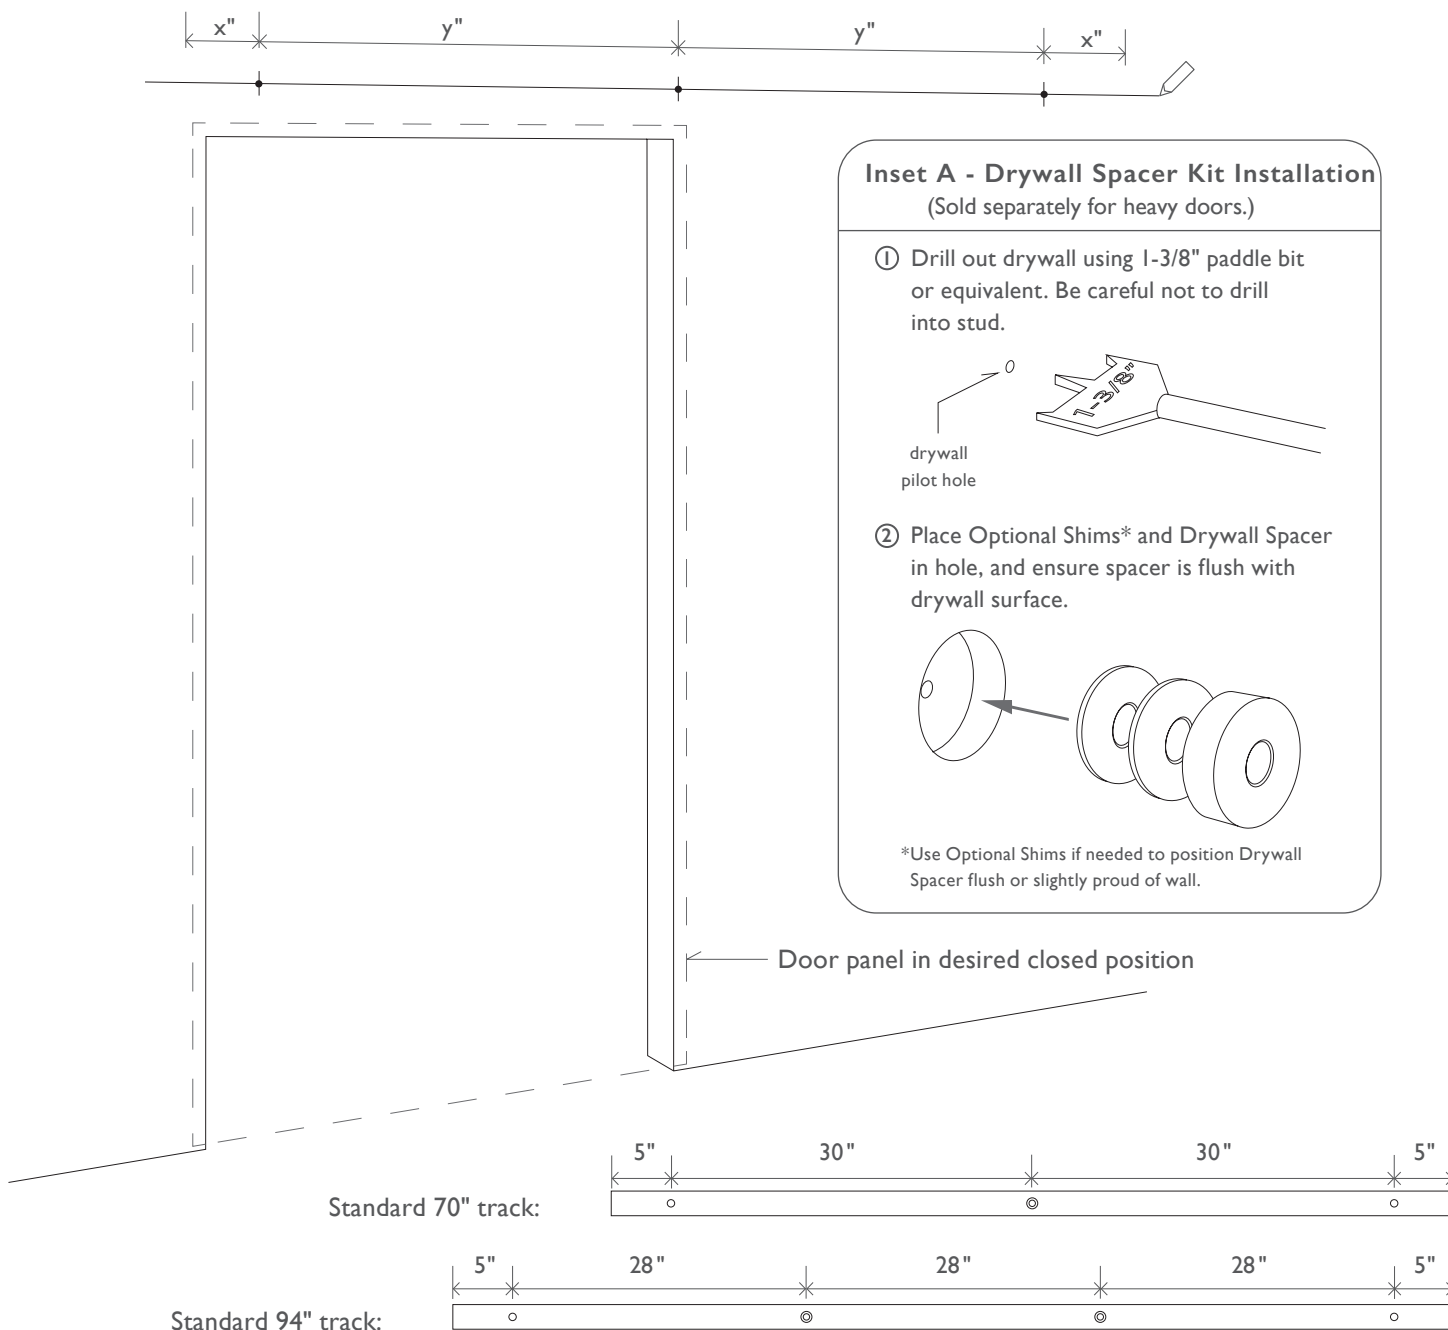


- ① Measure and mark locations for all track attachment points, referencing the applicable track drawings above. For custom length tracks reference your approved custom drawing.
- ② Drill small pilot hole in marked locations.
- ③ If installing Drywall Spacer Kits reference Inset A.
- ④ Drill full size pilot holes for track fasteners in pre-drilled locations.


# TRACK INSTALLATION

## Mount track to wall

### ① Install both End Mounts

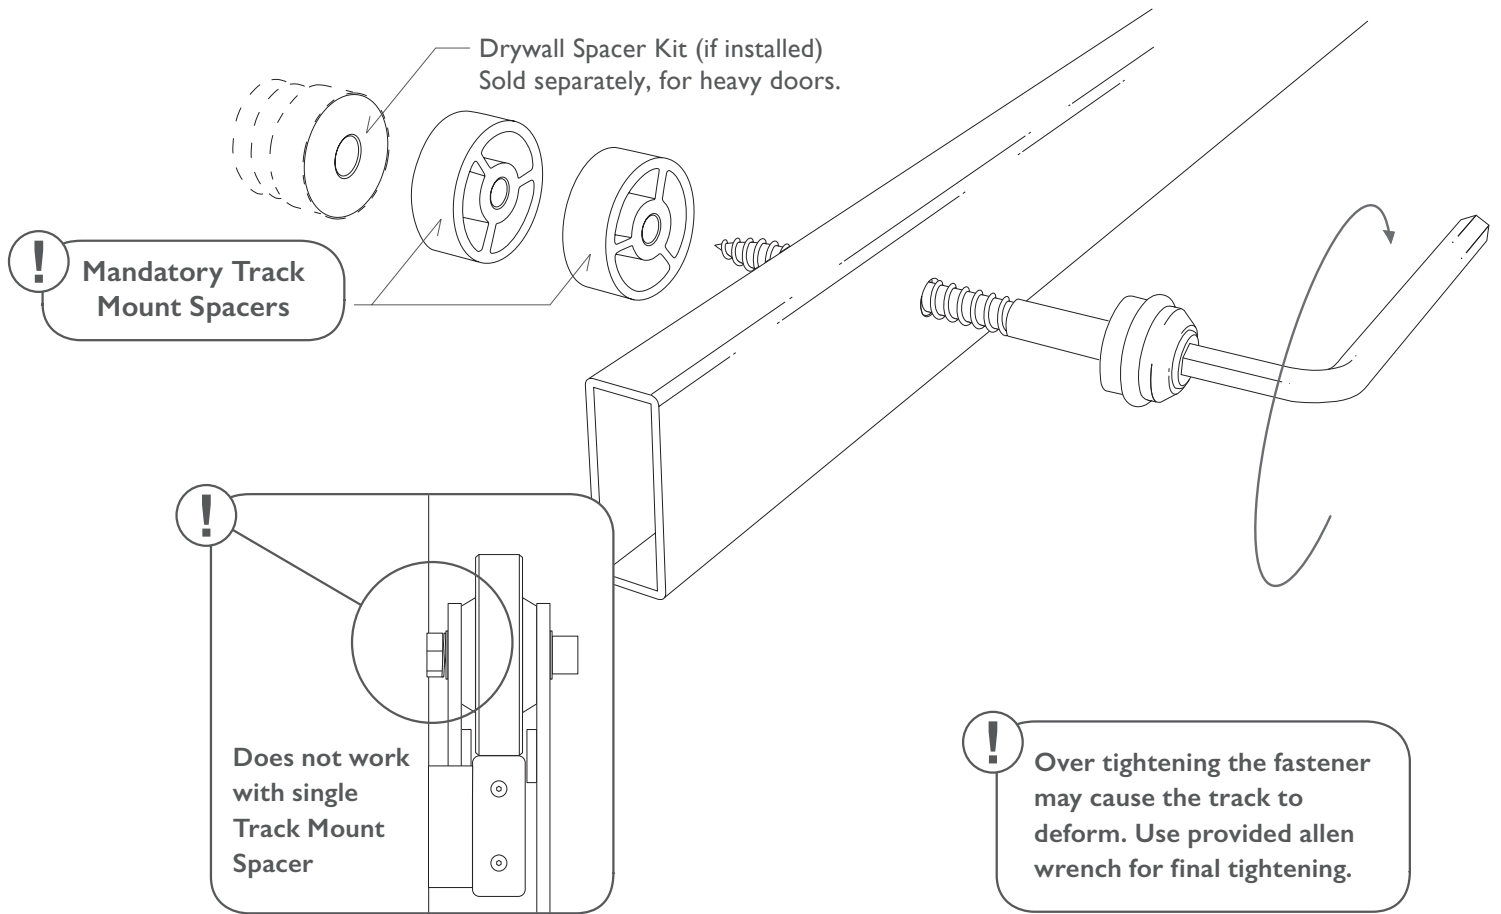


### ② Install Center Mount(s)

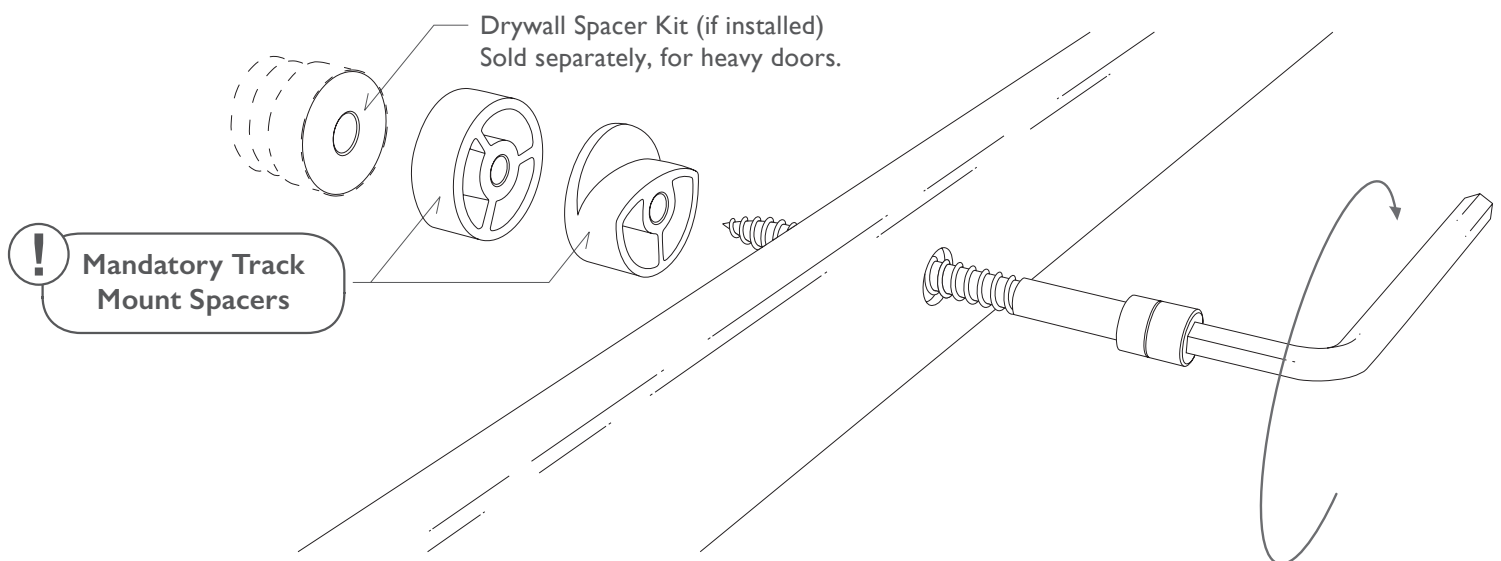

# TRACK INSTALLATION

## Finish track installation

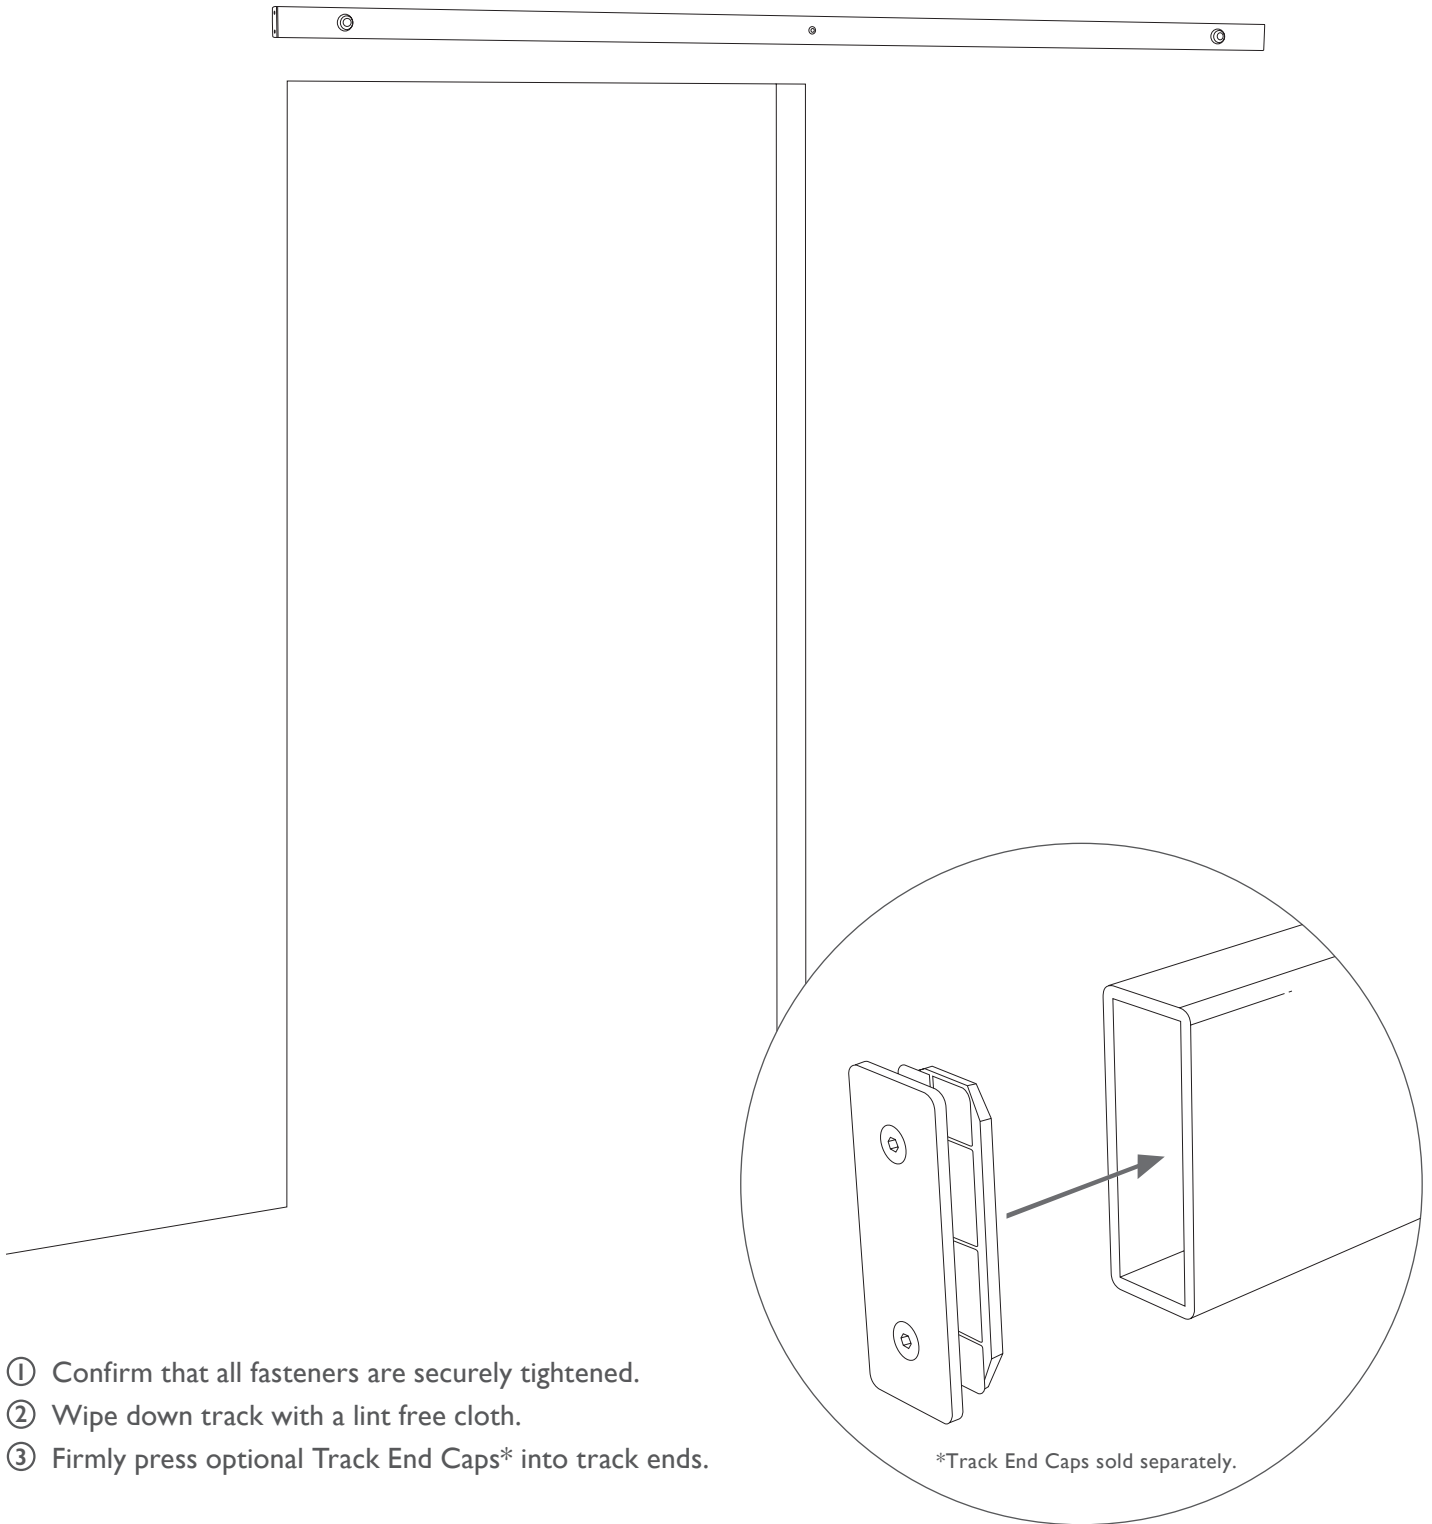


# WOOD PANEL SPECIFICATIONS

## Drill hole locations

For standard systems and most custom single door opening systems.

► For Glass panels see page 14

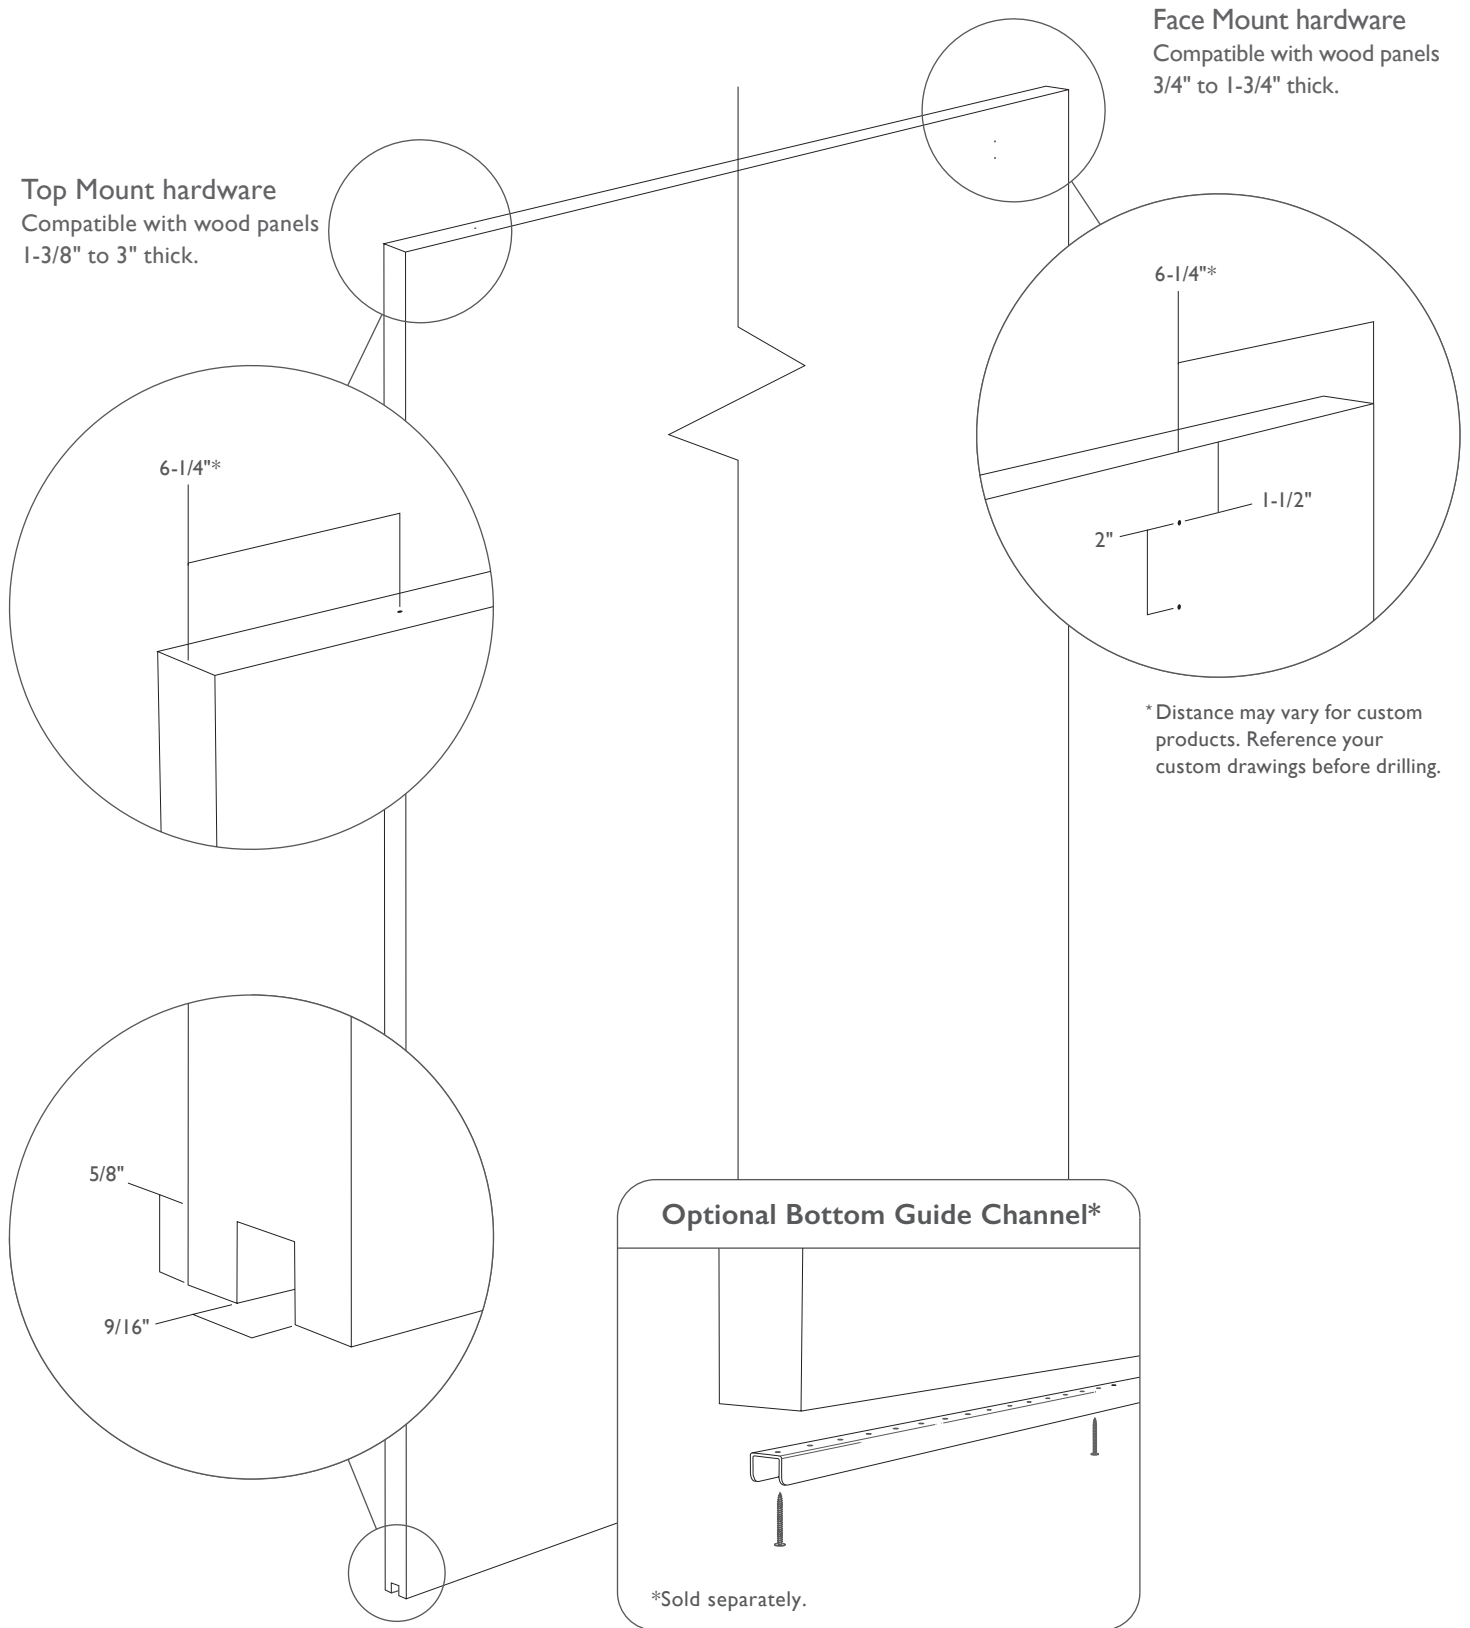




# PANEL SPECIFICATIONS

## Trolley fastener locations


- ① The location of your trolley fastener will determine the horizontal position of your panel.

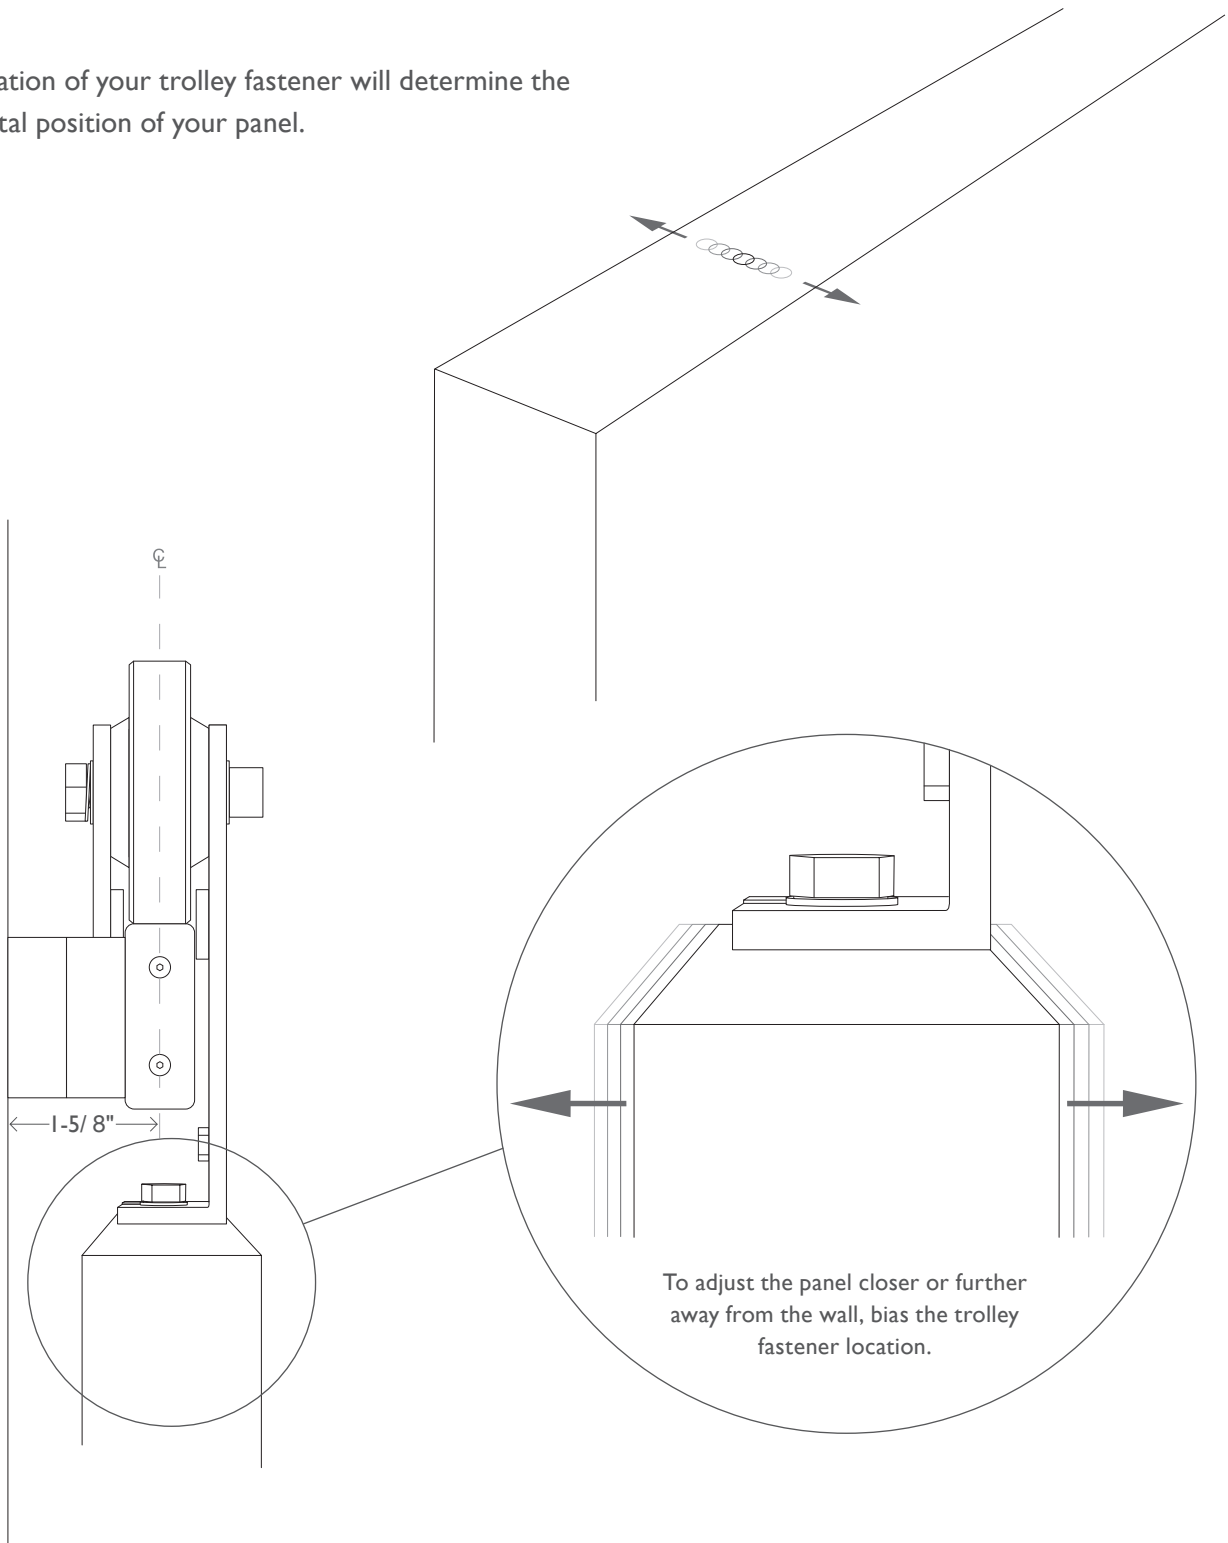

# DOOR INSERT INSTALLATION

## Heavy Duty Door Insert

For Top Mounted door panels above 100 lbs

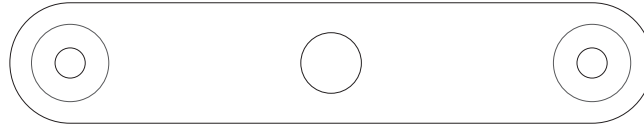

ROB ROY





ODEN



BALDUR




We recommend that the included Door Insert will be installed on door panels above 100 lbs by routing a recess in the top of the door panel as shown above.

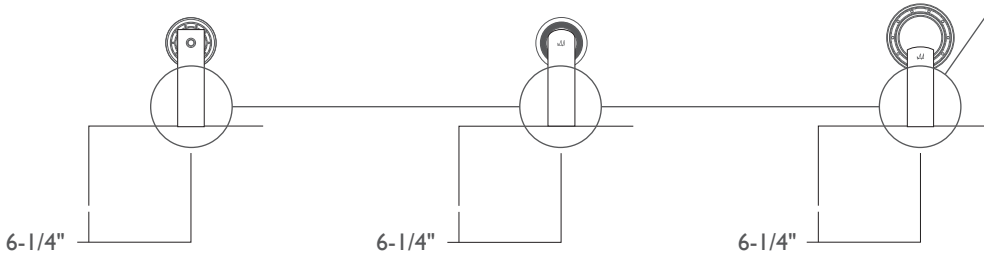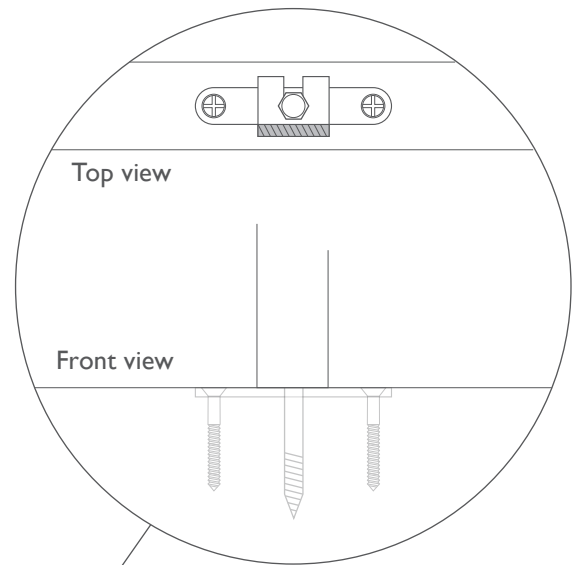

(For custom track configurations, refer to custom drawings)

# TROLLEY INSTALLATION

## Top Mounted wood panels

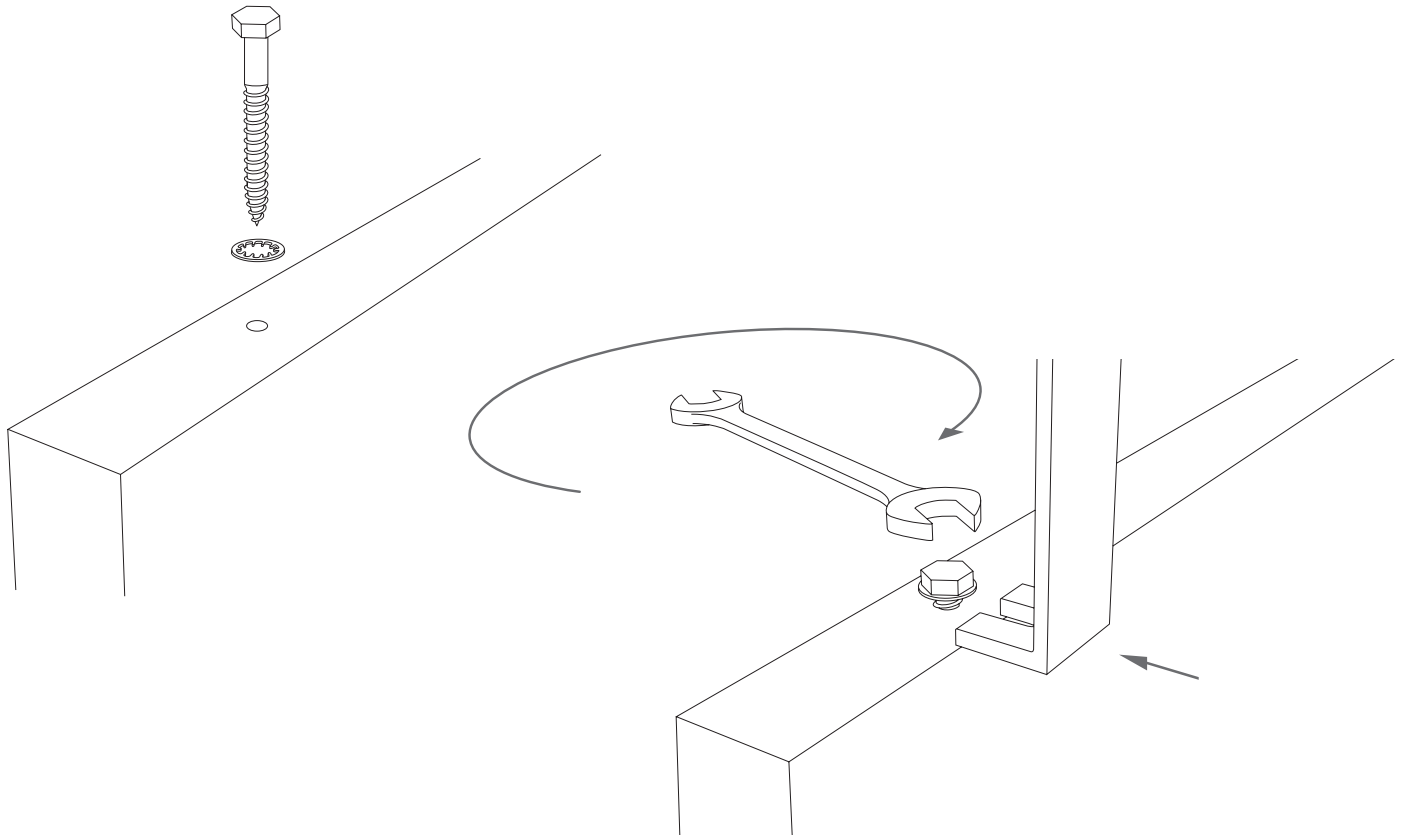


- ① Drill pilot hole for trolley fastener.\*
- ② Partially install fastener.
- ③ Slide trolley into place as shown.
- ④ Confirm that the trolley is installed parallel with the door face for smooth operation.
- ⑤ Adjust trolley as needed, reference Inset A. Tighten fastener.
- ⑥ Carefully hang door panel on track.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

\* Refer to page 7 and 8 for wood panel drill hole locations.

### Inset A - Horizontal Adjustment

Adjust trolley to move panel further away or closer to the wall if desired.

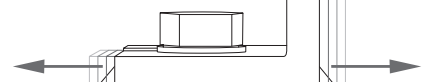


Fastener head and washer must not overhang the trolley base.

# TROLLEY INSTALLATION

## Face Mounted wood panels


Maximum panel thickness is 1-3/4"

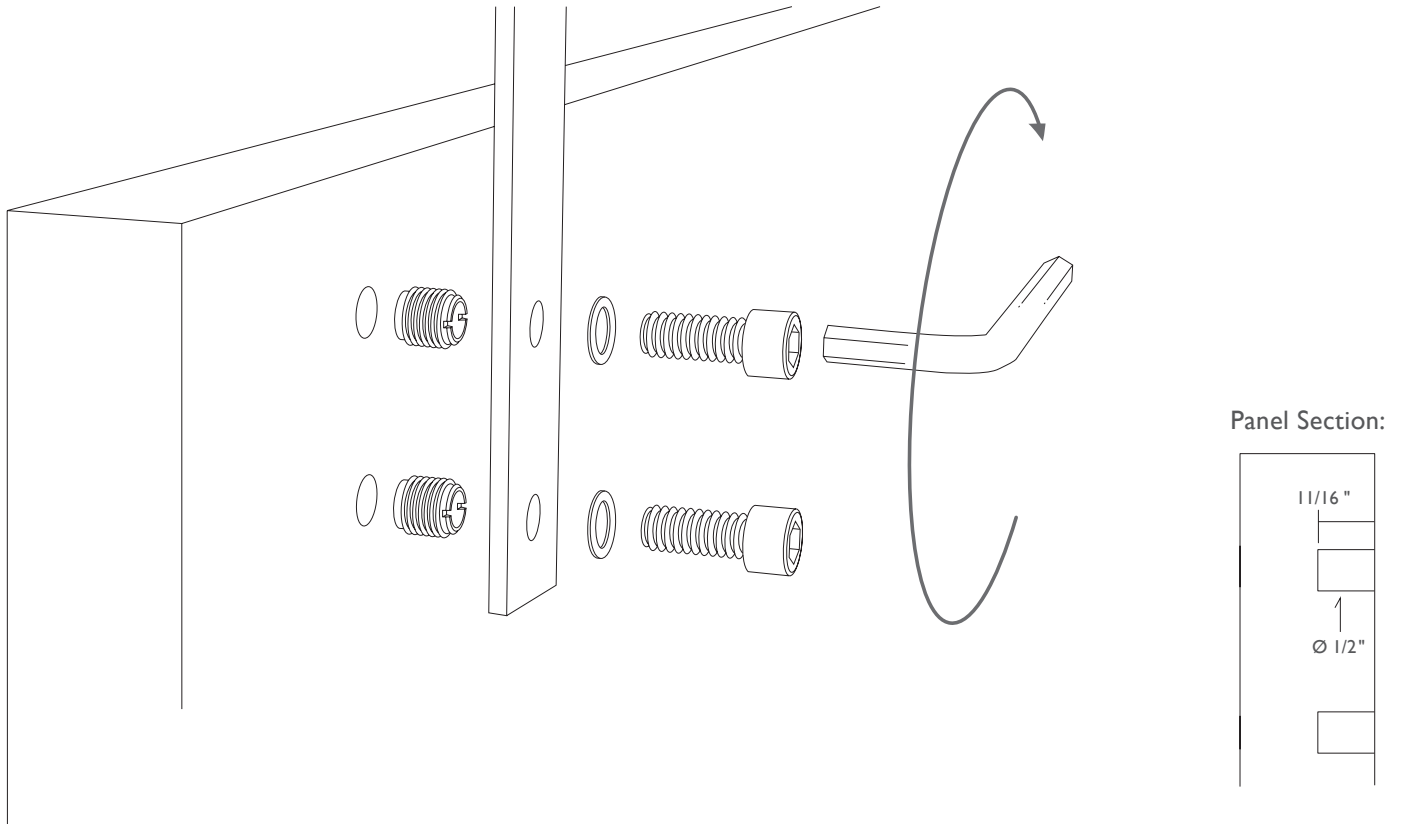

- ① Drill door panel according to section drawing.\*
- ② Install trolley without tightening fasteners all the way.
- ③ Carefully hang door panel on track.
- ④ Adjust door panel vertically as needed, reference Inset A.
- ⑤ Tighten all fasteners.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.



\* Refer to page 7 and 8 for wood panel drill hole locations.

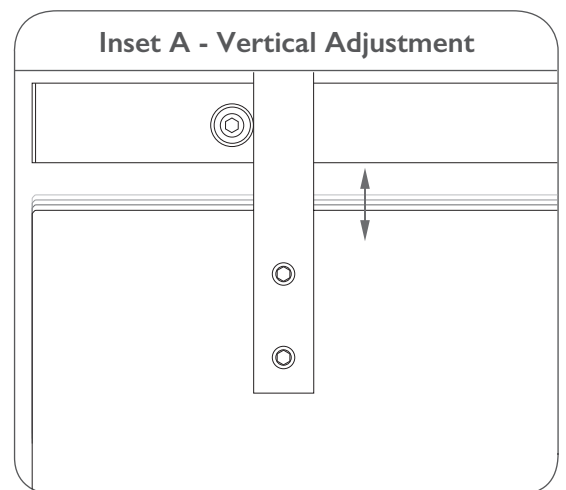

## Routed Bottom Guide Channel

Before proceeding to Final Steps, ensure bottom guide solution is implemented.  
Door must not travel beyond Bottom Guide Post in either closed or open positions.

- ① Confirm that door panel hangs perfectly vertical, and mark position of Bottom Guide Post immediately adjacent to the door opening.
- ② Remove panel from track and fasten Post to floor.
- ③ Carefully re-hang door panel.

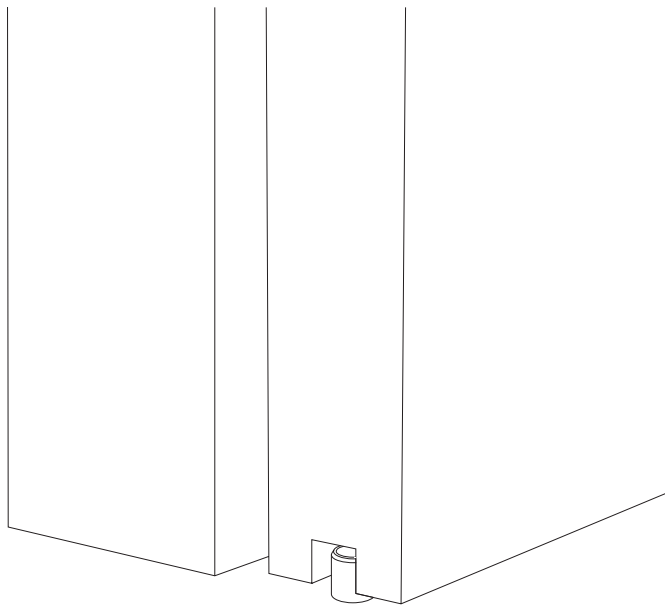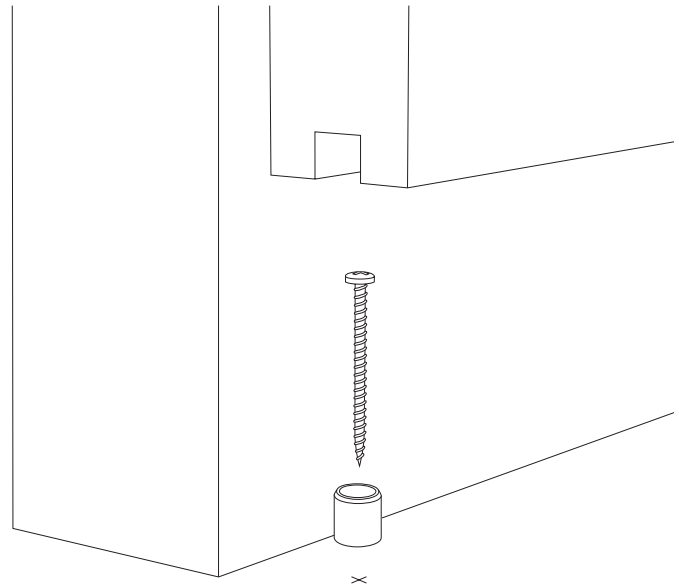




! Verify that the bottom guide post properly engages the door panel in both open and closed positions.

## Optional Bottom Guide Channel\*

Before proceeding to Final Steps ensure bottom guide solution is implemented.  
Door must not travel beyond Bottom Guide Post in either closed or open positions.

- ① Attach Bottom Guide Channel to bottom of door panel.
- ② Ensure that door panel hangs perfectly vertical, and mark position of Bottom Guide Post immediately adjacent to the door opening.
- ③ Remove panel from track and fasten Post to floor.
- ④ Carefully re-hang door panel.


\* Sold separately, for wood doors only.

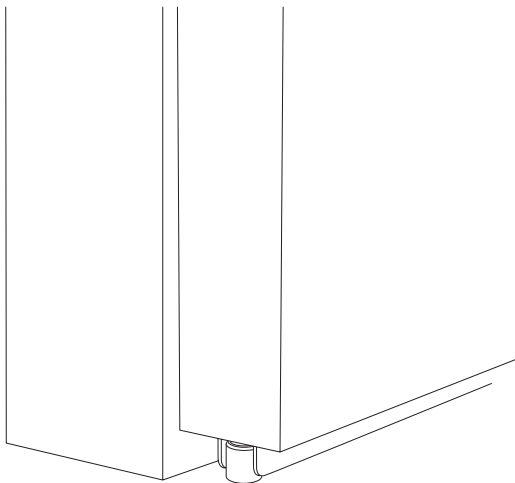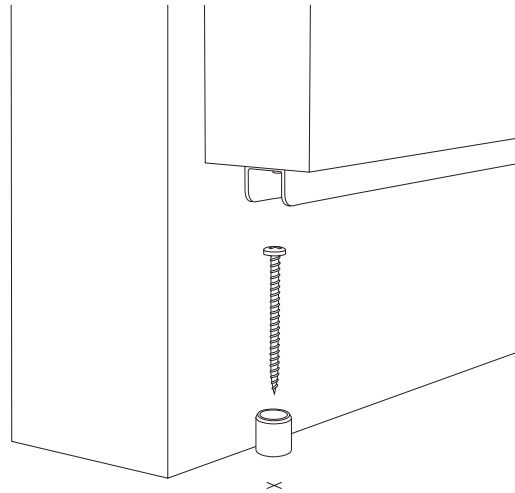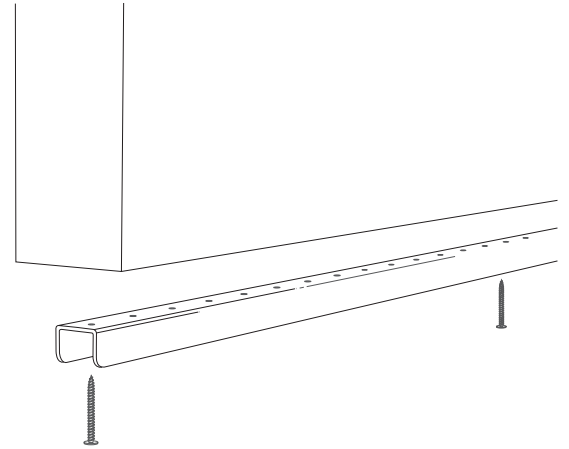

# GLASS PANEL SPECIFICATIONS

## Drill hole locations and size


For standard systems and most custom single door opening systems.

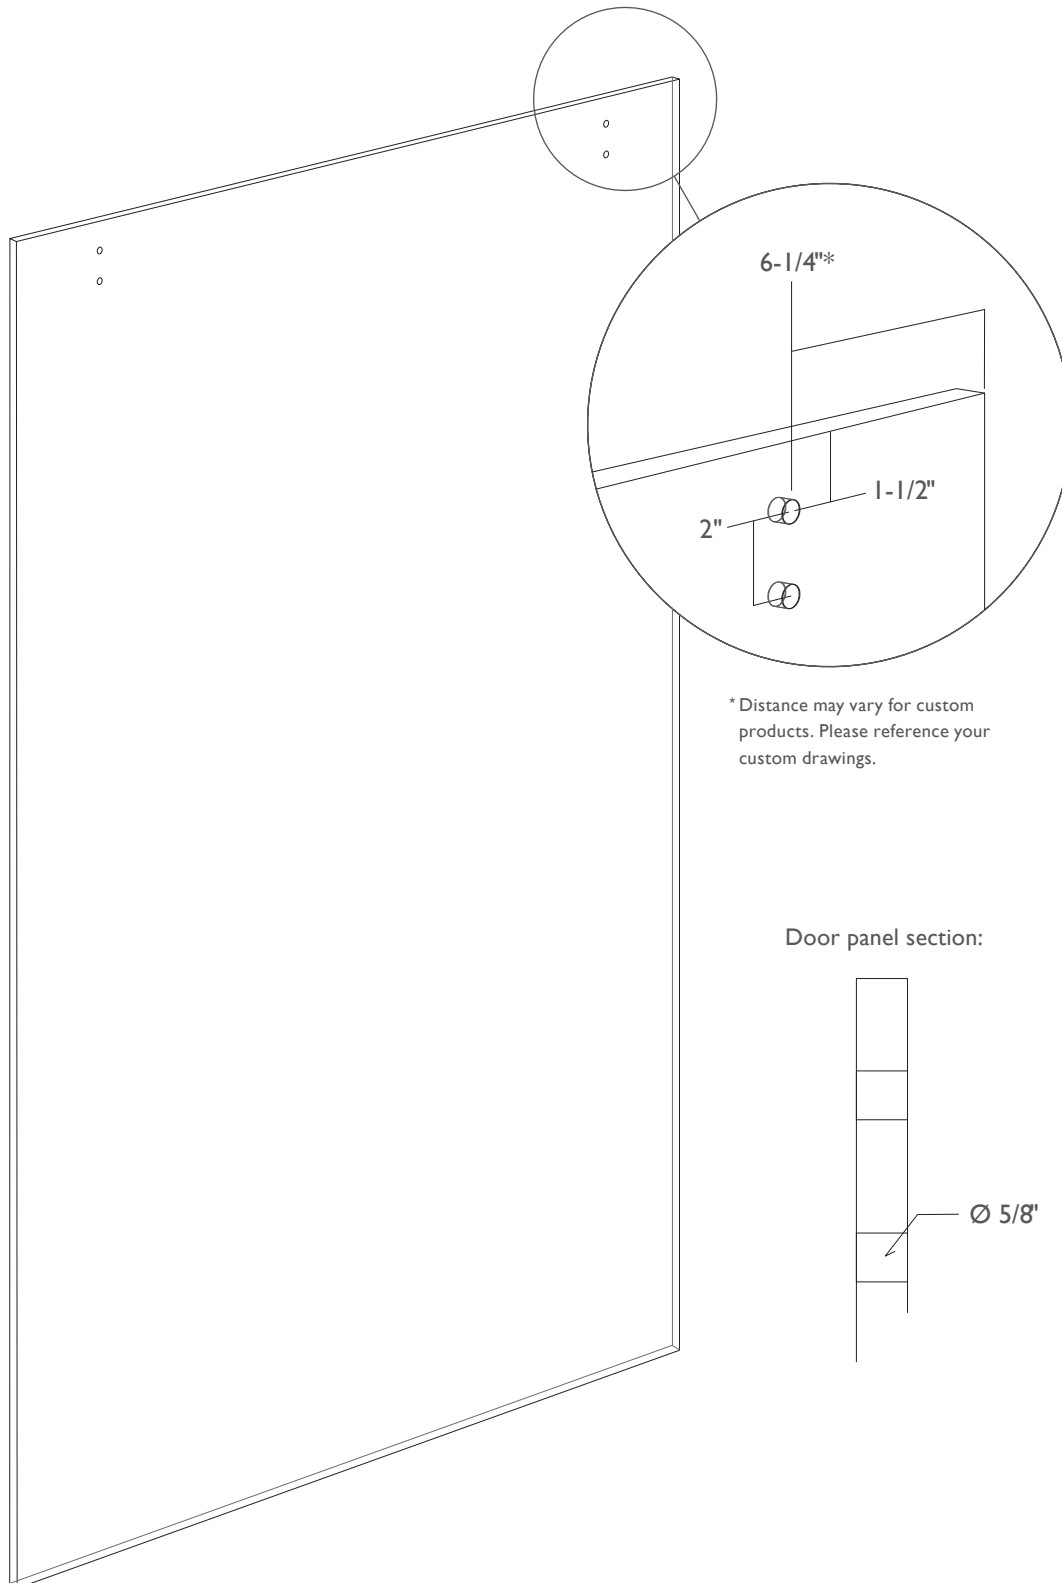

# TROLLEY INSTALLATION

## Glass and resin panels\*


Maximum panel thickness is 3/4"

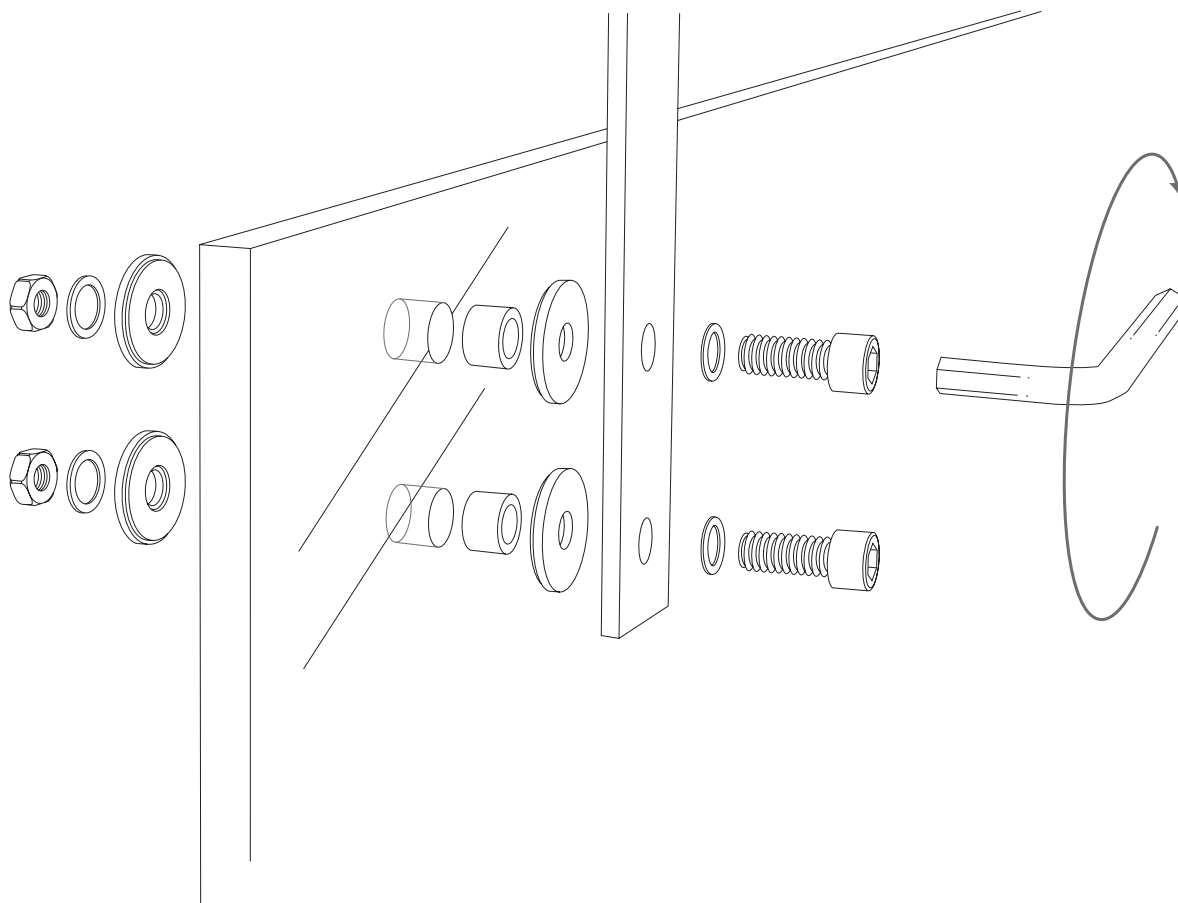

- ① Insert rubber bushings into holes in door panel.
- ② Install trolleys with rubber side of washer facing door panel.  
Use 1-1/4" fasteners for door panels 3/8" to 1/2" thick.  
Use 1-1/2" fasteners for door panels 9/16" to 3/4" thick.
- ③ Carefully hang door panel on track.
- ④ Adjust door panel vertically as needed, reference Inset A.
- ⑤ Tighten all fasteners.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

\* Refer to page 14 for glass panel drill hole locations.

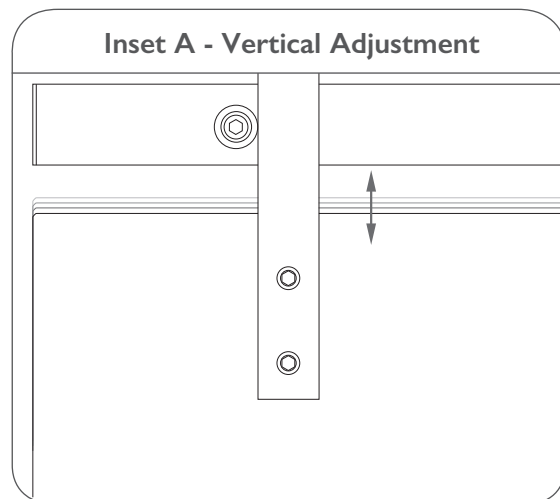




## Bottom Guide Glass

Before proceeding to Final Steps ensure bottom guide solution is implemented.  
Door must not travel beyond Bottom Guide in either closed or open positions.

- ① Ensure that door panel hangs perfectly vertical, and mark position of Bottom Guide immediately adjacent to the door opening.
- ② Size the adjustable Bottom Guide to fit your door panel thickness.
- ⚠ If your door panel is 5/8" or 3/4" thick, you will have received a bottom guide for your specific door panel thickness.
- ③ Remove door panel from track and fasten Bottom Guide to floor with the adjustment plate facing way from the wall.
- ④ Carefully re-hang door panel.

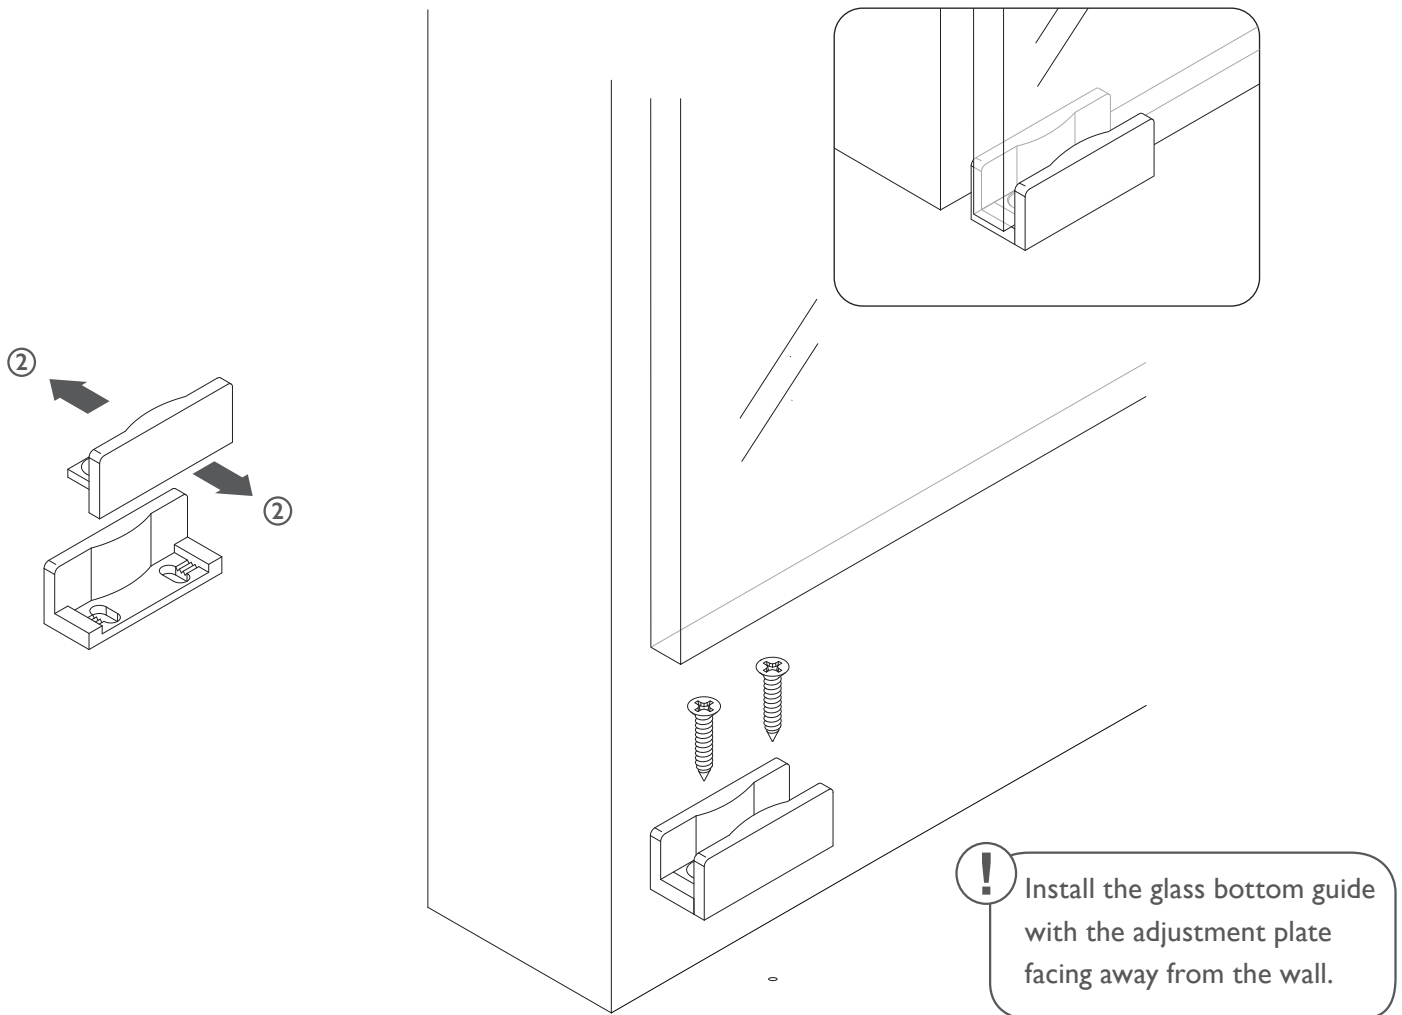


# FINAL STEPS


For all configurations

- ① Thread trolley securing mount into bracket by hand.
- ② Tighten screw with the provided allen wrench.

Face Mount

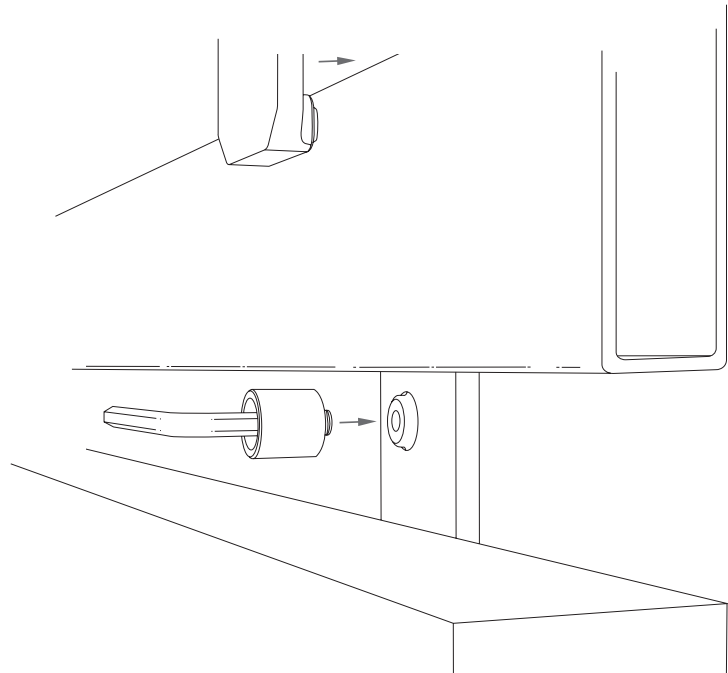

Top Mount

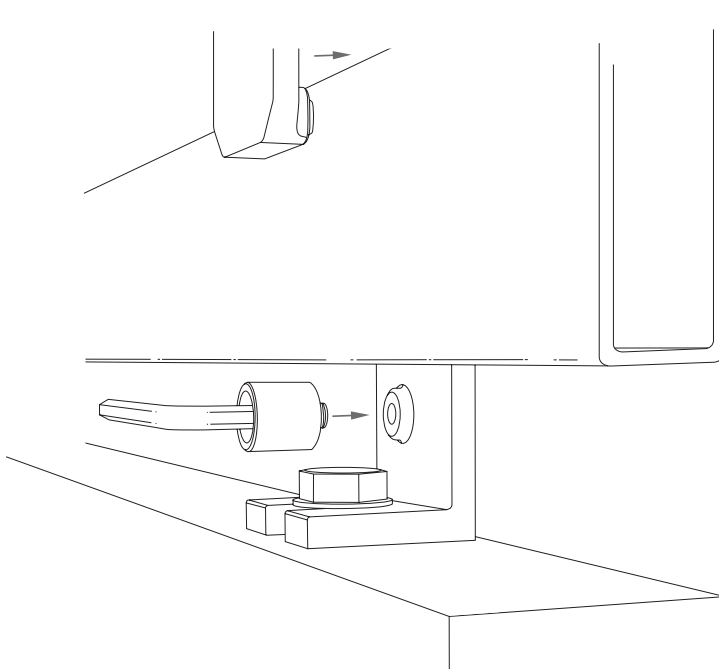

## For all finishes

### Common Parts


Wheels (bearings) should occasionally be lubricated with bearing oil (e.g. SHC 630 Synthetic Gear and Bearing Oil by Exxon Mobil Corp: [www.mobil.com](http://www.mobil.com)).

### Brushed Stainless

To clean any time after installation, use a non-abrasive lint free cloth or sponge and household glass cleaner. (Remember to test an inconspicuous area prior to cleaning hardware.)  
Do not use steel wool, or a Scotch Brite pad, as it can scratch the product.

### Black Stainless

To enhance the depth and shine of the finish, periodically apply a thin coating of petroleum jelly with a clean cloth, buff clean and dry. Do not use steel wool, or a Scotch Brite pad, as it can scratch the product.

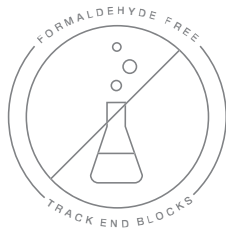

All of our packaging materials are recyclable.  
Please help us conserve precious resources by disposing of our  
packaging to the best of your abilities.