
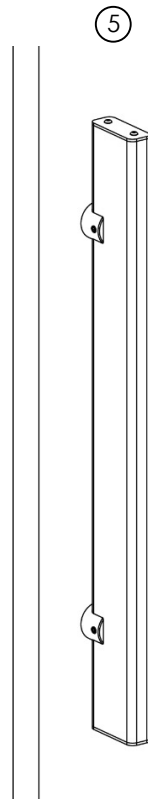
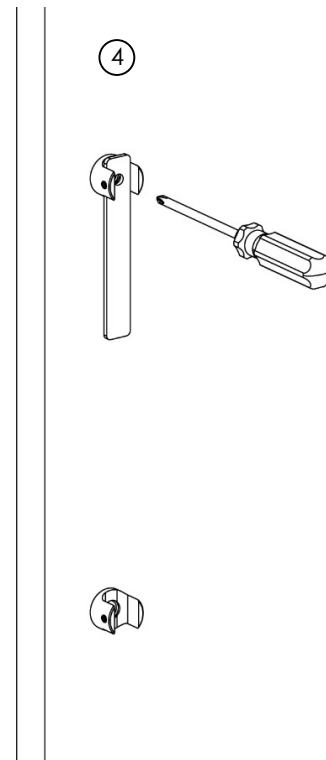
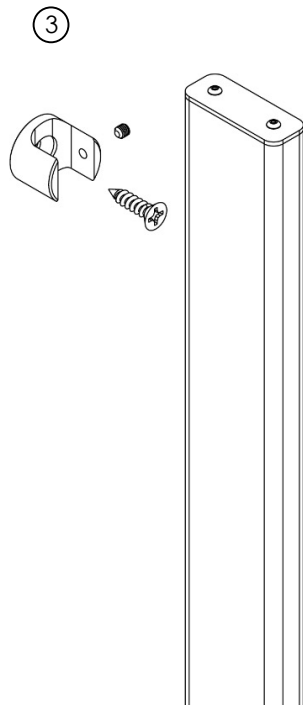


WOOD PANEL | SINGLE-SIDED | FLUSH-MOUNT




- (!) If door pull is cut to length on site, reinstall the End Caps.
- ① Determine door mounting point locations that satisfy the following requirements:
 - The span between mounting points is no greater than 36".
 - The end of the Door Pull extends 3" to 10" beyond the end mounting point.
 - The mounting points are located within the Door Style, i.e., into solid wood.
 - ② Drill the door panel at each mounting point as shown.
 - ③ Install each Door Pull Mount as shown using provided fastener. Do not tighten to allow for easy Door Pull alignment in the following step.
 - ④ Fully tighten Door Pull Mounts in a vertical position using provided Alignment tool.
 - ⑤ Install Door Pull at desired height by tightening the set screws up to 30 inch-lbs. (2.5 ft-lbs.)

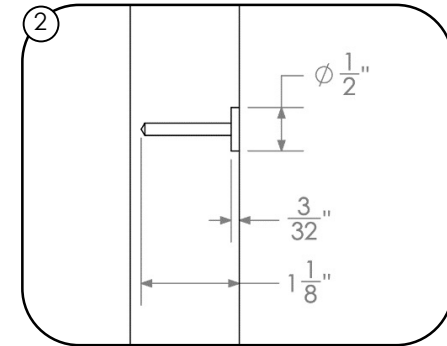

INGER INSTALLATION INSTRUCTIONS


WOOD PANEL | DOUBLE-SIDED | FLUSH-MOUNT

- (!) If door pull is cut to length on site, reinstall the End Caps.
- Determine door mounting point locations that satisfy the following requirements:
 - The span between mounting points is no greater than 36".
 - The end of the Door Pull extends 3" to 10" beyond the end mounting point.
 - The mounting points are located within the Door Style, i.e., into solid wood.
 - Drill the door panel at each mounting point as shown.
 - Install each Door Pull Mount as shown using the correct length screw for your door panel thickness. Do not tighten to allow for easy Door Pull alignment in the following steps.
 - Install Door Pull on A-side at desired height by tightening the set screws.
 - Softly tighten Door Pull Mounts to 30 inch-lbs. (2.5 ft-lbs.) in a vertical position using provided Alignment tool.
 - Install Door Pull on B-side at desired height by tightening the set screws up to 30 inch-lbs. (2.5 ft-lbs.)

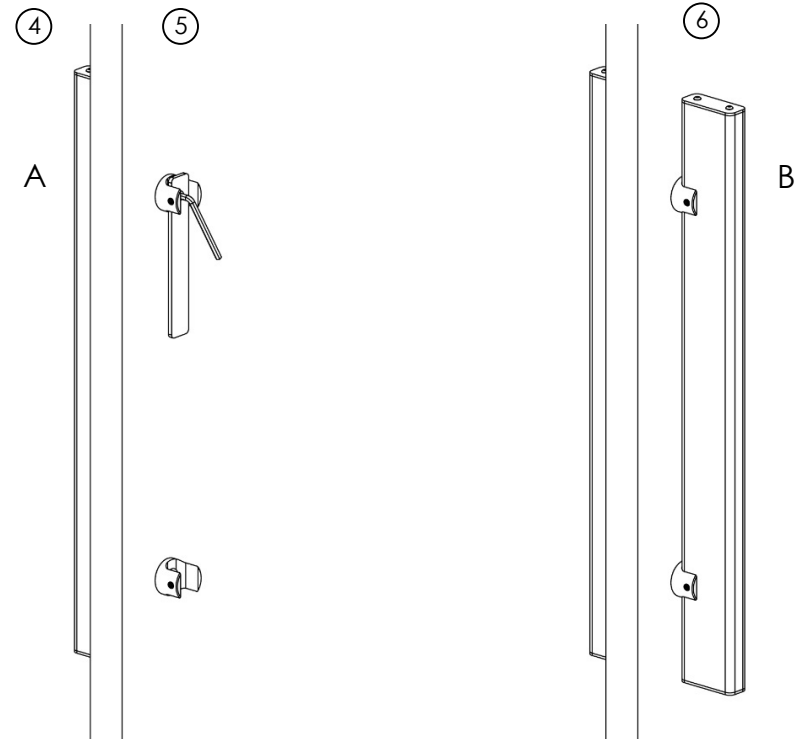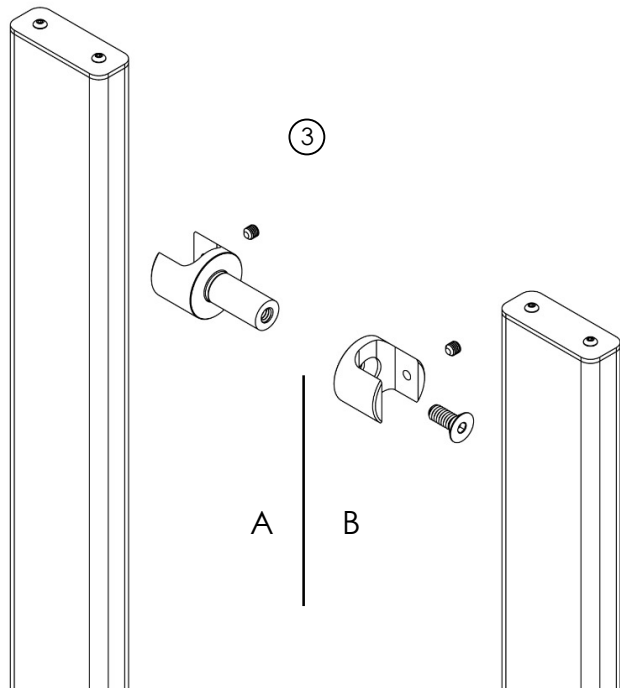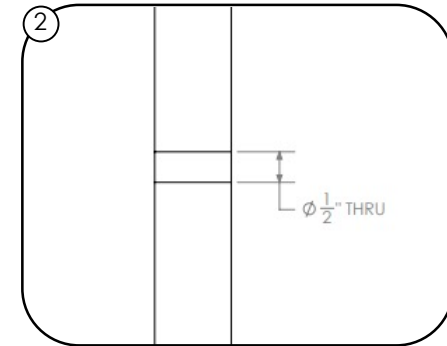

GLASS PANEL | SINGLE-SIDED | FLUSH-MOUNT

- (!) If door pull is cut to length on site, reinstall the End Caps.
- ① Reference the Inger Product Specifications document to confirm glass hole specifications.
- ② Install each Door Pull Mount as shown using the correct length screw for your glass panel thickness. Do not tighten to allow for easy Door Pull alignment in the following step.
 - (!) Insert the provided bushings inside each glass hole location of the glass panel.
 - (!!) Ensure that the provided gaskets are up against the glass at each mounting point.
- ③ Softly tighten Door Pull Mounts to 30 inch-lbs. (2.5 ft-lbs.) in a vertical position using provided Alignment tool.
- ④ Install Door Pull at desired height by tightening the set screws up to 30 inch-lbs. (2.5 ft-lbs.)

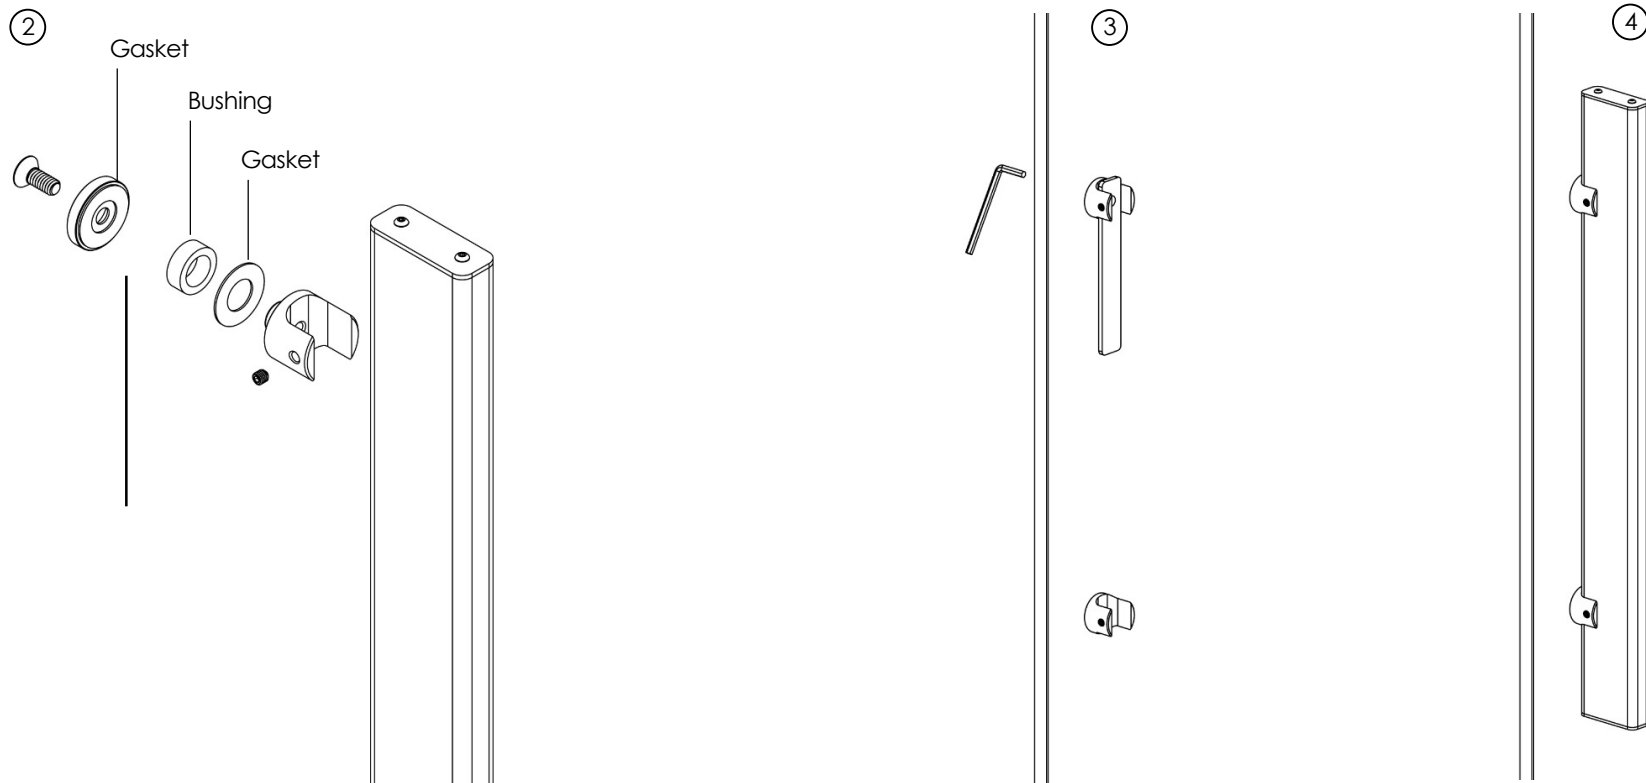

GLASS PANEL | DOUBLE-SIDED | FLUSH-MOUNT

- (!) If door pull is cut to length on site, reinstall the End Caps.
- ① Reference the Inger Product Specifications document to confirm glass hole specifications.
 - ② Install each Door Pull Mount as shown using the correct length screw for your glass panel thickness. Do not tighten to allow for easy Door Pull alignment in the following step.
 (!) Insert the provided bushings inside each glass hole location of the glass panel.
 (!!)
 - ③ Install Door Pull on A-side at desired height by tightening the set screws.
 - ④ Softly tighten Door Pull Mounts to 30 inch-lbs. (2.5 ft-lbs.) in a vertical position using provided Alignment tool.
 - ⑤ Install Door Pull on B-side at desired height by tightening the set screws up to 30 inch-lbs. (2.5 ft-lbs.)

