

PDX - ORE

Sliding Barn Door Hardware
Installation Instructions
Baldur and Oden

INSTALLATION INSTRUCTIONS



Structural Information

For standard systems and most custom single door opening systems.



General Overview


▶ All Krown Lab sliding barn door hardware systems require the provided track fasteners be properly engaged in 3" of structural material. The wall or structure where your system will be mounted must be designed to support the weight specified for the system. See chart below.

| System | Panel weight limit |
|--------|--------------------|
| Baldur | 300 lbs - 400 lbs* |
| Oden | 300 lbs - 400 lbs* |

*For details see page 8

- ► Ensure that door panels are constructed with solid, structural material at the location of trolley attachments, bottom guide, and door pull(s) if used.
- ► Check with your contractor and/or local listings to confirm accordance with local building codes.
- ► For best results, and to ensure full compliance with local building codes and standards, seek qualified building professionals with a comprehensive understanding of relevant material properties and full building and site conditions.
- ▶ Refer to our Product Guide for product technical drawings and material care. Please review our Terms and Conditions before installing.

For standard systems and most custom single door opening systems.

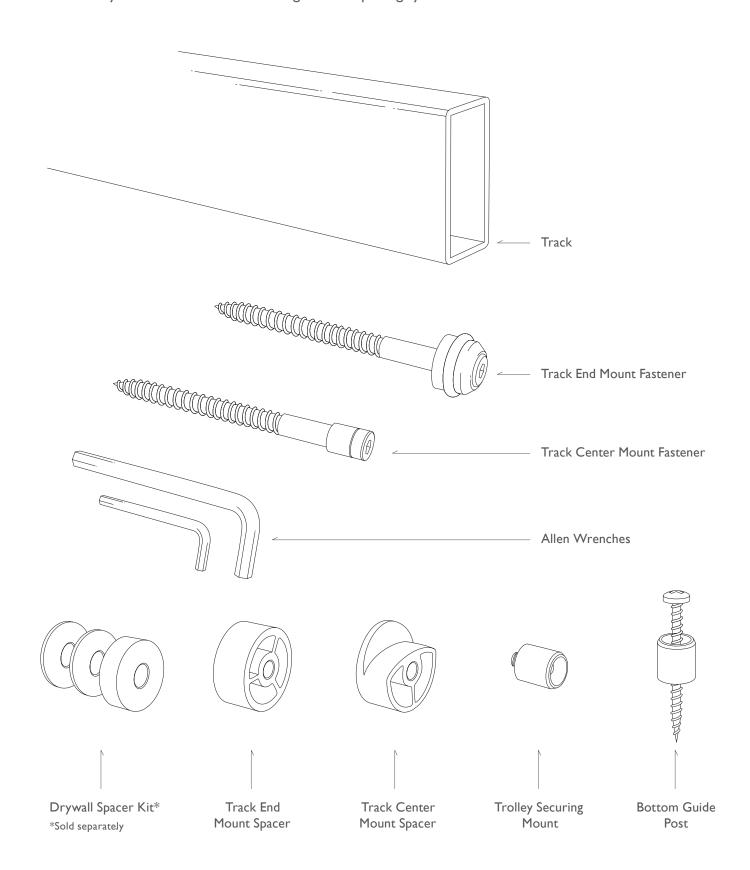


TRACK INSTALLATION



Determine track height

For standard systems and most custom single door opening systems.

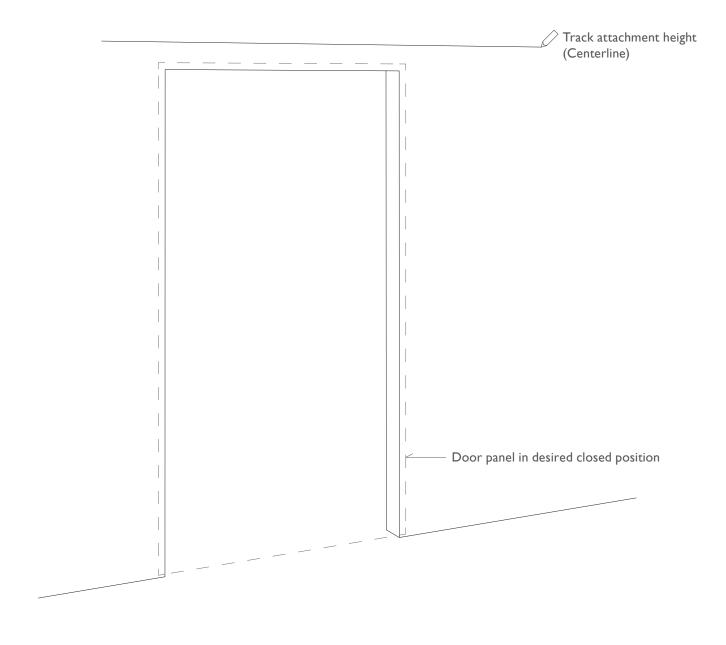

① Determine the height of the track:

TOP MOUNT + FACE MOUNT: HEIGHT = DOOR PANEL HEIGHT + 2-1/2"


Add 3/4" to this dimension if you are using the optional bottom guide channel.

GLASS MOUNT: HEIGHT = DOOR PANEL HEIGHT + 2-3/4"

This will result in a 1/4" clearance between your door panel and floor. Adjust if desired or necessary.

Locate attachment points

Standard 70" track shown below.

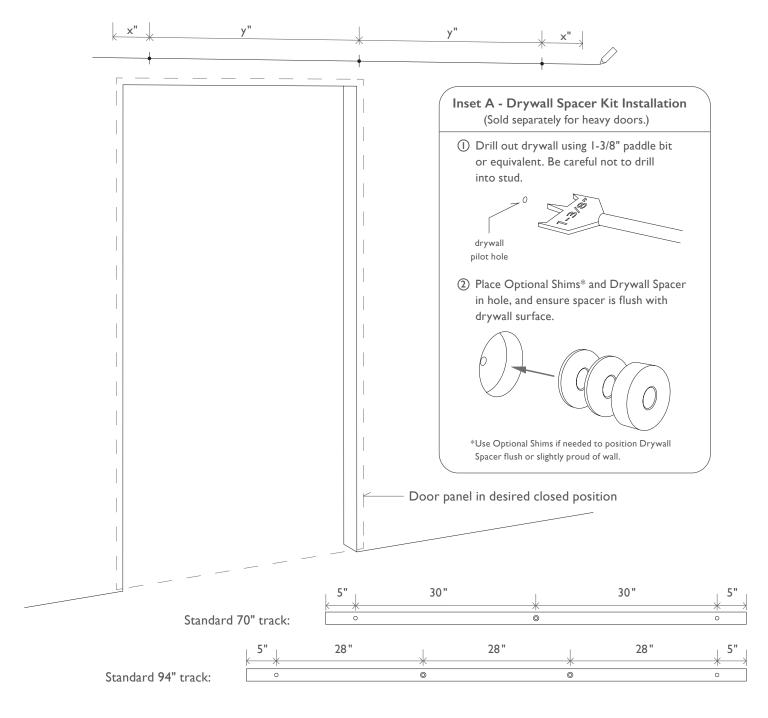


- ① Measure and mark locations for all track attachment points, referencing the applicable track drawings above. For custom length tracks reference your approved custom drawing.
- 2 Drill small pilot hole in marked locations.
- 3 If installing Drywall Spacer Kits reference Inset A.
- 4 Drill full size pilot holes for track fasteners in pre-drilled locations.


TRACK INSTALLATION

Mount track to wall



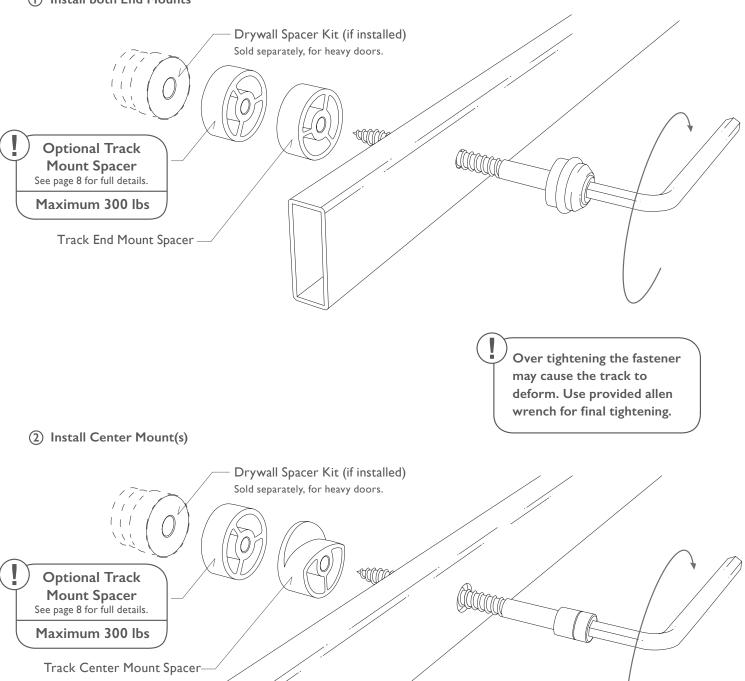

Finish track installation

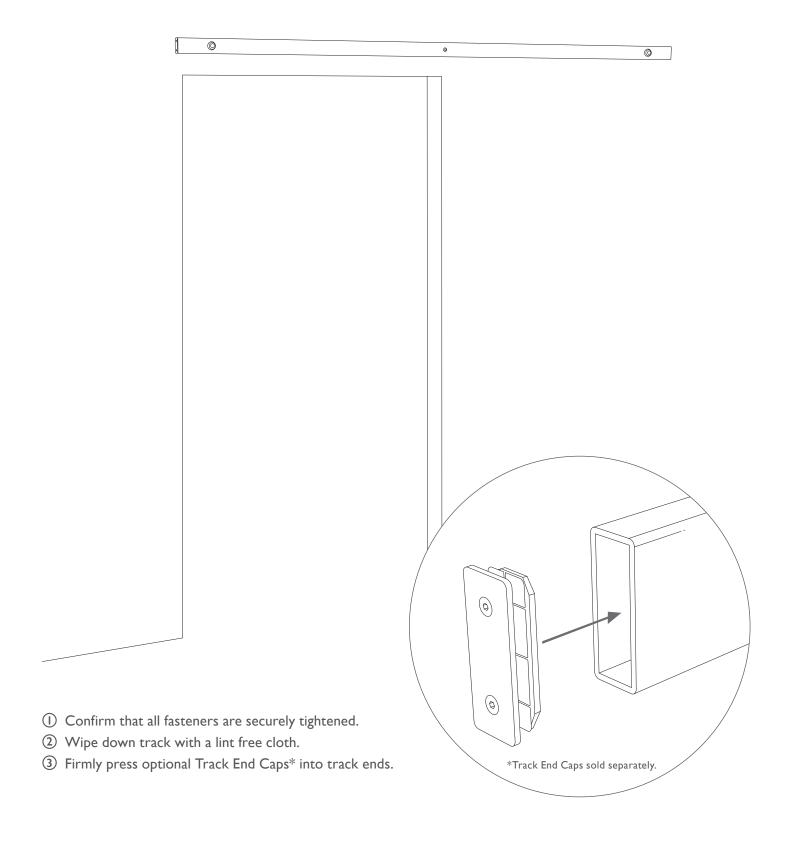


WOOD PANEL SPECIFICATIONS & KROWNLAB

Drill hole locations

For standard systems and most custom single door opening systems.

► For Glass panels see page 14

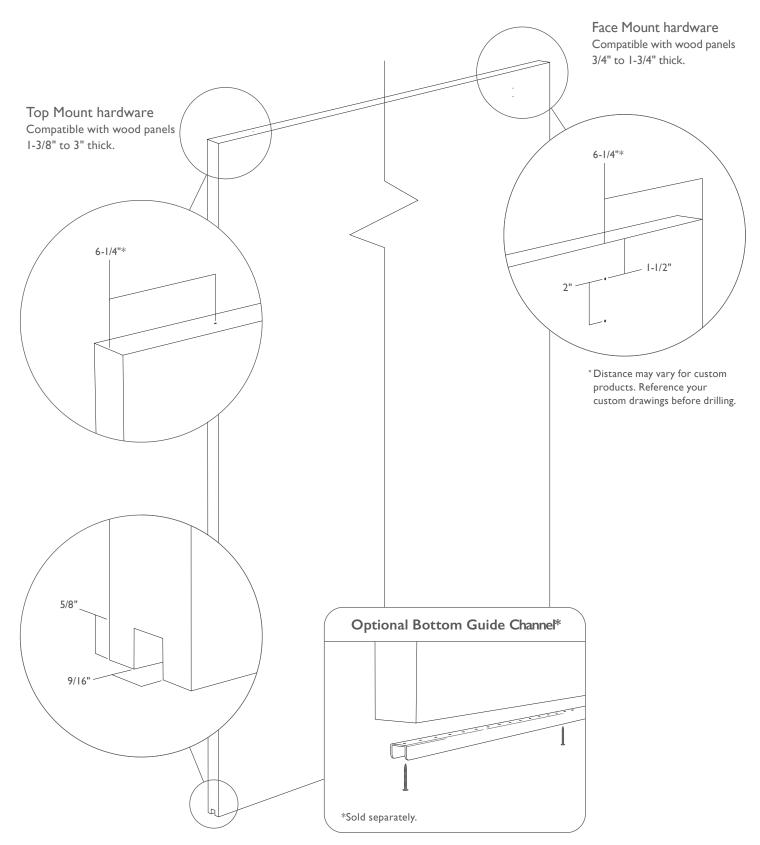

Trolley fastener locations + Panel weight limits


Top Mount weight limits Maximum 400 lbs Maximum 300 lbs Single Track -Double Track **Mount Spacers Mount Spacers** Use Optional Track Mount Spacer to achieve additional panel clearance from wall. 0 0 1-5/8" Locate Trolley Fastener to bias panel closer or further away from wall. Face Mount and Glass weight limits Maximum 400 lbs Maximum 300 lbs Single Track Double Track Mount Spacers Mount Spacers 0 (0) Use Optional Track Mount Spacer to achieve additional panel clearance from wall. 0 (0) 1-3/8"

DOOR INSERT INSTALLATION

Heavy Duty Door Insert


For Top Mounted door panels above 100 lbs



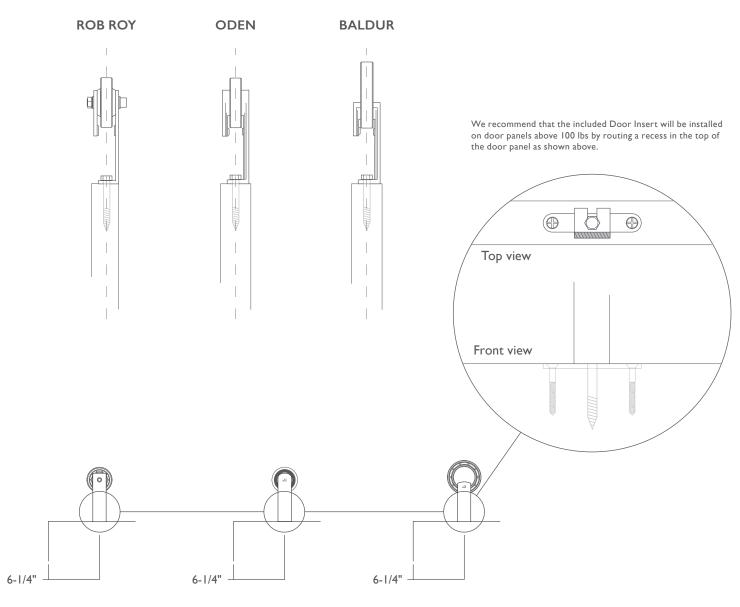

(For custom track configurations, refer to custom drawings)


Top Mounted wood panels

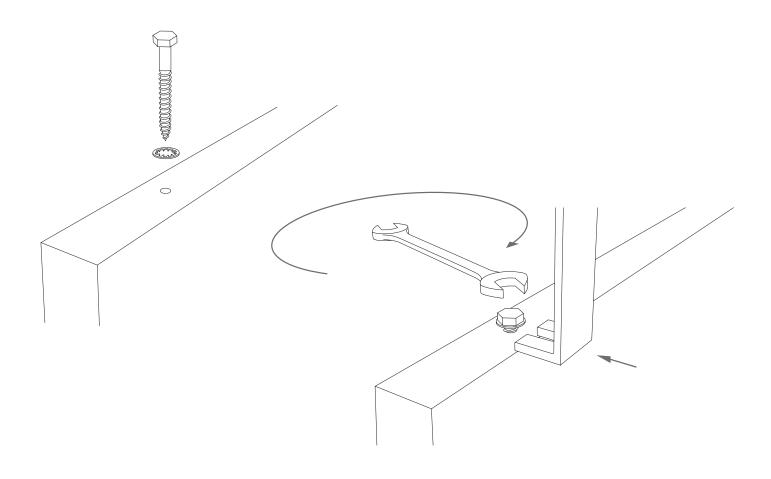

- ① Drill pilot hole for trolley fastener.*
- ② Partially install fastener.
- 3 Slide trolley into place as shown.
- 4 Confirm that the trolley is installed parallel with the door face for smooth operation.
- (5) Adjust trolley as needed, reference Inset A. Tighten fastener.
- 6 Carefully hang door panel on track.


Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

* Refer to page 7 and 8 for wood panel drill hole locations.

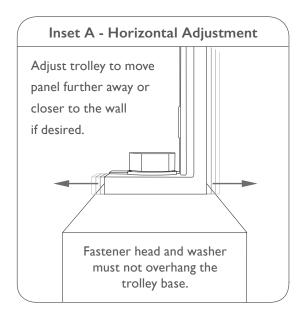

Face Mounted wood panels

Maximum panel thickness is 1-3/4"

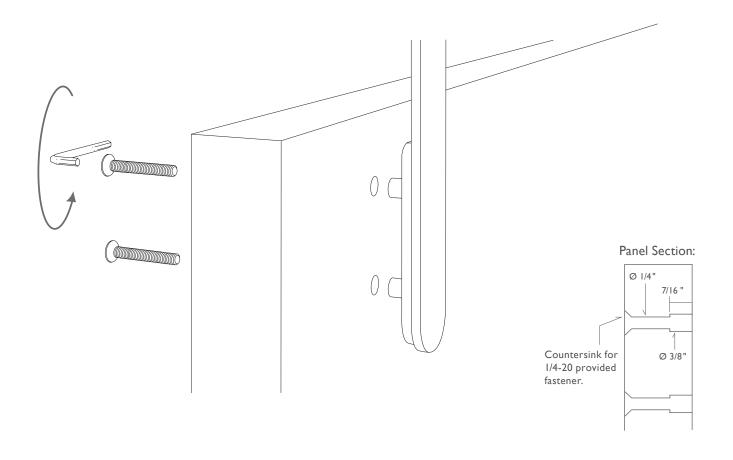


- ① Drill door panel according to section drawing.*
- ② Install trolley without tightening fasteners all the way.

 Use I" fasteners for door panels from 3/4" to I-I/8."

 Use I-I/2" fasteners for door panels from I-I/8" to I-I/2."

 Use I-3/4" fasteners for door panels from I-I/2" to I-3/4."
- 3 Carefully hang door panel on track.
- 4 Adjust door panel vertically as needed, reference Inset A.
- 5 Tighten all fasteners.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

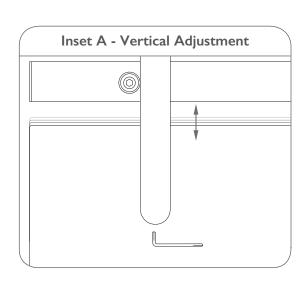

^{*} Refer to page 7 and 8 for wood panel drill hole locations.


WOOD PANEL INSTALLATION



Routed Bottom Guide Channel

Before proceeding to Final Steps, ensure bottom guide solution is implemented. Door must not travel beyond Bottom Guide Post in either closed or open positions.

- ① Confirm that door panel hangs perfectly vertical, and mark position of Bottom Guide Post immediately adjacent to the door opening.
- 2 Remove panel from track and fasten Post to floor.
- 3 Carefully re-hang door panel.

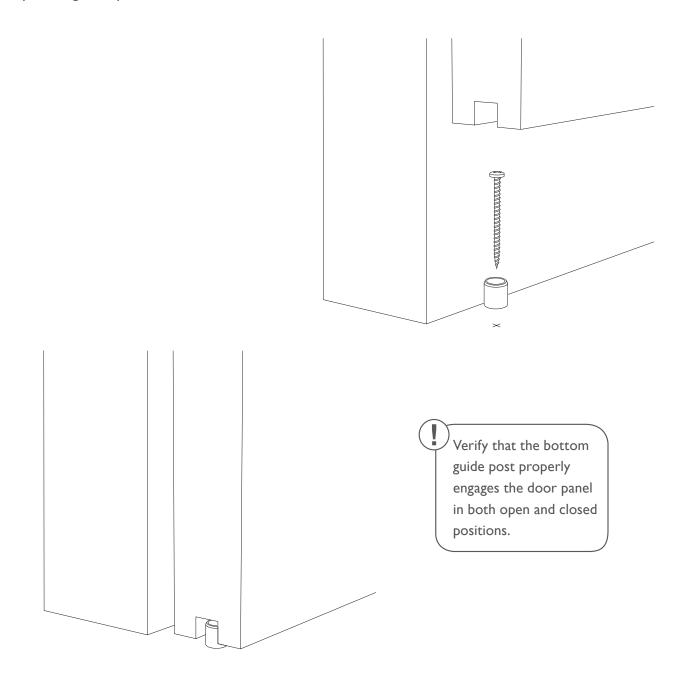


WOOD PANEL INSTALLATION





Optional Bottom Guide Channel*

Before proceeding to Final Steps ensure bottom guide solution is implemented. Door must not travel beyond Bottom Guide Post in either closed or open positions.

- ① Attach Bottom Guide Channel to bottom of door panel.
- ② Ensure that door panel hangs perfectly vertical, and mark position of Bottom Guide Post immediately adjacent to the door opening.
- 3 Remove panel from track and fasten Post to floor.
- 4 Carefully re-hang door panel.
 - * Sold separately, for wood doors only.

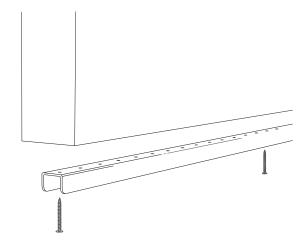

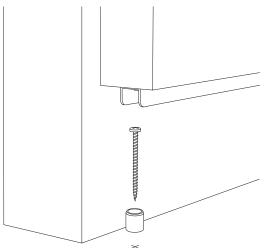


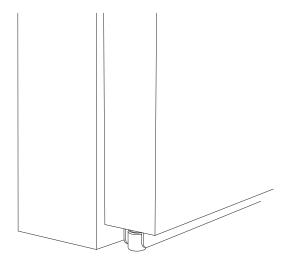

GLASS PANEL SPECIFICATIONS & KROWNLAB


Drill hole locations and size

For standard systems and most custom single door opening systems.

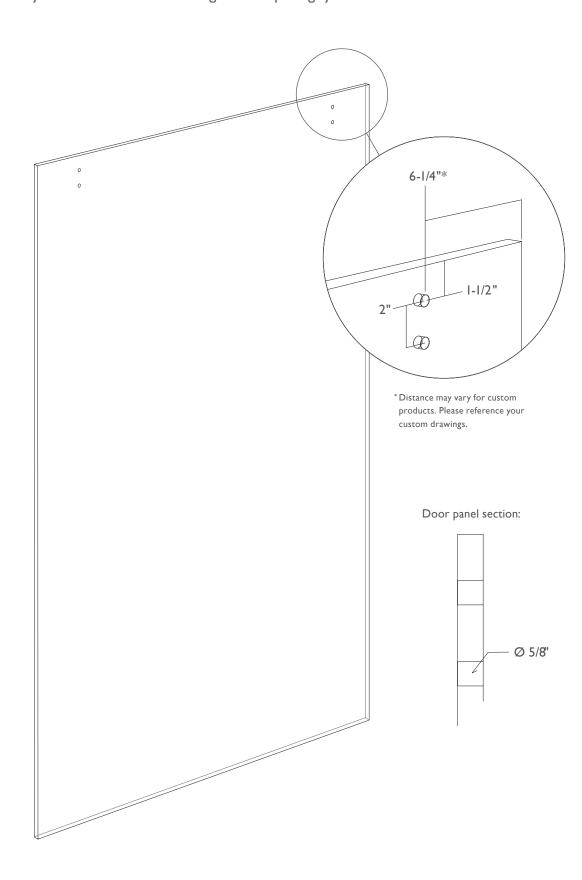

Glass and resin panels*

Maximum panel thickness is 3/4"

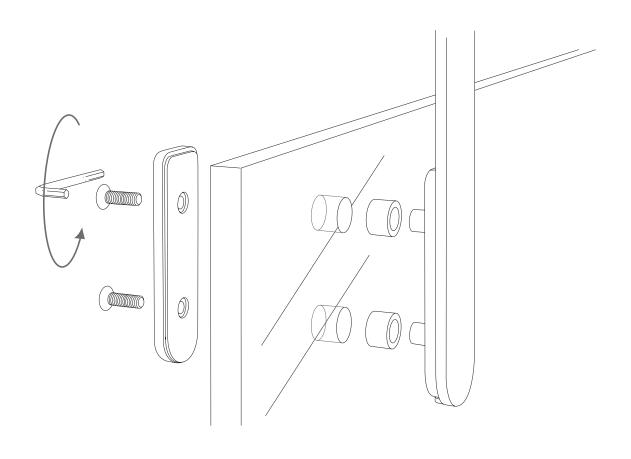

- ① Press rubber bushings onto trolley bosses.
- 2 Install trolleys, with rubber side of washer plate facing door panel, without tightening fasteners all the way.


Use 3/4" fasteners for door panels 3/8" to 1/2" thick.

Use I" fasteners for door panels 9/16" to 3/4" thick.

- 3 Carefully hang door panel on track.
- 4 Adjust door panel vertically as needed, reference Inset A.
- 5 Tighten all fasteners.

Bearings may initially make a slight ticking noise until the lubricant is evenly distributed.

* Refer to page 14 for glass panel drill hole specifications.

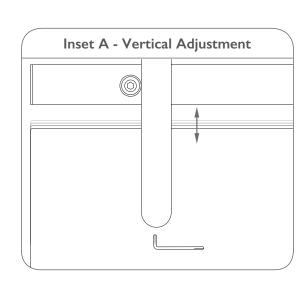


GLASS PANEL INSTALLATION

₩ KROWNLAB°

Bottom Guide Glass

Before proceeding to Final Steps ensure bottom guide solution is implemented. Door must not travel beyond Bottom Guide in either closed or open positions.


- ① Ensure that door panel hangs perfectly vertical, and mark position of Bottom Guide immediately adjacent to the door opening.
- ② Remove adjustment cover from the underside of Bottom Guide.
- 3 Position adjustment plate to fit your door panel thickness, and reattach the adjustment cover.
- If your door panel is 5/8" or 3/4" thick, you will have received a bottom guide for your specific door panel thickness.
- Remove door panel from track and fasten Bottom Guide to floor with the adjustment plate facing way from the wall.
- (5) Carefully re-hang door panel.

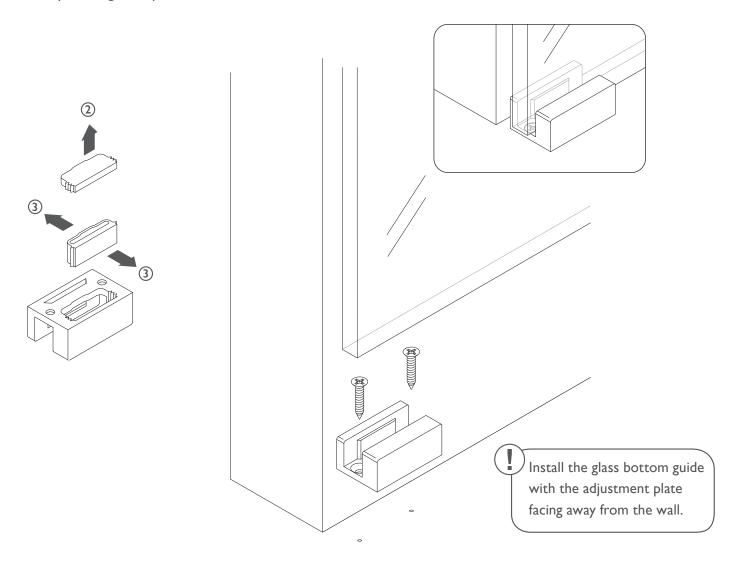


For all configurations

- ① Thread trolley securing mount into bracket by hand.
- 2 Tighten screw with the provided allen wrench.

Face Mount

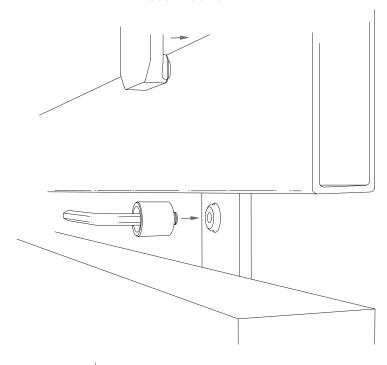

Top Mount

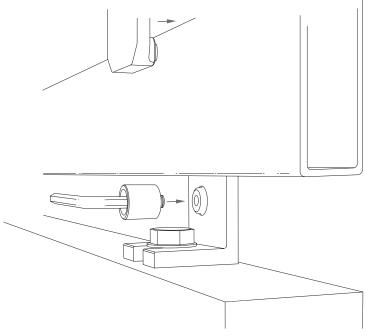

PRODUCT MAINTENANCE



For all finishes

Common Parts

Wheels (bearings) should occasionally be lubricated with bearing oil (e.g. SHC 630 Synthetic Gear and Bearing Oil by Exxon Mobil Corp: www.mobil.com).

Brushed Stainless

To clean any time after installation, use a non-abrasive lint free cloth or sponge and household glass cleaner. (Remember to test an inconspicuous area prior to cleaning hardware.)

Do not use steel wool, or a Scotch Brite pad, as it can scratch the product.

Black Stainless

To enhance the depth and shine of the finish, periodically apply a thin coating of petroleum jelly with a clean cloth, buff clean and dry. Do not use steel wool, or a Scotch Brite pad, as it can scratch the product.

Polished Stainless

To clean any time after installation, gently wipe down with a clean non-abrasive, lint-free cloth. Stainless steel cleaner (spray) or water can also be used to dampen cloth. Do not let any polished surface come into contact with abrasive materials as the finish can scratch.



All of our packaging materials are recyclable.

Please help us conserve precious resources by disposing of our packaging to the best of your abilities.